

## FOR MODELS WITH LED TURN SIGNALS ONLY


DETACH THE CONNECTORS OF RESISTORS CIRCLED IN RED FROM EACH HEADLIGHT AS SHOWN IN THE IMAGE ON THE RIGHT.



### STEP 1

LOCATE PROVIDED DRL HARNESS IN BAG

REMOVE THE HEADLIGHT SIDE OF THE DRL HARNESS FROM BAG. ROUTE HARNESS ON VEHICLE SHORT SIDE ( C ) GOES TO PASSENGER SIDE HEADLIGHT AND LONG SIDE ( D ) GOES TO DRIVER SIDE HEADLIGHT. ( B ) WILL CONNECT TO BATTERY SIDE OF DRL HARNESS


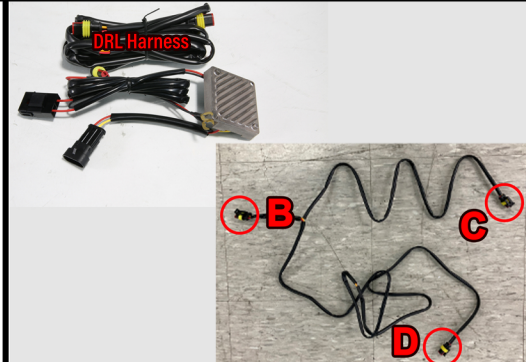


### STEP 2

CONNECT DRL HARNESS TO BOTH HEADLIGHTS AS FOLLOWING. CONNECT CONNECTOR ( C ) OF DRL HARNESS TO CONNECTOR ( F ) ON PASSENGER SIDE HEADLIGHT. CONNECT CONNECTOR ( D ) OF DRL HARNESS TO CONNECTOR ( E ) ON DRIVER SIDE HEADLIGHT.

### STEP 3

REMOVE BATTERY SIDE OF DRL HARNESS FROM BAG. CONNECT CONNECTOR ( A ) OF BATTERY SIDE HARNESS TO CONNECTOR ( B ) ON HEADLIGHT SIDE OF DRL HARNESS.

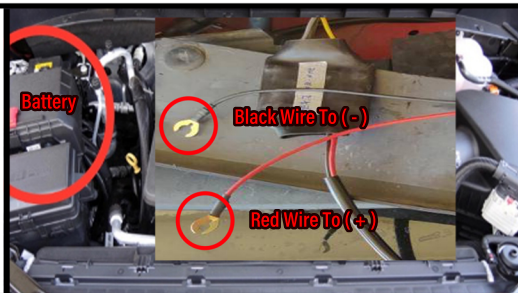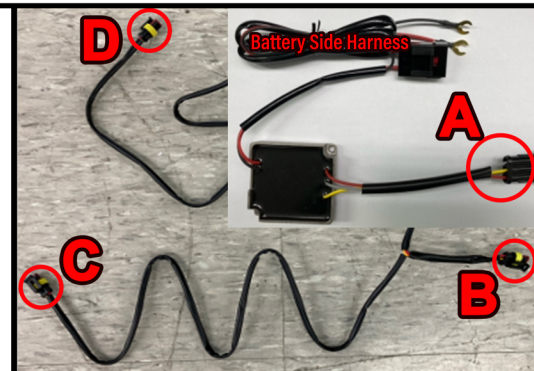

### STEP 4

CONNECT FORK SPADE CONNECTORS ON BATTERY SIDE OF DRL HARNESS TO BATTERY. RED WIRE TO POSITIVE(+) OF BATTERY. BLACK WIRE TO NEGATIVE(-) OF BATTERY.

### STEP 5

USE PROVIDED ZIP TIES IN BACK TO ROUTE DRL HARNESS ALONG RADIATOR SUPPORT. TEST ALL FUNCTIONS OF HEADLIGHT BEFORE DRIVING.

