


Installation

1. Use the vacuum sensor's mounting holes to mount the sensor in a convenient location.
2. There are two ports on the vacuum sensor. One is a 0-15 psi pressure port, and the other is a 0-30 inches of mercury vacuum port. When installing, be careful to connect to the vacuum port and not the pressure port.
3. Use 5/16 I.D. flexible tubing to connect the vacuum sensor to the vehicle.
4. Do not block or cover the pressure port. The pressure port should be left open to the atmosphere.

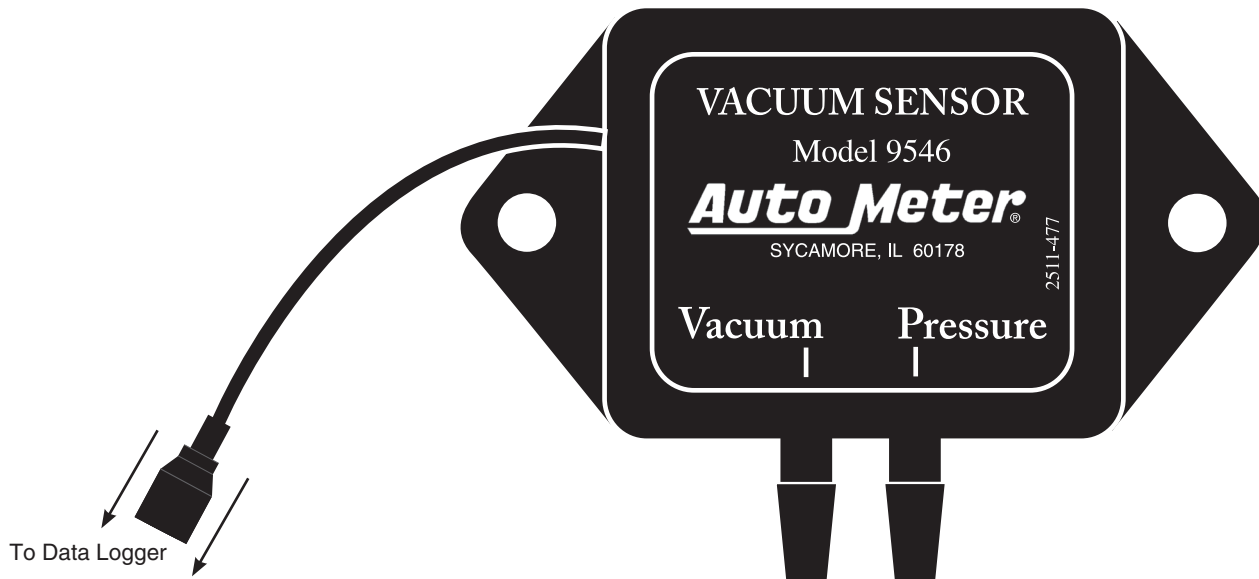

Note: Sensor is not to be used for fuel pressure.

SERVICE

For service send your product to Auto Meter in a well packed shipping carton. Please include a note explaining what the problem is along with your phone number. Please specify when you need the product back. If you need it back immediately mark the outside of the box "RUSH REPAIR," and Auto Meter will service product within two days after receiving it. (\$10.00 charge will be added to the cost of "RUSH REPAIR.") If you are sending product back for Warranty adjustment, you must include a copy (or original) of your sales receipt from the place of purchase.

FOR SERVICE SEND TO: AUTO METER PRODUCTS, INC. 413 W. Elm St., Sycamore, IL 60178 USA (866) 248-6356