
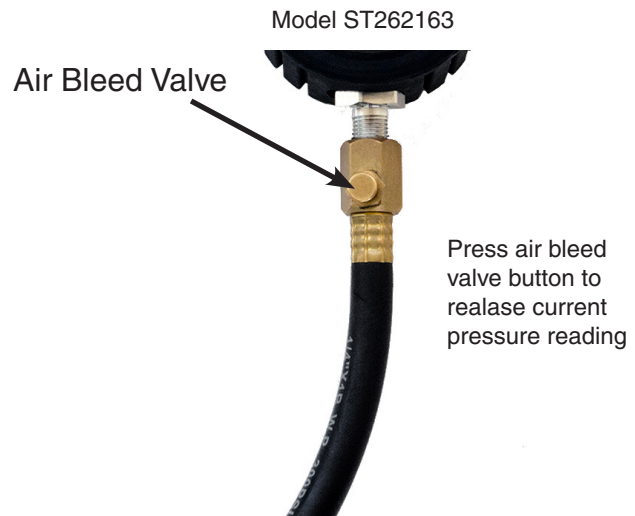


- **Turn On** – Press and release the **On/Off** Button.
- **Turn Off** – Hold the **On/Off** Button for 3 seconds. Display will indicate OFF before powering down.
 - **Auto Off Feature** – If the gauge is inactive for 5 minutes, it will turn itself off to conserve battery power.
- **Switch Unit Type** – Once the gauge is on, press and release the On/Off button to switch between unit types. An indicator arrow on the right of the display will appear next to the currently active unit selection.
- **LCD Backlighting On/Off** – Press the **BACKLIGHT** button to turn on or off the display illumination.
- **Review Peak** – Hold the **BACKLIGHT** button for 3 seconds to review peak pressure reading data. Display will flash value to indicate Peak is currently being displayed. If maximum pressure exceeds 50 PSI, or equivalent in other units, **o.L** will be displayed.
 - **Revert to current pressure reading** – Hold the **BACKLIGHT** button for 3 seconds while the Peak value is shown (display is flashing) to return to current pressure reading (display will cease flashing).
 - **Clear Peak** - Hold the **RESET** button for 3 seconds while the Peak value is shown (display is flashing). Peak value will be cleared and display will indicate zero unit value (display will continue to flash). To revert to current pressure, see above.
- **Zero Calibration** – Hold the **RESET** button for 3 seconds while the display is indicating current pressure to set that reading data point as gauge zero. Display will indicate 88.88 (or alternate unit equivalent) before resetting the currently displayed value to zero. Utilize this feature to adjust gauge zero for variances in atmospheric pressure.

Battery Replacement: To replace the 9V battery that powers your gauge, carefully remove the four Phillips head screws that secure the access door on the rear of the instrument. Utilize a small flat blade screw driver to gently pry the door up and access the battery. If the battery does not slide out easily, turn the instrument over so that the battery access port is facing into the palm of your hand and tap the instrument into your hand to slide the battery free. Use caution not to let the battery hang from the battery wires. Unplug the connector using care not to damage the leads and install the new battery in the reverse order making certain to coil the leads back into the case without pinching them or extreme bends that could damage the wiring.

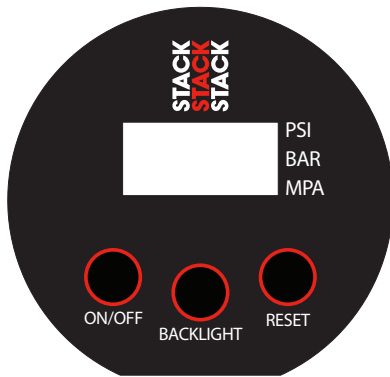

SERVICE

For service send your product to STACK in a well packed shipping carton. Please include a note explaining what the problem is along with your phone number. If you are sending product back for Warranty adjustment, you must include a copy (or original) of your sales receipt from the place of purchase.

12 MONTH LIMITED WARRANTY

STACK, Ltd. warrants to the consumer that all STACK products will be free from defects in material and workmanship for a period of twelve (12) months from date of the original purchase. Products that fail within this 12 month warranty period will be repaired or replaced at STACK's option to the consumer, when it is determined by STACK, Ltd. that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the STACK instruments. In no event shall this warranty exceed the original purchase price of the STACK instruments nor shall STACK, Ltd. be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to STACK must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 12 month warranty period. Breaking the instrument seal, improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. STACK, Ltd. disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by STACK.

FOR SERVICE SEND TO:
 STACK LTD. 413 W. Elm St., Sycamore, IL 60178 USA
 Toll Free: (888) 867-5183
 International: (815) 895-8141
 Email us at sales@stackltd.com
<http://www.stackltd.com>