Please visit www.blueox.com for the latest version of these installation instructions.



BX2413 2015-16 Ram ProMaster 2500 Installation Instructions

Attachment Tab Height: 15-1/2"

Attachment Tab Width: 23"

Serial Number

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

- Blue Ox[®] towing products and accessories are intended to be installed by Blue Ox[®] Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox[®] Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
- Many Blue Ox[®] baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

Bolt Torque Specifications			
Torque in Foot-Pounds for Inch Bolts			

Bolt Size	Grade 5	Grade 8
1/4"	10	14
5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230
3/4"	257	380

Bolt Torque Specifications Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318

A WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

Instruction Notes: The grille, fascia and fascia brace are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.



The BX8869 Tail Light Wiring Kit is recommended for this vehicle.

Drill a hole according to the tail light wiring kit instructions.

NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite[®] Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. DO NOT use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. DO NOT use the baseplate if it is damaged or missing parts.


BX2413 2015-16 Ram ProMaster 2500 Installation Instructions

~


Too	ols Required			
L Phillip	ge Vise Grip Itility Knife os Screwdriver que Wrench Drill			
Lc 3, 1-1/ 81	octite [®] RED /8" Drill Bit /4" Hole Saw MM Socket		13 BREAKAWAY SWITCH	
9/*	MM Socket 16" Socket 16" Wrench T30 Torx Allen Wrench			
		14		3
			4 PIN CONNECTOR	1
			6 PIN CONNECTOR	
Item No		art No.	Description	Qty.
1	6 ⁻	1-5208	Description 3/8" Nut Plate w/ 14" Wire	4
1 2	6 [.]	1-5208 1-7728	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate	4 1
1 2 3	6 ⁻ 6 ⁻ 61	1-5208 1-7728 2-3468	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole	4 1 2
1 2 3 4		1-5208 1-7728 2-3468 02-7599	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket	4 1 2 1
1 2 3 4 5		1-5208 1-7728 2-3468 02-7599 07-2806	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2"	4 2 1 8
1 2 3 4 5 6		1-5208 1-7728 2-3468 02-7599 07-2806 01-0050	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP	4 1 2 1
1 2 3 4 5 6 7		1-5208 1-7728 2-3468 02-7599 07-2806 01-0050 01-0192	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw	
1		1-5208 1-7728 2-3468 02-7599 07-2806 01-0050 01-0192 01-0440	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP	4
1		1-5208 1-7728 2-3468 02-7599 07-2806 01-0050 01-0192 01-0440 01-0564	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 3/8"-16 x 3" Hex Head Bolt, Grade 5, ZP	
1		1-5208	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP	
1	6 6 6 10 10 10 10 10 10 10 10 10 10	1-5208	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 	4 1 2 1 8 2 2 2 2 4 8 2 2 4 8 2 2 8
1	6 6 6 6 10 10 20 20 20 20 20 20 20 20 20 2	1-5208	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" J/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 410-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 3/8"-16 x 3" Hex Head Bolt, Grade 5, ZP 412-14 x 1" Self Drilling Screw, ZP 410-32 Hex Nut 3/8"-16 Hex Nylon Insert Lock Nut, ZP	4 1 2 1 8 2 2 4 4
1	6 6 6 6 10 10 10 20 20 20 20 20 20 20 20 20 2	1-5208	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 	4 1 2 1
1	6 6 6 10 10 10 10 10 10 10 10 10 10	1-5208	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 3/8"-16 x 3" Hex Head Bolt, Grade 5, ZP 3/8"-16 k 3" Hex Head Bolt, Grade 5, ZP 3/8"-16 k Nut 	4 1 2 1 8 2 2 2 4 8 2 2 4 8 2 2 3 2 4 8 2 2 12 2
1	6 6 6 10 10 10 10 10 10 20 20 20 20 20 20 20 20 20 2	1-5208	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 	4 1 2 1 8 2 2 2 4 8 2 2 4 8 2 2 4 8 2 2 12 12 1
1	6 6 6 6 10 10 20 20 20 20 20 20 20 20 20 2	1-5208	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 	4 1 2 1 8 2 2 4 8 2 2 4 8 2 2 8 2
1	6 6 6 6 6 10 10 10 20 20 20 20 20 20 20 20 20 2	1-5208	Description 3/8" Nut Plate w/ 14" Wire BX2413 Baseplate Attachment Tab Assembly with Hole Breakaway Bracket Spacer Tube, 3/4" Dia x 1-1/2" 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 	4 1 2 1 8 2 2 4 8 2 2 2 8 8 2 2 2 8 8 2 2 2 8 8 2 2 2 8 8 2 2 2 8 8 2 2 8 8 2 2 2 8 8 2 2 8 8 2 2 8 8 2 2 8 8 2 2 8 8 2 2 8 8 2 2 8 8 2 2 8 8 2 2 8 8 2 2 8 8 2 2 8 8 2 2 8 8 2 2 2 8 8 2 2 2 8 8 2 2 2 8 2 2 2 2 2 2 8 2 2 2 2 2 2 2 2 2 2 2 2 2

Important:


Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/ or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

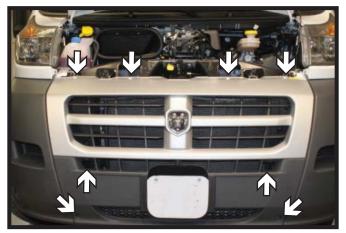

1. Using a T30 Torx, remove the eight (8) screws from the grille. Remove the grille and set aside.

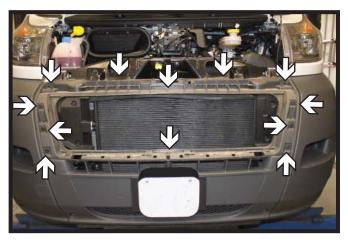


2. Using a T30 Torx, remove the twelve (12) screws from the fascia.

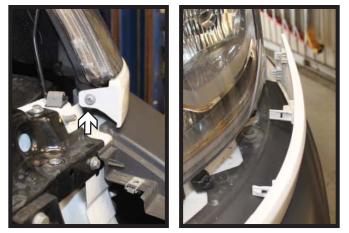

3. Using a phillips screwdriver, remove the screw from the fascia panel under the headlight. Unsnap the panel and set aside. Do this on both sides of the vehicle.




4. Using a 8MM socket, remove the three (3) screws from the wheel well. Do this on both sides of the vehicle.

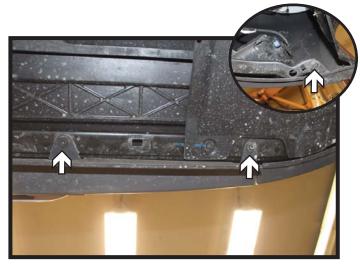


 Using a T30 Torx, remove the six (6) screws from the underside of the fascia. There are three (3) on each side.



Underneath the headlight, using a 30 Torx or 5/32" allen wrench, remove the three (3) screws. Do this on both sides of the vehicle.

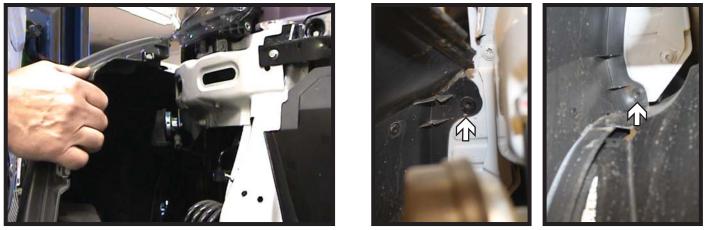


7. Pull the corner of the fascia away from the vehicle, using a 30 Torx, remove the two (2) screws from the behind of the fascia. Do this on both sides of the vehicle. Disconnect any electrical lines and set the fascia aside.

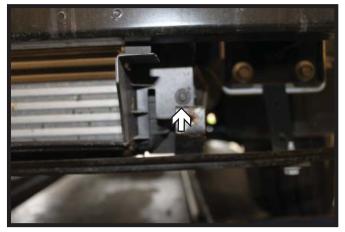

8. Using a 8MM socket, remove the screw from the lower plastic shielding. Do this on both sides of the vehicle.



9. Trim off the lower shielding as shown and remove from the vehicle. Do this on both sides of the vehicle.

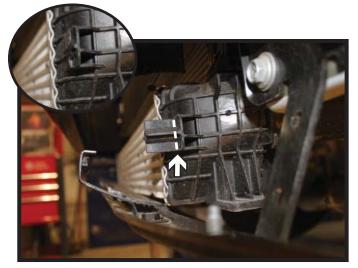


10. Cut the plastic reinforcement tab back flush to the base. Do this on both sides of the vehicle.




11. Using a 13MM socket, remove the bolt from the driver side fascia reinforcement.



12. On the passenger side, using a 8MM socket, remove the three (3) screws from the plastic shielding. Underneath the shielding, using a 13MM socket, remove the bolt from the fascia reinforcement and set aside.

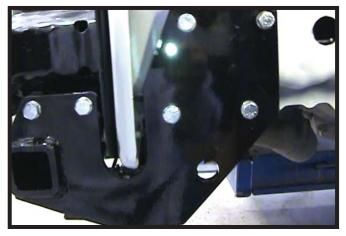

- 14. Using a 3/8" drill bit, drill the remaining holes in the sideplate thru the frame. Install the 3/8" hardware and fully tighten. Do this on both sides of the vehicle.
- ** Use Loctite[®] Red on all bolt threads and tighten all bolts to the appropriate torque.

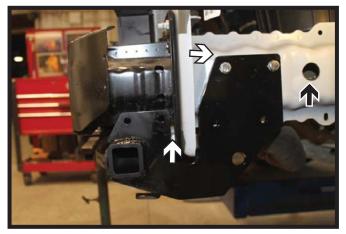

13. Using a 1-1/4" hole saw, enlarge the existing hole in the frame (black). Do this on both sides of the vehicle.

Position the baseplate onto the frame so the baseplate is against the nut in front and the top of the sideplate is flush with the lower frame rib. Level and clamp the baseplate in position.

Using a 3/8" drill bit, drill the top two (2) holes in the sideplate thru the frame. Install the 3/8" hardware and fully tighten. Do this on both sides of the vehicle.

 ** Use Loctite $^{\otimes}$ Red on all bolt threads and tighten all bolts to the appropriate torque.

15. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.



16. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the fascia support, fascia panels, fascia and grille.

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2016 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 Fax: (402) 385-3360 www.blueox.com

General Information

- Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite[®] Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/ recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

- 1. It is YOUR responsibility to watch for:
 - Oil cooler and air conditioner lines
 - Electrical wires and hoses
 - Missing parts or attaching points on the frame


** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.

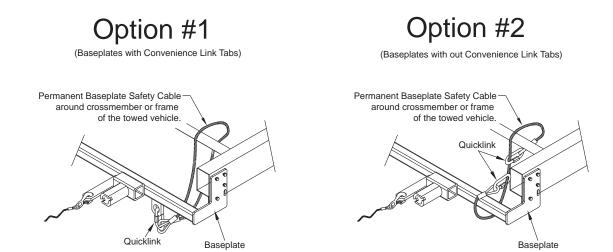

BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit http://blueox.com/warranty/ to register your warranty

