Please visit www.blueox.com for the latest version of these installation instructions.



BX1734 2019-2021 Chevy Traverse (No ACC) (Includes Shutters & Turbo) Installation Instructions

Attachment Tab Height: 16"

Attachment Tab Width: 37.5"

Serial Number

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

- Blue Ox[®] towing products and accessories are intended to be installed by Blue Ox[®] Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox[®] Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
- Many Blue Ox[®] baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

Bolt Torque Specifications

Torque in Foot-Pounds for Inch Bolts

Crada E		
Grade 5	Grade 8	
10	14	
19	29	
33	47	
54	78	
78	119	
154	230	
257	380	
	19 33 54 78 154	

Bolt Torque Specifications

Iorque	in Foo	ot-Pounds	for Met	ric Bolts

Bolt Size	Grade 8.8	Grade 10.9	
6MM	6	8	
8MM	16	22	
10MM	31	40	
12MM	54	70	
14MM	89	117	
16MM	161	230	
18MM	222	318	

A WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

Instruction Notes: The fascia cover, fascia, windshield washer fluid reservoir, and shutters are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8848 Tail Light Wiring Kit is recommended for this vehicle. See tail light removal instructions on page 4.

NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite[®] Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. DO NOT use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. DO NOT use the baseplate if it is damaged or missing parts.

			Tools Required Large Vise Grip Flat Screwdriver Torque Wrench Drill Loctite® RED 3/8" Drill Bit 7MM Socket 10MM Socket 7/16" Socket 7/16" Socket 9/16" Wrench T15 Torx T20 Torx 5/16" Nut Driver
BREAKAWAY SWITCH	6 (7) (6) (1) 4 PIN CONNECTOR 6 PIN CONNECTOR 10 7 Part No.	L Description	2-1/2" Hole Saw Qt <u>y.</u>
		BX1734 Baseplate, DS	
		BX1734 Baseplate, DS	
4		BX1734 Baseplate, Center	
5		Attachment Tab Assembly with Hole	
•		1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZF	
		#10-32 1/2" Round Slotted Head Screw	
		3/8"-16 x 1-1/4" Hex Head Bolt, Grade 5, 2	
		3/8"-16 x 1" Hex Head Bolt, Grade 5, ZP	
10		#12-14 x 1" Self Drilling Screw, ZP	
-		#12-14 X 1 Och Drining Ociew, 21	
		3/8"-16 Hex Nylon Insert Lock Nut, ZP	
		1/4"-20 Hex Nylon Nut, ZP	
		3/8" Flat Washer, ZP	
15		3/8" Lock Washer, ZP	
16		#10 Lock Washer, ZP	
		4-Way Bracket	
		Class IV Safety Cables	
		1/2" Quicklink, ZP	
20		Black Cap Plug Receiver	
			· · · · · · · · · · · · · · · · · · ·

Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/ or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

Tail Light Removal Instructions



 Unpop the covers for the five (5) bolts on the back panel of the vehicle. Then using a 7MM socket, remove the four (4) top bolts (white) and a T20 Torx to remove the one (1) bottom bolt (gray). Do this on both sides of the vehicle.



3. Using a T15 Torx, remove the four (4) bolts from the wheel well behind the rear tire. Do this on both sides of the vehicle.




2. Grab the wheel well trim behind the rear tire and pop out the trim past the side and rear panel joint. Keep trim propped away from panels. Then using a 7MM socket remove the one (1) bolt under the trim. Do this on both sides of the vehicle.




4. Grab the rear panel behind the tire and pull away from the vehicle all the way under the tail light. Do not fully remove panel. Remove tail light and install tail light wiring kit. Once installation is complete, reinstall all items. Do this on both sides of the vehicle.

Fascia Removal and Baseplate Installation Instructions

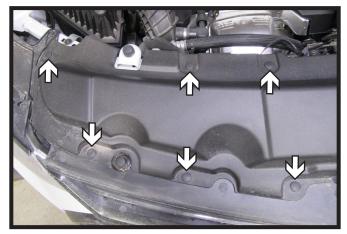



1. Remove the twelve (12) push pins from the fascia cover on the top of the vehicle. There are six (6) push pins on each side of the vehicle. Remove fascia cover and set aside to be reinstalled later.

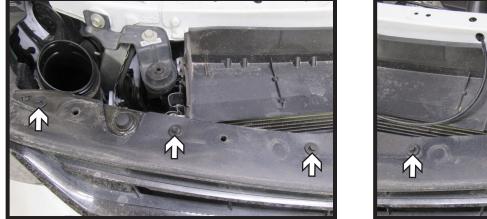



2. Using a 7MM socket, remove the six (6) bolts, three (3) on each side, from the top of the fascia.



3. Using a T15 Torx, remove the five (5) bolts along the edge of the wheel well. Do this on both sides of the vehicle.




4. Pull back the wheel well liner. Using a 7MM socket, remove the one (1) bolt at the fascia joint. Do this on both sides of the vehicle.




5. Using a T15 Torx, remove the eight (8) bolts from the underside of the fascia. There are two (2) on each side and four (4) in the middle.



6. Start to remove the fascia. As the fascia is removed unplug the temperature sensor on the passenger side by pressing down on the red button and then pulling down on the handle to disconnect plug from sensor. Remove fascia and set aside to be reinstalled later.

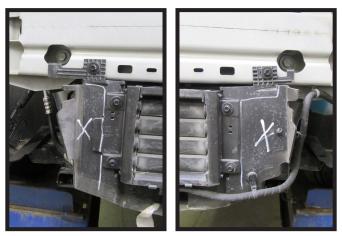

7. Unhook the wire loom on the driver side of the vehicle. Trim the shutter housing as indicated on both sides of the vehicle.

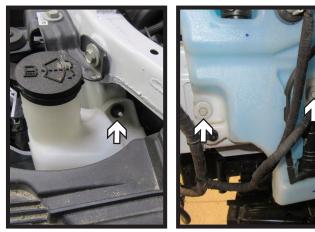


8. On the driver side of the vehicle, using a 10MM socket, remove the one (1) nut from the top of the windshield washer fluid reservoir. Disconnect all lines. Then using a 10MM socket, remove the two (2) bolts at the bottom of the reservoir.




 Using a 7MM socket, remove seven (7) bolts, four (4) on top and three (3) on bottom, from the shutters. Unplug and set aside to be reinstalled later.




10. Slide baseplate into place. Use large vise grips to hold in place. Do this on both sides of the vehicle.

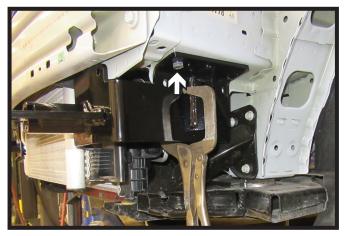

- 11. Using a 3/8" drill bit drill the top hole. Install 3/8" hard ware. Do this on both sides of the vehicle. Remove vise grips.
- ** Use Loctite[®] Red on all bolt threads and tighten all bolts to the appropriate torque.**

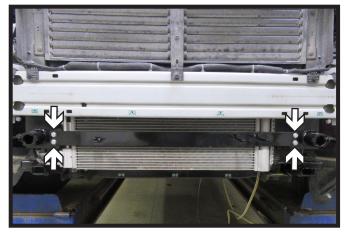

12 . Install the cross bar using four (4) 3/8" bolts, two (2) on each side, with lock washer and two (2) flat washers in between the side bracket and cross bar for each bolt as a spacer.

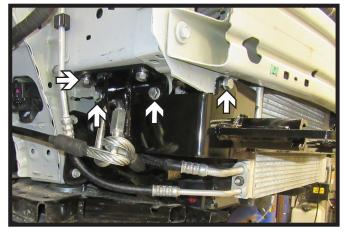

 Using a 3/8" drill bit, drill the remaining four (4) holes. Install 3/8" hardware. Do this on both sides of the vehicle.


** Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque.**



14. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.




15. Hold the shutters in place and trim sides around the attachment tab housing as needed.

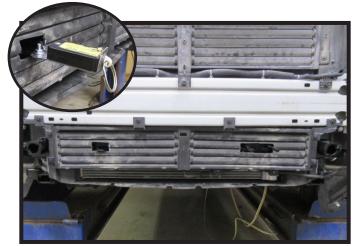

16. Notch the middle two shutters as show for electrical rids and the breakaway bracket. Reinstall the shutters on the vehicle.

Note: If installing a breakaway switch insert the bolt from the bottom upwards to prevent interference of the bolt with the shutters (inset).

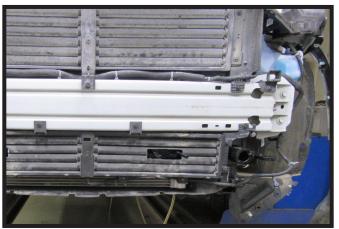

17. Reinstall the windshield washer fluid reservoir on the driver side of the vehicle.



18. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Use a 2-1/2" hole saw to create the holes for the attachment tabs. Reinstall the fascia, fascia cover, and reconnect all electrical connections.

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2016 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 Fax: (402) 385-3360 www.blueox.com



General Information

- Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite[®] Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/ recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

- 1. It is YOUR responsibility to watch for:
 - Oil cooler and air conditioner lines
 - Electrical wires and hoses
 - Missing parts or attaching points on the frame

** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.



BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit http://blueox.com/warranty/ to register your warranty

