

# Direct Fit Floor Mount Instructions

# I-8

**\*\*IMPORTANT\*\*** This direct fit floor mount is intended to be used with the corresponding outer firewall boot for your application. Installation can be accomplished without the outer however additional hardware will likely be required and is not included.

Install column mount bracket to floor mount plate using the provided 10-32 pull studs and 10-32 nuts.

Be sure that oversized holes or cut areas in bracket are aligned as needed with holes in mounting plate. This is needed for bolts to pass through from the external firewall boot.

Attach inner mounting plate to external firewall boot sandwiching the vehicles firewall between the two. Use hardware provided with the outer firewall boot.

Slide steering column through clamp and tighten to the steering column. If included, use rubber strip to adjust diameter of column clamp if needed prior to tightening.