

 
 
 


232 Branford Rd.  
North Branford, CT 06471  
Orders: 203.481.9460  
Tech: 203.481.9943  
Fax: 203.481.9641

## *Product Instructions*

**#20-937P34, #20-937P36, #20-937P38**

- 1.** Our Coyote block windage tray / pickup combo mounts by sandwiching between the block and the oil pan mounting rail. Start installation by test fitting your tray with your blocks pan mounting holes. Using the provided mounting studs (8MM - 1.25 x 35mm) on your block. The pickup tube install flange should press into the rubber grommet on your oil pump.
- 2.** After dry fitting the windage tray, remove from the block and put a thin coat of RTV Sealant between the block and the windage tray.
- 3.** Place the windage tray back on the block and add a thin coat of RTV on the other side of the windage tray before installing the oil pan.
- 4.** After pan is fitted, torque the hardware to the necessary specs (25 lbs) in a criss-cross fashion.
- 5.** Let the oil pan and windage tray sit overnight before filling with oil. Inspect for any leaks.

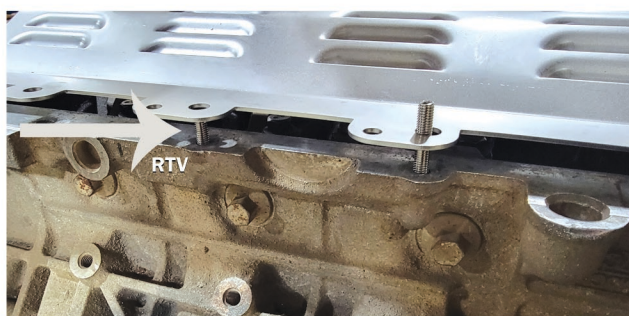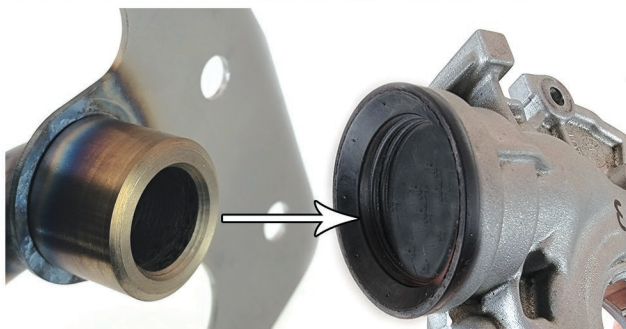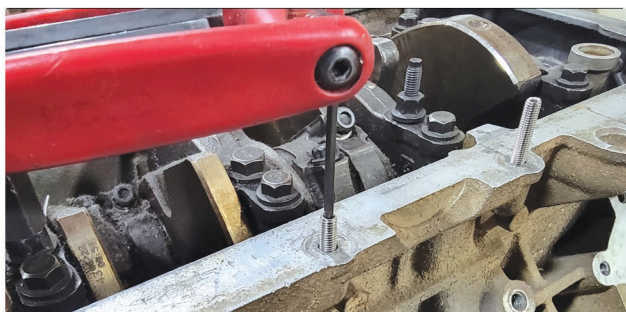

**Note:** There is no commercially available stand alone oil pan gasket available for the Ford Coyote for use with aftermarket windage trays. Per these instructions sealing is done with RTV Sealant.

**[www.CantonRacingProducts.com](http://www.CantonRacingProducts.com)**