



232 Branford Rd.  
North Branford, CT 06471  
Orders: 203.481.9460  
Tech: 203.481.9943  
Fax: 203.481.9641

## ***Fresh Engine Pre-Oiler Instructions & Notes***

### **#24-160 & #24-162 Dry Engine Oil Priming Pre-Oilers**

**\*This unit is designed to be installed on an engine test stand.**

### **Operation Instructions:**

- Turn supplied ball valve to the closed position.
- Plumb oil line from pre-oiling unit into engine feed port.
- Fill unit with 4 or 5.5 qts depending on unit and preference.
- Pressurize tank with 40 PSI.
- Open ball valve until oil is not visible on sight tube.
- Close ball valve for next use.
- Start engine.

### **Note:**

Be sure to fill the engine with the correct amount of oil after priming the engine.