

INSTALLATION INSTRUCTIONS

WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY


WEIGHT DISTRIBUTION HEAD ANGLE ADJUSTMENT KIT



UNIT VIEW

See below for each detailed view. **NOTE:** There are long and short rods, with three options of use for each one.


Drop distance is the measurement from the top of the shank to the bottom of the spring bar. See figure below.

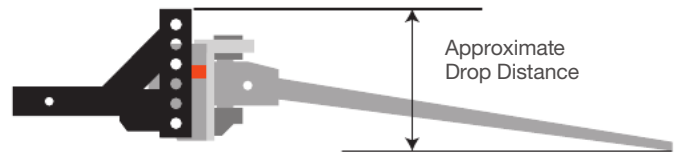

SHORT ADJUSTMENT ROD


Short Rod Only

Drop distance = 8.8 inches

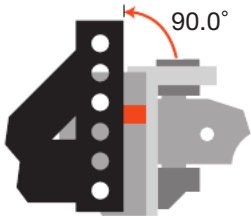


Short Rod + 1 Flat Washer

Drop distance = 10 inches

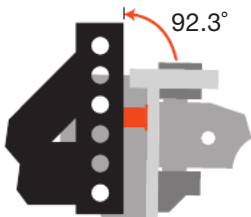

Short Rod + 2 Flat Washers


Drop distance = 11.3 inches

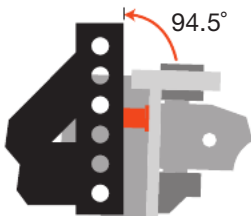

LONG ADJUSTMENT ROD


Long Rod Only

Drop distance = 12.6 inches

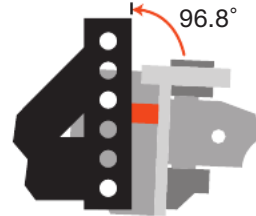

Long Rod + 1 Flat Washer

Drop distance = 13.9 inches

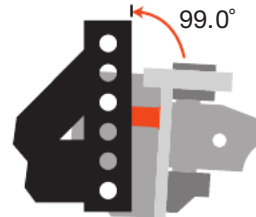

Long Rod + 2 Flat Washers

Drop distance = 15.2 inches

