

SEAT COVERS INSTALLATION INSTRUCTIONS

 
BY *fria*
THE LEADER IN CUSTOM FIT

FEATURING SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM


For 40/20/40 seats.

Thank you for purchasing one of our fine quality products.
Your seat cover is engineered from high quality durable
materials and designed with precision for a custom fit.

SCAN HERE
to watch an
installation
video.

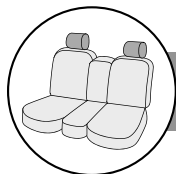


1 REMOVE ALL HEADRESTS (IF APPLICABLE)

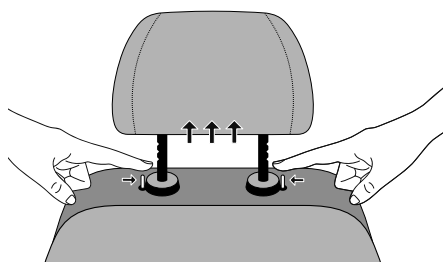 


A. Push in side release buttons

 OR

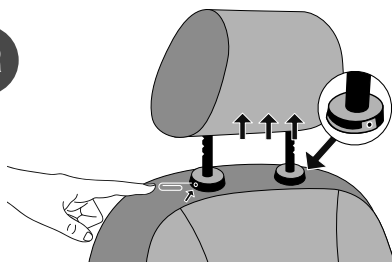


B. Pin holes on headrest
Insert a paper-clip end into the hole.

 OR

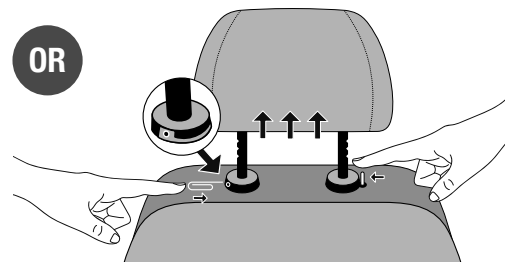

 C. Some may have both.

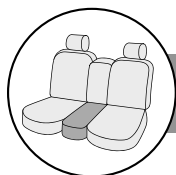

2A CUSHION COVER for 20 section NO storage compartment

 
UNCLIP THE BUCKLES BEFORE INSTALLING

Step 1. Center cover on seat

Step 2. Pass side strap around the back and buckle to other side

Step 3. Smooth cover and tuck back part of cover in between cushion and plastic molding

Step 4. Position adhesive velcro (provided) to align with velcro on cover

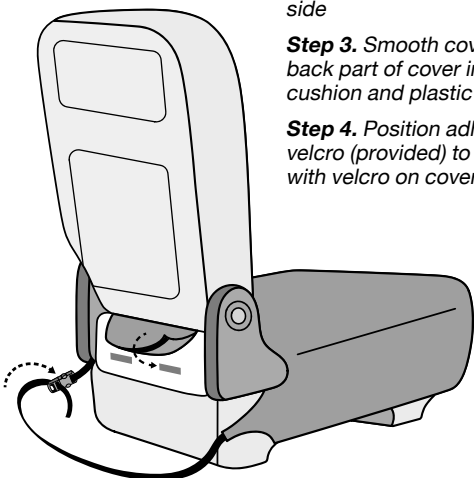

OR

Step 1. For easier access to the center portion, move both driver and passenger to most forward position

Step 2. Undo seat belt buckle from elastic loop on seat

 
Step 3. Center cover on seat

 
Step 4. Place front elastic on cover between cushion and organizer starting from one corner to another

Step 5. Pull elastic down making sure its under the cushion at front

Step 6. Apply velcro on cover to carpet at back of seat


Step 7. Position seat belt buckle through elastic loop on seat cover

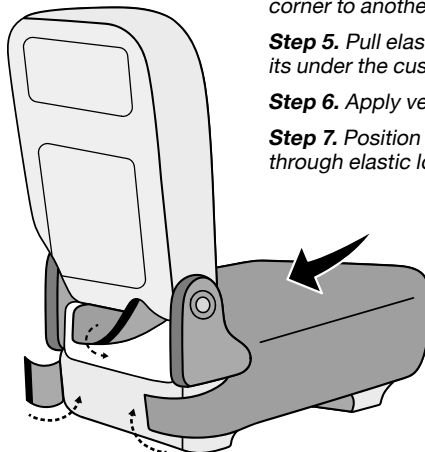

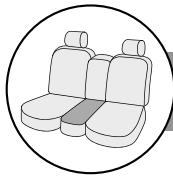

2B

 CUSHION COVER for 20 section WITH storage compartment

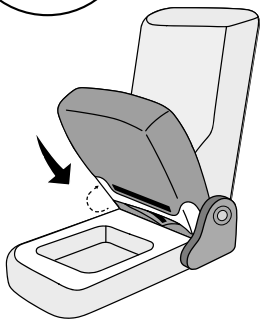


Step 1. Open cushion/lid

Step 2. Slip cover over cushion/lid

Step 3. Pass back flap through crevice

Step 4. Attach velcro at bottom of cover

 OR

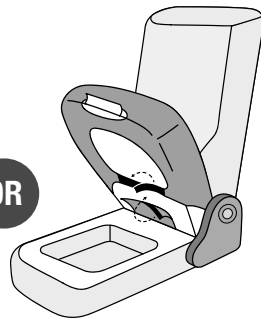

Step 1. Open cushion/lid

 
Step 2. Slip cover over cushion/lid

Step 3. Pass back flap through crevice

Step 4. Adhere velcro on flap to carpeting under lid

Step 5. Pull side velcro pieces under lid and attach together

OR

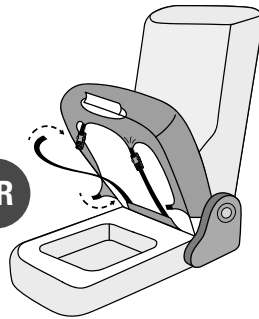

Step 1. Open cushion/lid

Step 2. Slip cover over cushion/lid

Step 3. Tuck straps under lid and attach to buckles

Step 4. Pull side velcro pieces under lid and adhere to carpet

Step 5. Adjust straps and velcro to equalize tension

OR



Step 1. Open cushion/lid

 
Step 2. Slip cover over cushion/lid

Step 3. Pass back flap through crevice

Step 4. Pull side velcro pieces under lid

Step 5. Adhere velcro on cover to carpeting under lid

OR

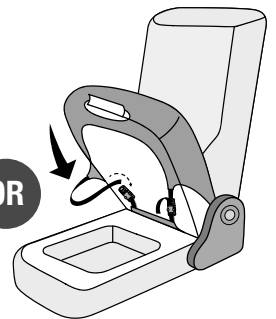


Step 1. Open cushion/lid

Step 2. Slip cover over cushion/lid


Step 3. Tuck back part of cushion cover through crevice

 Step 4. Pass side straps under back corners of lid and secure to buckles

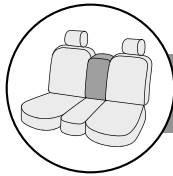

3A

 BACKREST COVER for 20 sections for seats with built in seatbelts

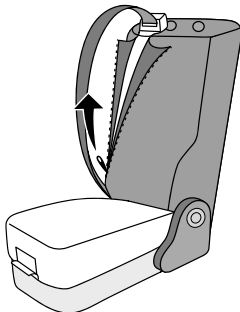


Step 1. Open zipper

Step 2. Slip cover over backrest/armrest


Step 3. Ensure cover is installed under seat belt strap

 Step 4. Close zipper

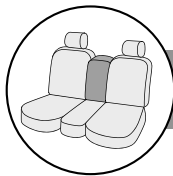

3B

 
BACKREST COVER for 20 sections NO storage and NO cupholders

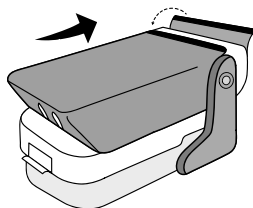

Step 1. Slip cover over backrest/armrest


Step 2. Pass flap through crevice

 Step 3. Attach velcro at bottom of cover

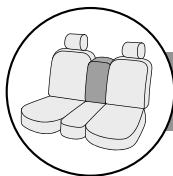

3C

 BACKREST COVER for 20 sections NO storage and WITH cupholders

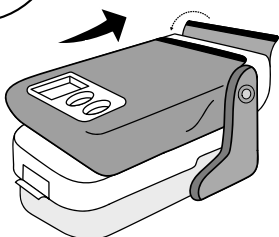


Step 1. Slip cover over backrest/armrest

Step 2. Pass flap through crevice

Step 3. Attach velcro at bottom of cover

 OR

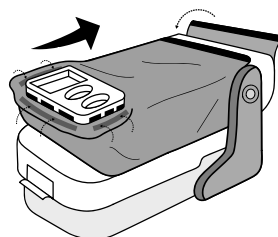


Step 1. Slip cover over backrest/armrest

Step 2. Pass flap through crevice


Step 3. Attach velcro at bottom of cover

 Step 4. Place adhesive back velcro (provided) to line up with velcro on cover

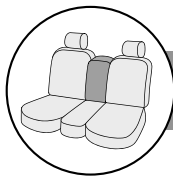

3D

 BACKREST COVER for 20 sections WITH storage and NO cupholders

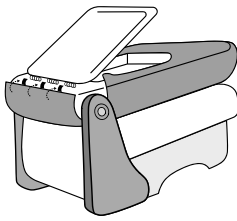


Step 1. Open storage compartment

Step 2. Center cover under armrest

Step 3. Snug cover at the back so velcro attached to cover can be positioned through the crevice where hinges are located

Step 4. Position adhesive back velcro (provided) to line up with velcro on the cover

 
OR

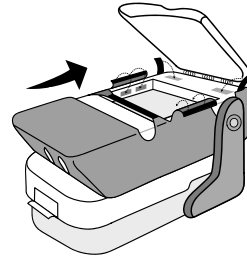

Step 1. Open storage compartment


Step 2. Slip cover over backrest/armrest

 Step 3. Position adhesive back velcro (provided) to line up with velcro on the cover

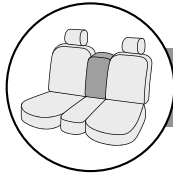

3E

 BACKREST COVER for 20 sections WITH storage and WITH cupholders

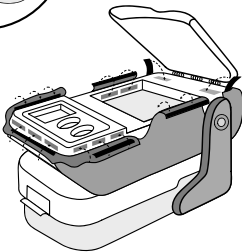


Step 1. Open storage compartment

Step 2. Position cover on backrest

Step 3. Snug cover at the back so velcro attached to cover can be positioned through the crevice where hinges are located


Step 4. Position adhesive back velcro (provided) to inside of storage compartment to align with the velcro tabs on cover

 Step 5. Position adhesive back velcro (provided) around the edge of the cup holders to line up with velcro on the cover

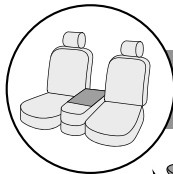

3F

 LID COVER for 20 sections storage compartment

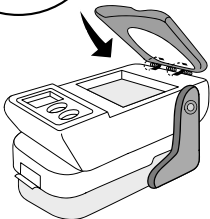


Step 1. Open storage compartment

Step 2. Slip cover over lid

Step 3. Pull velcro tabs on cover around the hinges on the side

Step 4. Position adhesive back velcro (provided) on underside of lid to align with the velcro tabs on cover and attach

 
OR

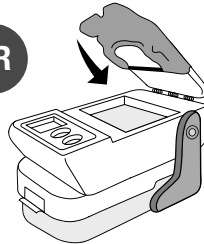

Step 1. Open storage compartment


Step 2. Slip cover over lid

 OR

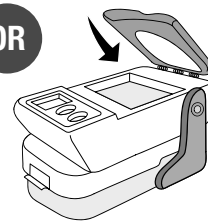

Step 1. Open storage compartment

 Step 2. Slip cover over lid

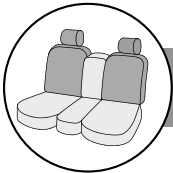


4

BACKREST COVER for 40 sections


▼ IN THIS INSTALLATION THE BACK FLAP ATTACHED TO THE SEAT CANNOT BE REMOVED.

▼ SEAT WITH THE BACK FLAPS ATTACHED

 
NOTE 1

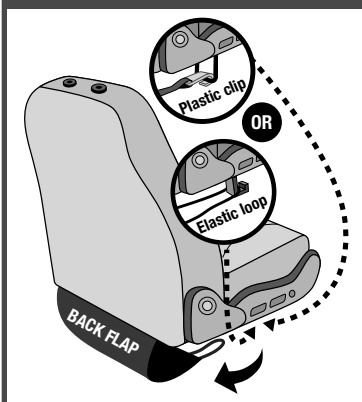

 IN SOME APPLICATIONS, THE BACK FLAP ON THE SEAT CAN BE RELEASED EITHER BY UNHOOKING THE ELASTIC LOOP OR BY REMOVING THE PLASTIC CLIP UNDERNEATH THE SEAT.

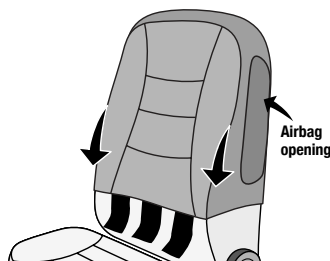


 Step 1. Slip the cover over the backrest, ensuring the side airbag opening is on the door side

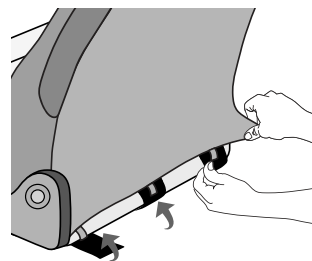


Step 2. Tuck carpet strips through the crevice and attach to Velcro at back

 Step 3. Slip cover over backrest. With seat in most upright position, pass back straps through crevice. Then feed straps under seat and buckle to front of cushion cover

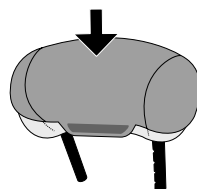


 Step 4. Slip on headrest cover. Attach velcro

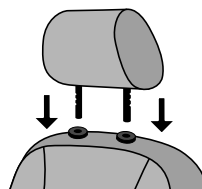

 Step 5. Replace headrest




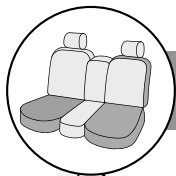


5

CUSHION COVER for 40 section


UNCLIP THE BUCKLES BEFORE INSTALLING

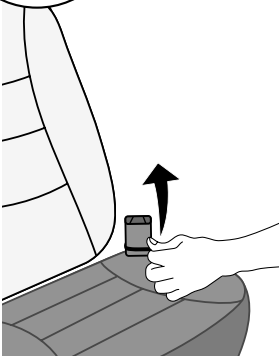

Step 1. Release seat belt buckle from elastic holder (if applicable).

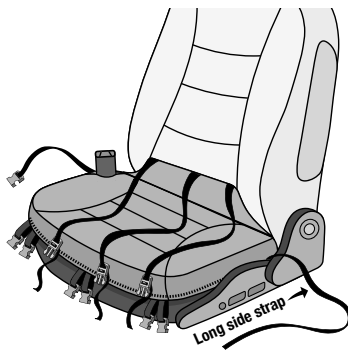


Step 2. Place cover on seat cushion ensuring that the washing label is to the inside and the long side strap is on the door side.

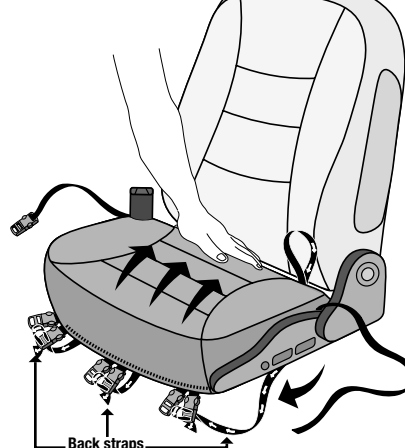


Step 3. With seat in most upright position, pass the straps sewn on the back of the cushion cover through the crevice. Feed straps under the seat and buckle to front of cushion cover.

NOTE 2

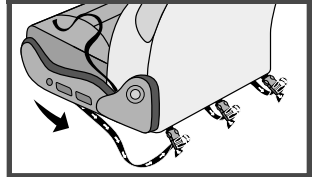


SOME CUSHION COVER STRAPS FEED FROM THE FRONT, UNDER THE SEAT AND BUCKLE AT THE BACK.

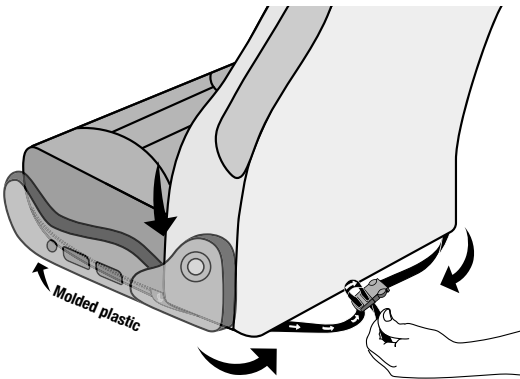

Step 4. Release the side straps from buckle before installing. Replace strap after installation.



Step 5. Adjust cover for better fit.

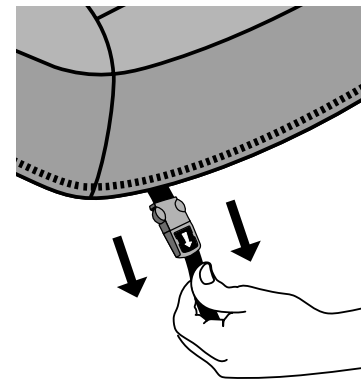

Step 6. Adjust buckles and straps to equalize tension.



DURA-TECH PRO 5 YEAR WARRANTY

Fia Inc. guarantees the original purchaser a limited 5 year warranty against manufacturer's defects in materials, workmanship and finish under normal use. The warranty is void if the product has been damaged resulting from product misuse, improper installation, product modifications or product neglect. The warranty applies to Fia Dura-Tech Pro products and is limited to repair or replacement of the product. Warranty does not include cost of removal, installation, labor, freight and incidental or consequential damages.

Original purchaser must return defective merchandise along with the original purchase receipt to the original place of purchase for repair or replacement. Shipping charges will apply for any repair or replacement.

Buyer assumes all risk and liability whatsoever from the installation of Fia products. Vehicles equipped with supplemental restraint systems (air bags) deployed by impact should not be modified or covered by any aftermarket seat cover without consulting the vehicle manufacturer and Fia Inc. Fia Inc. assumes no liability for injury, loss, incidental or consequential damages in the event of an accident.



WARNING: DO NOT BLOCK AIR BAGS WHEN INSTALLING SEAT COVERS:

SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEAT COVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.