

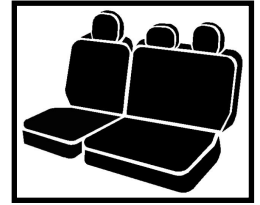
If you have any comments or concerns,
 please feel free to contact our
 customer service department at:
 Toll-free: 1-800-835-0438
 OR
 Email: info@gofia.com

SEAT COVERS
 BY



SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM



INSTALLATION INSTRUCTIONS
 FOR
 NP92-35/ Oe32-35/ SL62-35/ SP82-35/ TR42-35/ TRS42-35

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

We recommend installation begin with the cushion covers.

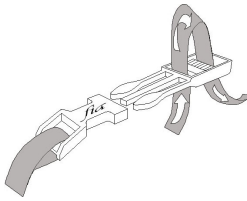
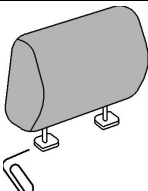
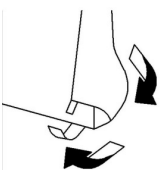
A) CUSHION COVERS:

- | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> 1) Center cover on the seat. Cover has opening with velcro for seat belt buckle (see note below) 2) Tuck back flap through crevice 3) Lift seat and pass the straps under seat and buckle | <ol style="list-style-type: none"> 4) Apply velcro to the underside of cushion 5) Adjust velcro and/or straps and buckles to equalize tension and ensure a snug fit |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

B) BACKREST COVERS:

- | | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> 1) Remove headrests (see note below) 2) Slide cover under seatbelt and slip over backrest. Holding cushion up in ¾ position allows for better access 3) Feed straps behind the seat 4) With cushion down, smooth cover tightly from top to bottom 5) Locate straps and secure to buckles on seat cover 6) Tuck bottom of cover through crevice under backrest | <ol style="list-style-type: none"> 7) With cushion lifted up, tighten straps and buckles 8) Locate bottom right flap through crevice and hold at back of seat. 9) With other hand bring the side flap around and attach (see note below) 10) Repeat on other side 11) Adjust all straps, buckles and velcro to ensure a snug fit 12) Re-install headrests (see note below) |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

NOTES:

<p>1) SELF-LOCKING SUPER-GRIP® BUCKLE:</p> 	<p>2) HEAD REST REMOVAL: If the cushion is held up in ¾ position, the backrest will slant forward and make for easier removal.</p> <p>A) - Insert paper clip into holes at base to release - Lift off</p> <p style="text-align: center;">OR</p> <p>B) - Push in side release buttons - Lift off (If unable to remove consult dealership)</p> 
<p>3) BOTTOM FLAP INSTALLATION</p> 	<p>4) SEAT BELT OPENING</p> <ul style="list-style-type: none"> - Detach velcro pieces. - Slide cover under seat belt base - Re-attach velcro around seat belt base - Slip elastic loop over seat belt buckle
<p>5) RE-INSTALLATION OF HEADRESTS If the cushion is held up in ¾ position, the backrest will slant forward and make for easier re-installation.</p> <p>A) Ensure pre-cut holes in seat cover align with holes in headrest base. B) Replace headrests</p>	<p>6) HEADREST COVERS Some models may contain more than one set of headrest covers. Select the ones that fit your headrests best.</p>

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

