


SEAT COVERS
BY

fia

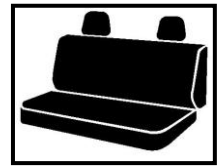

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

NP92-78/ Oe32-78/ SL62-78/ SP82-78/ TR42-78/ TRS42-78

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER:


- 1) Undo velcro closures on headrest opening and bottom of seat cover
- 2) Slip cover over backrest ensuring the latch and straps on the seat are through the openings provided in the cover
- 3) Pull cover down and tuck bottom through crevice
- 4) Fold backrest forward and attach velcro at bottom
- 5) Attach velcro on headrest opening

B) CUSHION COVERS:

- 1) Center cover on seat. Cover has allowance for center buckle and for child restraint system anchors.
- 2) Tuck back of cover through crevice
- 3) Lift the seat up and pass the front strap under seat and buckle
- 4) Pass side straps around the back of seat and buckle
- 5) Adjust straps and buckles to equalized tension

Notes:

- 1) **SELF-LOCKING SUPER-GRIP® BUCKLE:**

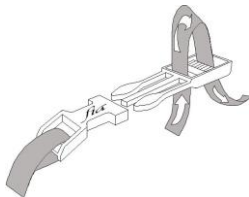

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

7-8-20