

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

 
SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

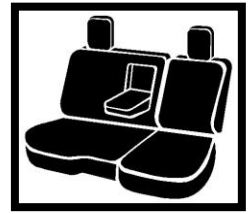

INSTALLATION INSTRUCTIONS  
FOR

**NP92-87/ OE32-87/ SL62-87/ SP82-87/ TR42-87/ TRS42-87**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) BACKREST COVER 40 side:**

- |                                     |   |
|-------------------------------------|---|
| 1) Remove headrest (see note below) | 4) Tuck flaps through crevice under backrest                      |
| 2) Unlatch backrest from back wall  | 5) Fold down backrest and attach flaps on velcro at back of cover |
| 3) Slip cover over backrest         | 6) Replace headrest (see notes)                                   |

**B) BACKREST COVER 60 side:**

- |   |   |
|---|---|
| 1) Remove headrest (see note below)   | 6) Tuck flaps through crevice under backrest                      |
| 2) Unlatch backrest from back wall  | 7) Fold down backrest and attach flaps on velcro at back of cover |
| 3) Slip cover over backrest under center seat belt  | 8) Replace headrest (see notes)                                   |
| 4) Smooth cover tightly from top to bottom  |   |
| 5) Install adhesive back velcro (included) on inside edge of armrest well to align with velcro on seat cover. <b>NOTE: BEFORE SECURING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.</b> |   |

**C) CUSHION COVERS X 2:**

 
- |   |  |
|---|--|
| 1) Center cover on seat   | 4) Lift seat in up position  |
| 2) Tuck back flap into crevice  | 5) Pass the back straps under seat and buckle to front and side of cover |
| 3) Ensure the slit is in line with car seat hook up (40 side & 60 side); center seat belt buckle (60 side only) | 6) Adjust straps and buckle to equalize tension                          |

**D) ARMREST COVER**

- |                      |  |
|----------------------|--|
| 1) Fold down armrest | 2) Slip cover over armrest and attach velcro |
|----------------------|--|


**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

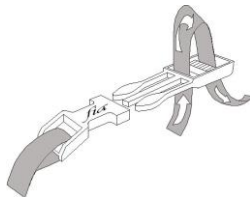

**2) HEAD REST REMOVAL:**

 Push in side release buttons  
- Lift off  
(If unable to remove consult dealership)

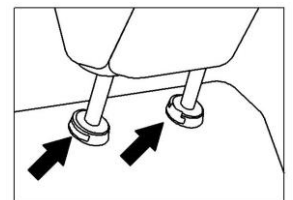

**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.  
B) Replace headrests

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

