

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

 
SEAT COVERS  
BY

*fia*

FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

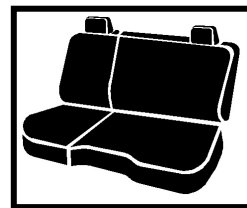

INSTALLATION INSTRUCTIONS  
FOR  
NP92-94/ Oe32-94/ SL62-94/ SP82-94/ TR42-94/ TRS42-94

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**NOTE: FOR EASE OF INSTALLATION REMOVE JACK FROM BASE AND REPLACE AFTER COMPLETING INSTALLATION**

**INSTRUCTIONS:**

**A) BACKREST COVER – 60 PORTION:**

- 1) Remove head rest (see note)
- 2) Slip cover over backrest. Ensure cover is installed under seat belt Holding cushion up in  $\frac{3}{4}$  position allows for better access
- 3) Pass straps behind the seat straight down
- 4) Smooth cover tightly from top to bottom
- 5) Hold cushion up in  $\frac{3}{4}$  position, tuck bottom of cover through crevice under backrest
- 6) With cushion up, locate straps and secure to buckles on seat cover
- 7) Locate bottom right flap through crevice and hold at back of seat. With other hand bring the side flap around and attach (see note)
- 8) Repeat on left side
- 9) Adjust all straps, buckles and velcro

**B) BACKREST COVER – 40 PORTION:**

 
- 1) Repeat steps 1-9 from A) above

**C) CUSHION COVER – 60 PORTION AND 40 PORTION:**

- 1) Center cover on the seat
- 2) Tuck back flap through crevice
- 3) Lift seat and pass straps under seat and buckle
- 4) Pass side straps and buckle
- 5) Apply velcro to underside of cushion
- 6) Adjust straps and buckles to equalize tension


**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

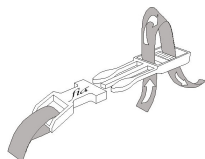

**2) HEAD REST REMOVAL:**

 - Push in side release buttons
- Lift off
- (If unable to remove consult dealership)



**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**4) BACKREST COVER BOTTOM FLAP INSTALLATION**



**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

*fia*

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

10-02-13