

If you have any comments or concerns,
 please feel free to contact our
 customer service department at:
 Toll-free: 1-800-835-0438
 OR
 Email: info@gofia.com

SEAT COVERS
 BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM
 INSTALLATION INSTRUCTIONS

FOR

OE37-32/ SL67-32/ TR47-32



Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit. The **Super Grip Buckles** are self-locking. For proper usage, see diagram.

A) BACKREST COVERS:

- | | |
|--|--|
| <ol style="list-style-type: none"> 1) Remove headrests (see note) 2) Open zipper closure in seat cover 3) Install cover under seat belt 4) Close zipper (see note) | <ol style="list-style-type: none"> 4) Tuck flap through crevice and attach to velcro at back 6) Adjust velcro to equalize tension 7) Replace headrests (see note) |
|--|--|

B) CUSHION COVER - "40" PORTION:

- | | |
|--|--|
| <ol style="list-style-type: none"> 1) Center cover on the seat 2) Pass the front strap under seat and buckle | <ol style="list-style-type: none"> 3) Pass side straps around back of seat and buckle 4) Adjust straps and buckles to equalize tension |
|--|--|

C) CUSHION COVER - "60" PORTION:

- | | |
|--|--|
| <ol style="list-style-type: none"> 1) Align cover on seat and position seat belt through opening provided 2) Pass the strap that is attached to the flap by the seat belt cut-out through the seat belt opening under the seat and secure with side strap buckle or flap buckle (see note) | <ol style="list-style-type: none"> 3) Pass front strap under seat and buckle 4) Pass side strap around the back of the seat and buckle 5) Adjust straps and buckles to equalize tension |
|--|--|

D) ARMREST / STORAGE COMPARTMENT COVER

 
- | | |
|--|---|
| <ol style="list-style-type: none"> 1) Open armrest / storage compartment 2) Center cover under armrest 3) Position adhesive backed velcro (supplied) to align with the velcro on cover. NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED | <ol style="list-style-type: none"> 4) Snug cover at back of console so the velcro on the cover is positioned through the crevice where lid and armrest / console are hinged 5) Secure the adhesive velcro on the inside back of console |
|--|---|

E) ARMREST / STORAGE COMPARTMENT LID COVER

- | | |
|---|---|
| <ol style="list-style-type: none"> 1) Open armrest / storage compartment 2) Slip Cover over lid 3) Snug cover at back corners of the lid | <ol style="list-style-type: none"> 4) Position adhesive backed velcro (supplied) on underside of lid to align with the velcro tabs on cover and attach |
|---|---|

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

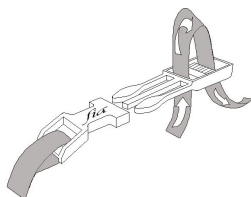


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
 - Lift off

OR

- B) - Push in side release buttons
 - Lift off

 (If unable to remove consult dealership)

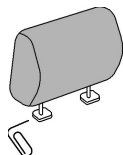


3) ZIPPER:

- A) For ease in installation, the zipper is longer than the cover. Tuck excess zipper under cover.

4) RE-INSTALLATION OF HEADRESTS

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

 5)

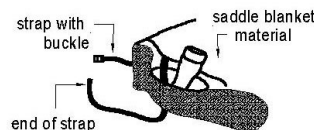

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

