

# SEAT COVERS INSTALLATION INSTRUCTION

BY *fria*  
THE LEADER IN CUSTOM FIT

FEATURING SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

 
Driver/passenger seating for buckets, 60/40 and 40/60 seats.

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality durable materials and designed with precision for a custom fit.


SCAN HERE  
to watch an  
installation  
video.



## SELF-LOCKING SUPER-GRIP® BUCKLE

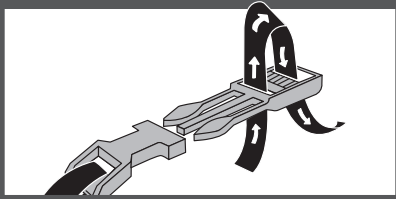


## 1 REMOVE HEADREST (IF APPLICABLE)

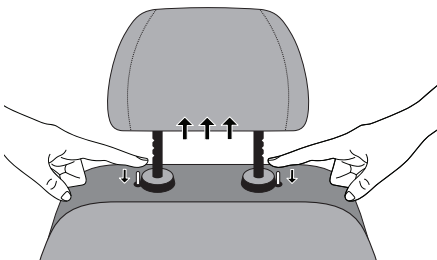 


**A. Tab(s) at headrest base.**  
Depress tab(s) and lift the headrest out.

 OR

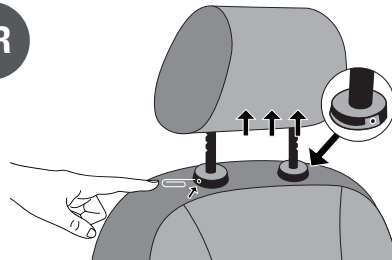

**B. Pin holes on headrest**  
Insert a paper-clip end into the hole.

 OR

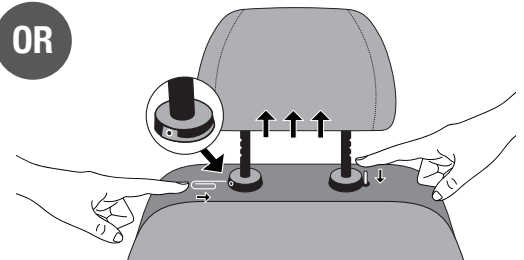

**C. Some may have both.**

 
**NOTE:** In some cases where the headrest is not removable there is an allowance in the seat cover to fit over the headrest.

## 2 BACKREST COVER


▼ SEAT WITH THE BACK FLAPS ATTACHED

▼ IN THIS INSTALLATION THE BACK FLAP ATTACHED TO THE SEAT CANNOT BE REMOVED.

### NOTE 1

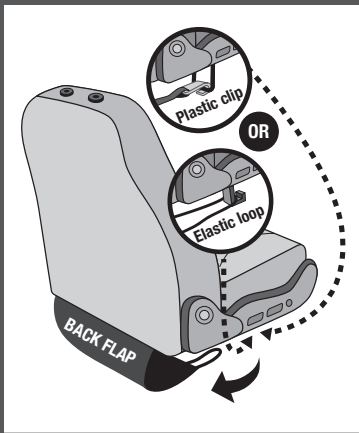


 IN SOME APPLICATIONS, THE BACK FLAP ON THE SEAT CAN BE RELEASED EITHER BY UNHOOKING THE ELASTIC LOOP OR BY REMOVING THE PLASTIC CLIP UNDERNEATH THE SEAT.

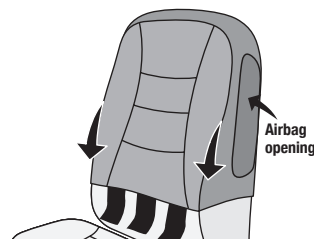


**Step 1.** Slip the cover over the backrest, ensuring the side airbag opening is on the door side.

 
For seats with built in seat belts, open zipper. Slip cover over backrest ensuring cover is installed under seat belt strap.

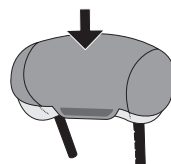

**Step 4.** Slip on headrest cover.

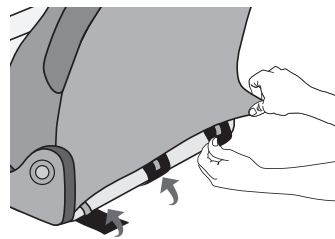 

 **Step 2.** Tuck carpet strips through the crevice and attach to Velcro at back.

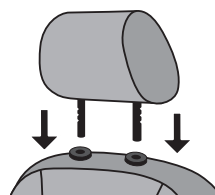

**Step 5.** Replace headrests. If there are no pre-cut holes, cut a small hole in the stretchy fabric just big enough to accommodate each post.

**Step 3.** With seat in most upright position, pass back straps through crevice. Then feed straps under seat and buckle to front of cushion cover when installed.




# SEAT COVERS INSTALLATION INSTRUCTION

 BY *fia*  
THE LEADER IN CUSTOM FIT


FEATURING SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

Driver/passenger seating for buckets, 60/40 and 40/60 seats.


## 3 CUSHION COVER

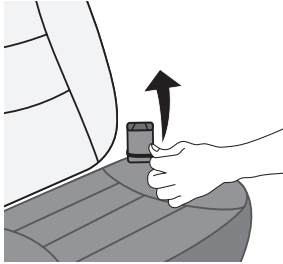

 **Step 1.** Release seat belt buckle from elastic holder (if applicable).

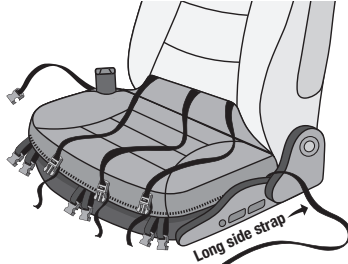


 **Step 2.** Place cover on seat cushion ensuring that the washing label is to the inside and the long side strap is on the door side.

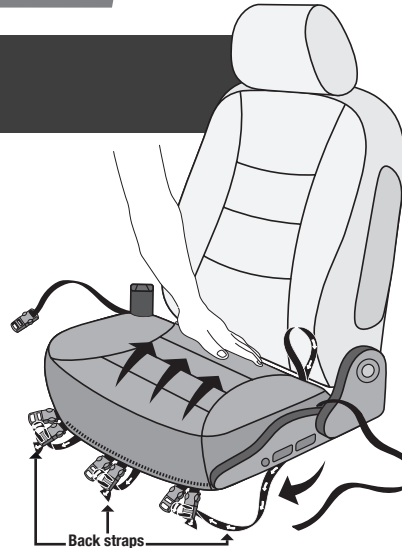


**Step 3.** With seat in most upright position, pass the straps sewn on the back of the cushion cover through the crevice. Feed straps under the seat and buckle to front of cushion cover.


### NOTE 2

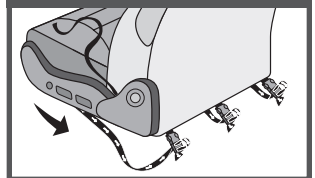 

 
SOME CUSHION COVER STRAPS FEED FROM THE FRONT, UNDER THE SEAT AND BUCKLE AT THE BACK.

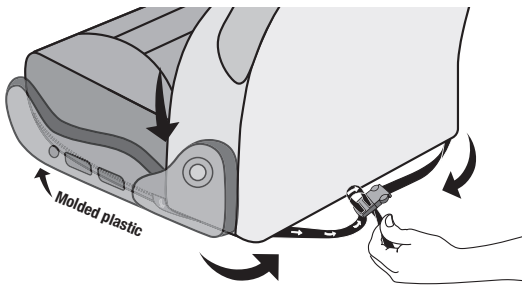

 **Step 4.** Pass long side strap through the opening between the molded plastic and the seat. Buckle to opposite side.

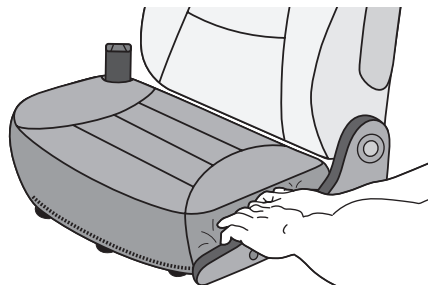

 **Step 5.** Adjust cover for better fit.

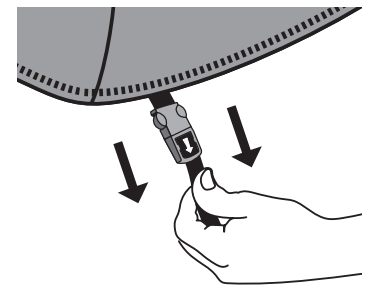

**Step 6.** Adjust Velcro and straps to equalize tension.

*fia*  
THE LEADER IN CUSTOM FIT

## LIMITED 2 YEAR WARRANTY

Fia Inc. guarantees the original purchaser a limited 2 year warranty against manufacturer's defects in materials, workmanship and finish under normal use. The warranty is void if the product has been damaged resulting from product misuse, improper installation, product modifications or product neglect. The warranty applies to all Fia products and is limited to repair or replacement of the product. Warranty does not include cost of removal, installation, labor, freight and incidental or consequential damages.

Original purchaser must return defective merchandise along with the original purchase receipt to the original place of purchase for repair or replacement. Shipping charges will apply for any repair or replacement.

Buyer assumes all risk and liability whatsoever from the installation of Fia products. Vehicles equipped with supplemental restraint systems (air bags) deployed by impact should not be modified or covered by any aftermarket seat cover without consulting the vehicle manufacturer and Fia Inc. Fia Inc. assumes no liability for injury, loss, incidental or consequential damages in the event of an accident.



### WARNING: DO NOT BLOCK AIR BAGS WHEN INSTALLING SEAT COVERS:

SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEAT COVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.