

**SEAT COVERS
BY**



FEATURING

SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR

NP98-27/ OE38-27/ SL68-27/ SP88-27/ TR48-27/ TRS48-27

THIS COVER FITS A SEAT WITH A CENTER CUSHION COMPARTMENT. IF THE CENTER CUSHION DOES NOT OPEN, YOU HAVE THE WRONG SEAT COVER. (SEE PICTURE ABOVE)

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – “40” PORTION X 2:

- 1) Remove head rest (see note)
- 2) Slip cover over backrest (see warning below)
- 3) Tuck flaps under backrest and attach to Velcro at back
- 4) Adjust Velcro to equalize tension
- 5) Replace headrests (see note)

B) CUSHION COVER - “40” PORTION X 2:

- 1) Center cover on the seat
- 2) Pass the front strap under seat. Buckle to back flap
- 3) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap
- 4) Adjust straps and buckles to equalize tension

C) BACKREST COVER – “20” PORTION:


- 1) Place the armrest in up position. Open lid on storage compartment
- 2) Slip cover over armrest positioning elastic behind cup holder. Close lid.
- 3) Position adhesive velcro (supplied) to align with velcro on cover around the edge of cup holder. **NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
- 4) Snug cover at back of armrest then place armrest/console in down position
- 5) Position Velcro sewn on back of cover through the crevice where lid and armrest are hinged
- 6) Open armrest/console lid
- 7) Position adhesive back velcro supplied to inside the storage compartment and align with velcro on the side and back of cover.

D) CUSHION/COMPARTMENT COVER– “20” PORTION:

- 1) Open lid
- 2) Slip cover over lid, pull down firmly and velcro at bottom of cover

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

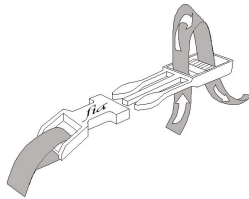


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

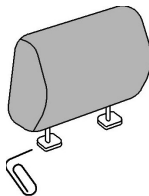

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

If you have any comments or concerns, please feel free to contact our

customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



**Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com**