 


If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

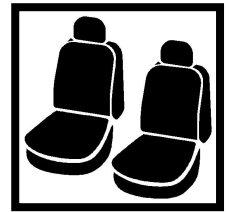

FEATURING  
**SUPER-GRIP®**  
THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS  
FOR  
NP99-22/ Oe39-22/ SL69-22/ SP89-22/ TR49-22/ TRS49-22

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVERS:**

 
- 1) Remove head rest (see note on reverse)
- 2) Move seat to most forward position
- 3) Slip cover over backrest and pull down firmly
- 4) Tuck flaps through crevice, under plastic panel and up to attach to Velcro at back
- 5) Replace headrests (see note on reverse)

**B) CUSHION COVERS:**

- 1) Position cover on seat to allow seat belt buckles through opening provided
- 2) Pass straps through crevice, under seat and buckle to front
- 3) Pass side straps through the opening between the molded plastic and the seat
- 4) Pass the straps around the back and buckle
- 5) Adjust straps and buckles to equalize tension

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

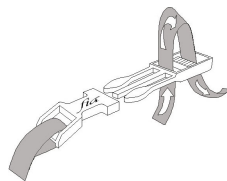


**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

**OR**

- B) - Push in side release buttons  
- Lift off

 (If unable to remove consult dealership)

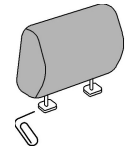

**3) RE-INSTALLATION OF HEADRESTS**

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

