 


If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

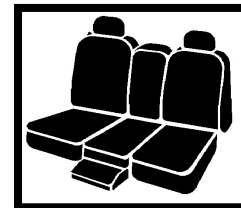

FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR
NP99-28/ OE39-28/ SL69-28/ SP89-28/ TR49-28/ TRS49-28

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVERS – “40” PORTIONS:

- 1) Remove head rest (see note on reverse)
- 2) Move seat to most forward position
- 3) Slip cover over backrest and pull down firmly
- 4) Tuck flaps through crevice, under plastic panel and up to attach to Velcro at back
- 5) Replace headrests (see note on reverse)

B) CUSHION COVERS –“40” PORTIONS:

- 1) Position cover on seat to allow seat belt buckles through opening provided
- 2) Pass straps through crevice, under seat and buckle to front
- 3) Pass side straps through the opening between the molded plastic and the seat
- 4) Pass the straps around the back and buckle
- 5) Adjust straps and buckles to equalize tension

C) BACKREST COVER – “20” PORTION

- 1) Open armrest / storage compartment
 - 2) Center cover under armrest
 - 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged
 - 4) Position adhesive back Velcro, supplied, to align with the velcro on cover
- NOTE: BEFORE PLACING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**

 
D) CUSHION COVER –“20” PORTION

NOTE: INSTALLATION IS EASIER IF YOU MOVE THE DRIVER’S SEAT FORWARD

- 1) Undo seat belt buckle from the elastic loop on seat
- 2) Center cover on the seat
- 3) Tuck front of cover between plastic organizer and seat
- 4) Pass side strap around back of seat and buckle
- 5) Position seat belt buckle through elastic loop on seat cover
- 6) Adjust straps and buckles to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

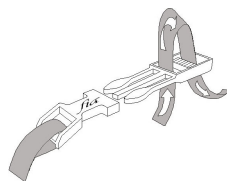


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

 (If unable to remove consult dealership)



3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com