



THIS COVER FITS A SEAT THAT FOLDS FLAT. IF THE PASSENGER BACK REST DOES NOT FOLD FLAT INTO A TABLE YOU HAVE THE WRONG SEAT COVER. (SEE PICTURE ABOVE)

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS**

FOR

NP99-35/ OE39-35/ SL69-35/ SP89-35/ TR49-35/ TRS49-35

If you have any comments or concerns,
please feel free to contact our
customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

**ONE PIECE BUCKET SEAT COVER
DRIVER'S SIDE ONLY**

A) BACKREST COVER –

- | | |
|---|--|
| <ol style="list-style-type: none"> 1) Remove head rest (see note) 2) Slip cover over backrest 3) Pull down firmly (see air bag warning below) 4) Recline backrest | <ol style="list-style-type: none"> 5) Pass the straps attached to center flap through crevice 6) Move backrest to upright position 7) Replace headrest (see note) |
|---|--|

B) CUSHION COVER

- | | |
|---|---|
| <ol style="list-style-type: none"> 1) Move seat to most forward position 2) Center cushion cover on seat 3) Pull straps to front from underneath the seat at crevice 4) Buckle to the front of the seat | <ol style="list-style-type: none"> 5) Pass side straps through the opening between the molded plastic and the seat, buckle to back flap of cover 6) Adjust all straps and buckles to equalize tension |
|---|---|

**TWO PIECE BUCKET SEAT COVER
PASSENGER BUCKET ONLY**

A) BACKREST COVER –

 
- | | |
|--|--|
| <ol style="list-style-type: none"> 1) Remove head rest (see note) 2) Open zipper 3) Slip cover over backrest 4) Pull down firmly (see air bag warning below) | <ol style="list-style-type: none"> 5) Close zipper (see note) 6) Replace headrest (see note) |
|--|--|

B) CUSHION COVER –

- | | |
|--|--|
| <ol style="list-style-type: none"> 1) Center cover on seat 2) Pass the front strap under seat and buckle to back flap 3) Pass side straps through the opening between the molded plastic and the seat, buckle to back flap of cover | <ol style="list-style-type: none"> 4) Adjust straps and buckles to equalize tension |
|--|--|

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

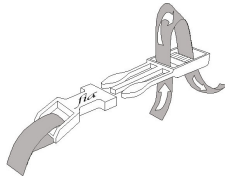

3) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

 
2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)



4) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
B) Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com