

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY




FEATURING

SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS**

FOR

 OE39-53/ SL69-53/ SP89-53/ TR49-53

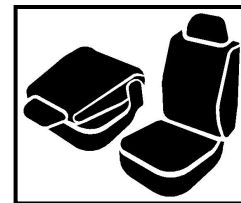

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

NOTE: THE TWO CUSHION PIECES ARE NOT IDENTICAL. THE SHORTER PIECE IS FOR THE DRIVER'S SIDE.

DRIVER SIDE

A) BACKREST COVER –

- 1) Remove head rest (see note)
- 2) Slip cover over backrest (see air bag warning below)
- 3) Pull cover down firmly
- 4) Tuck flaps under backrest and attach to velcro at back
- 5) Adjust velcro to equalize tension
- 6) Replace headrests (see note)

B) CUSHION COVER –

- 1) Center cover on seat
- 2) Tuck back flap through crevice
- 3) Pass the front strap under seat and buckle to back flap
- 4) Pass side straps (door side) through space between lever base and seat around the back and buckle
- 5) Pass side straps around the back and buckle
- 6) Adjust straps and buckles to equalize tension

PASSENGER SIDE

A) BACKREST COVER –


- 1) Remove head rest (see note)
- 2) Open zipper
- 3) Slip cover over backrest (see air bag warning below)
- 4) Pull down firmly
- 5) Fold down backrest. Close zipper (see note)
- 6) Replace headrest (see note)

B) CUSHION COVER –

- 1) Center cover on seat
- 2) Tuck back flap into crevice
- 3) Pass side straps (door side) through space between lever base and seat around the back and buckle
- 4) Pass side straps around the back and buckle
- 5) Adjust straps and buckles to equalize tension

NOTES:


1) SELF-LOCKING SUPER-GRIP® BUCKLE:

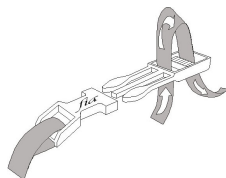

2) HEAD REST REMOVAL:

Push in side release buttons
- Lift off

 (If unable to remove consult dealership)

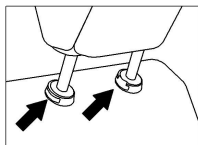

3) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

4) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com