



High Flow Transmission & Engine Oil Filter

INSTALLATION INSTRUCTIONS For Part Numbers 1156

This filter is designed to be installed on all Trans-Dapt Performance remote filter systems to increase engine & transmission life.

1. Drain oil and remove used filter or filters and return with used oil to your local oil recycling center.
2. Wipe down the inside of the oil filter base and gasket surface.
3. **Fill the filter with the proper transmission fluid or engine oil (found in your owner's manual),** lube the filter gasket with grease and install. Add oil and start engine.
4. Run engine in park for **5** minutes and check for leaks. Check the fluid level, add if low.

For best results always replace the filter with the *Trans-Dapt Performance High Flow Transmission & Engine Oil Filter part number 1156* available at your local *Trans-Dapt Performance* dealer.

Note: We recommend the use of a Factory Service Manual for valuable service information about your vehicle. Please call our tech line at 562-921-0404 to find your local *Hedman* or *Trans-Dapt Performance* Dealer.