


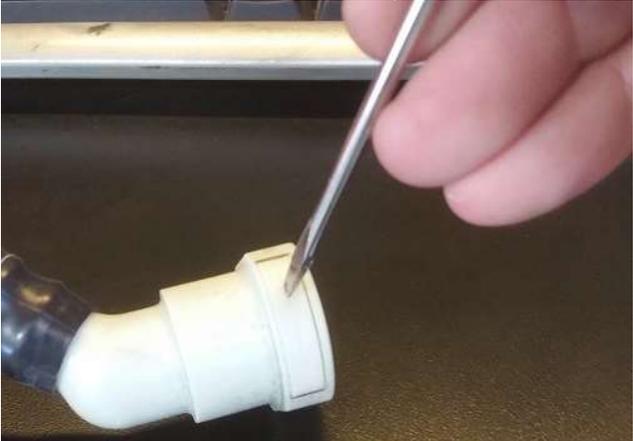


757-842-6497
WWW.JLOSC.COM

**J&L Oil Separator, Driver Side (2015-2018 SRT8 6.2L Hemi HELLCAT)
#3060D
Installation Instructions**

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) J&L Oil Separator w/fittings, (1) J&L Mounting bracket, (2) M4 screws, (2) 1/2" hose kits
2	Gather all of the following tools needed for the installation: 10mm socket, 6inch extension and ratchet, Phillips screwdriver
3	<p>Remove the factory PCV hose from PCV valve to intake tube- On the connector, depress the button on the connector and pull the entire fitting off.</p> 
4	<p>Remove pre-existing nut next to coolant tank. Install J&L Bracket over stud and reinstall nut.</p> 
5	Use the supplied screws and mount the Separator to the J&L bracket.
6	

Route hoses to their proper PCV connections. The J&L bracket may need to be adjusted to make the can sit level.

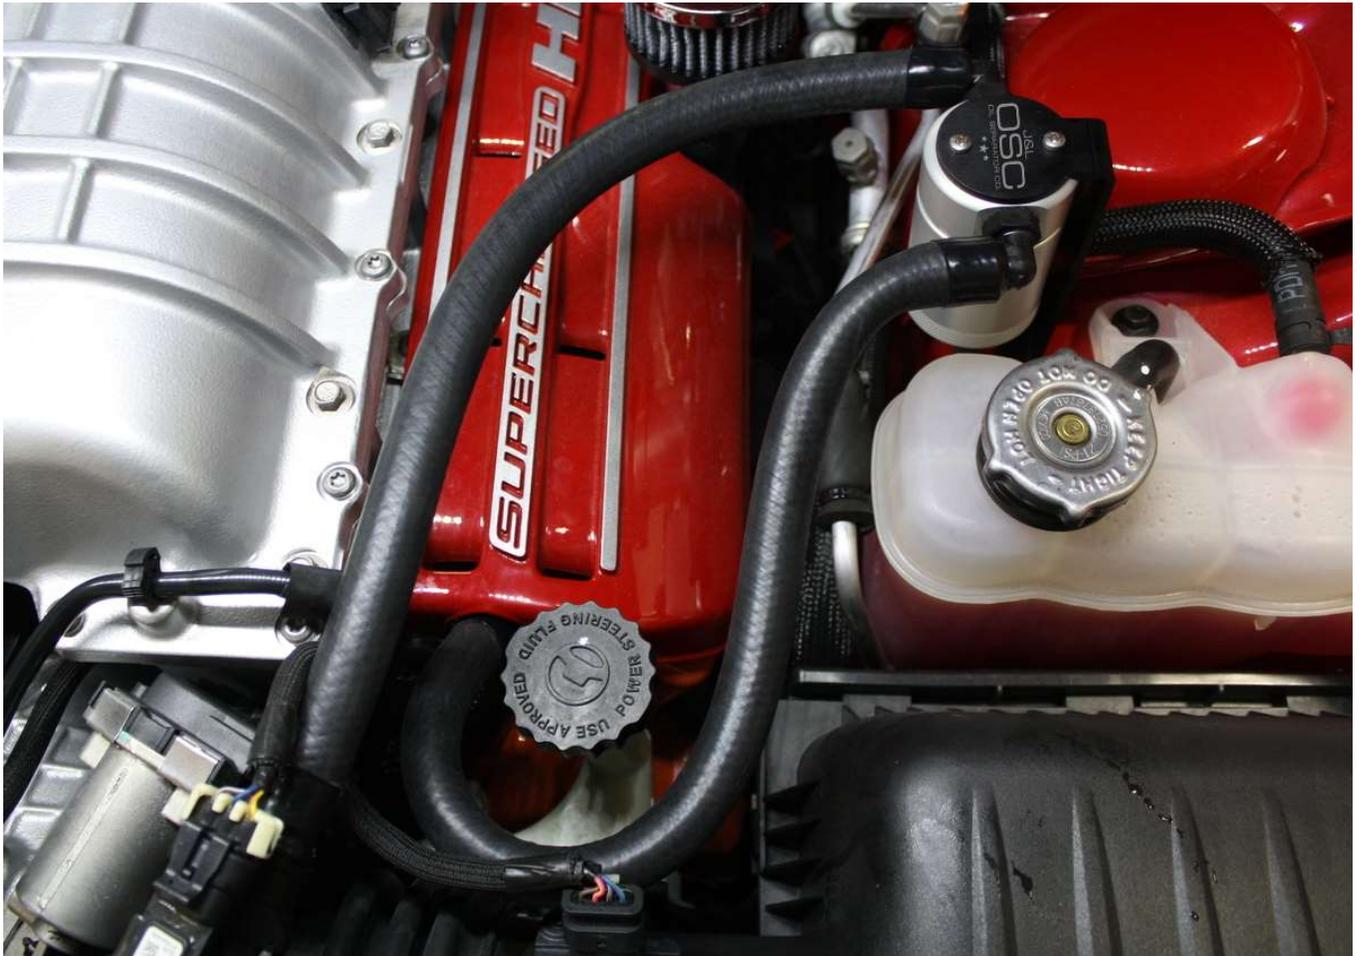

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail info@JLosc.com or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.JLosc.com/warranty

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLosc.com for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.