

757-842-6497 WWW.JLOSC.COM


J&L 3.0 Oil Separator (1997-2013 Chevy/GM Truck/SUV 4.8/5.3/6.0/6.2, Driver Side) #3084D

Installation Instructions

Install video available on our website www.JLosc.com Search: 3084D and click videos

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) J&L Oil Separator with hoses, (1) J&L Mounting bracket, (2) M4 screws, (1) M6 Bolt and Washer (2) Hose clamps
2	Gather all of the following tools needed for the installation: 10mm socket and ratchet, Phillips screwdriver, standard screwdriver and light oil for ease of install of hoses
	 □ Remove Engine cover by pulling upward on it at the throttle body. □ Remove PCV hose, it runs from the back of the driver side valve cover to the top of the intake manifold. 1997-2008 You may need to use a pair of pliers to assist in removal if its very tight. 2009-2013 See step #5

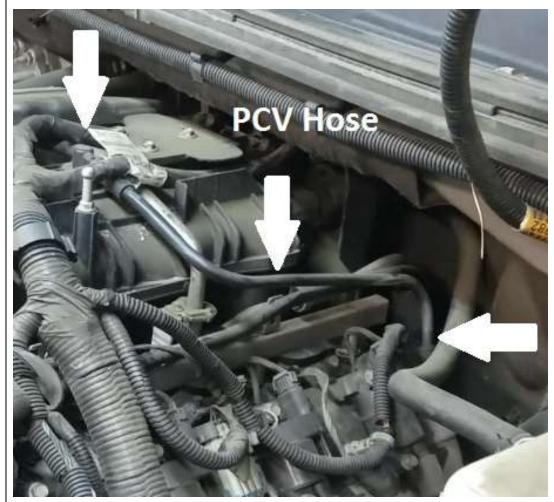

Page 1 of 3 11-08-22

Remove the 10mm Bolt from the alternator bracket, some trucks do not have a bolt here. If you do not use the supplied M6 bolt and washer to mount the J&L Oil Separator bracket.





4

1997-2008 Run the longer hose to the rear fitting on the valve cover. Run the shorter hose to the intake manifold. Use light oil on the fitting to help in sliding the hose up the barbs. This hose will not need any hose clamps.



2009-2013 Owners see next page

2009-2013 Models – Your PCV line is one solid piece, you will cut the line at the manifold in the straight section roughly 2" from the fitting on the manifold (see photos below). Slide the shorter J&L hose over the factory hardline and use supplied clamps to secure it. (Don't over tighten! Snug is fine!)

For the fitting going to the valve cover, cut the hose in a similar fashion in the straight portion and slide the longer J&L hose over.

You can trim the J&L Rubber hoses if needed for better fitment depending on where you cut the OEM line.









Reinstall Engine cover and you're done! Check J&L Oil Separator every 1000-1500 Miles for collection as it can vary vehicle to vehicle.

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail info@JLosc.com or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.JLosc.com/warranty

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLosc.com for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.

Page 3 of 3 11-08-22