



400-594 INSTALLATION INSTRUCTIONS 99-01 Ford Mustang 3.8L

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

Thank you for selecting AIRAID.



Parts List

- (1) Power Plate
- (2) Gaskets
- (4) 6mm x 60mm Bolts
- (4) 6mm Lock Washers
- (2) 6mm x 12 Flat Head Screws
- (1) Linkage Bracket

Tools List


- 10mm Socket
- Ratchet
- 4mm Allen Wrench
- Standard Screwdriver

Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove air cleaner housing from the throttle body.
3. Remove (2) bolts and (2) studs from throttle body. (Ref. "D")
4. Remove (2) bolts from throttle linkage bracket.
5. Remove throttle body from intake manifold; remove gasket and clean surfaces.
6. Install power plate using (2) gaskets. (Ref. "A")
 - A. Place one gasket between the throttle body and power plate.
 - B. Place second gasket between the power plate and intake manifold.
7. Locate (1) linkage plate using (2) flat head screws (Ref. "C"); relocate the throttle linkage bracket using (2) 6mm bolts.
8. Inspect & Test the throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjusting.
9. Reinstall the air cleaner housing. **Refer to Step 2**
10. Reconnect battery cable. Enjoy!

The sound of power...The "whistle" means its working!

Ref. "D"- (4) 6mm x 60mm Bolts
(4) 6mm Lock Washers

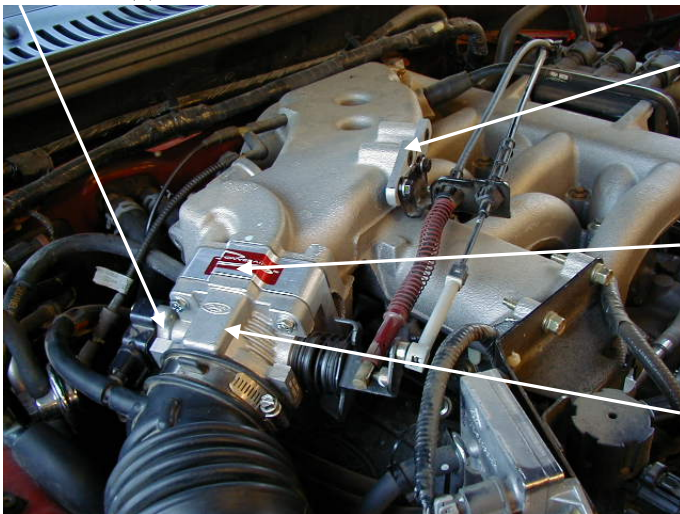

Ref. "C"- (2) 6mm Flat Head Screws
(1) Linkage Bracket

Ref. "A"- (1) Power Plate
(2) Gaskets

Ref. "B"- Throttle Body

Rev. 11/09/06