



# INSTALLATION INSTRUCTIONS

## Part Number: PL-1720

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® Filtercharger® seals properly.

**If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.**

### INSTALLATION:

1. Remove air filter tray and existing air filter. Clean out any debris that might be present.
2. Apply supplied sealing grease to the channel between the two sealing bumps. Smooth grease making sure both sealing bumps are covered. (Figs. 1, 2 & 3)
3. Install the K&N filter in the housing with the sealing surface toward the rear of the bike. (Figs. 4 & 5)
4. Apply a light coat of grease to the top of the rails on the air filter tray. This will help with air filter tray installation and removal. (Fig. 6)
5. Re-install filter tray and retention bolts.
6. With the K&N air filter installed, clean an area near the filter cavity and apply K&N Stop Decal. The decal will help notify others that this is a reusable air filter.

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**

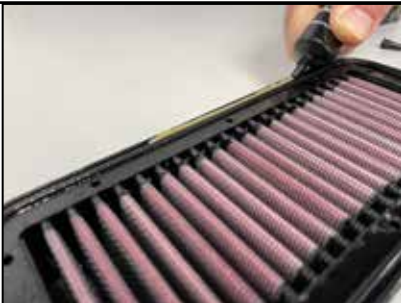


Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6

### CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.