

## Assembly, Installation, Operation and Maintenance Instructions

P/N: 32336

## **CL TS BALL PLATFORM SERVICE KIT**

Dealer/Installer: Provide a copy of these Instructions to the end user of this product. These Instructions provide important operating and safety information for proper usage of this product. Demonstrate the proper use of the product with the end user. Have the end user demonstrate that they understand the proper use of the product. Please refer to the husky weight demonstrator at:

<a href="http://www.huskytow.com/product-support/?dir=Literature/">http://www.huskytow.com/product-support/?dir=Literature/</a>. (requires Microsoft

excel)

End User: Read and follow all instructions included in this manual. Ask your Dealer /

Installer for assistance if you do not understand the proper use of the

product. Never remove any warning decals from the product.

Tools required:

15/16" wrench, socket and ratchet

1-7/8" socket

Adjustable wrench (large)

Torque wrench capable of 360 ft. lbs. of torque.

## Procedure:

- 1. Remove 5/8" hex bolt, nut and flat washer (save).
- 2. Remove hitch ball, hex nut, lock washer (save).
- 3. Discard old ball platform.
- 4. Place new ball platform on top surface of wd head.
- 5. Insert hitch ball threaded end through ball platform and hole in top surface of wd head
- 6. Place lock washer on threaded end and thread hex nut on all the way.
- 7. Torque nut to 360 ft. lbs. of torque, if needed, use a large adjustable wrench on flats of hitch ball.
- 8. Replace 5/8" hex bolt, nut and flat washer back in threaded hole on lower side of channel.
- 9. Tighten 5/8" hex bolt 1/4 to 1/2 turn.
- 10. Tighten 5/8" hex nut securely.

