



SILVER SPORT

Transmissions

GM LS BELLHOUSING INSTALLATION MANUAL



1. Clean mounting surface of engine and dowel pins. **This is very important to ensure your bellhousing runout is done properly.**
2. Install the bellhousing and inspect for proper alignment to crankshaft using SST Bellhousing alignment inspection and correction procedure MAA-00101.

Transmission to bellhousing torque (M10 x 1.5)	37 lb ft	50 Nm
Bellhousing to Engine torque (M10 x 1.5)	37 lb ft	50 Nm

Inspection covers, offset dowels, bellhousing alignment tools and hardware can be purchased at Silver Sport Transmissions.

SILVER SPORT TRANSMISSIONS
Phone: (865) 609-8187 Toll Free: (888) 609-0094

SHIFTSST.COM

FOLLOW FACTORY SERVICE MANUAL (FSM) RECOMMENDED SAFETY PRECAUTIONS. TRANSMISSION REMOVAL AND INSTALLATION IS A LABOR INTENSIVE JOB, WHICH CAN RESULT IN SERIOUS INJURY OR DEATH IF CAUTION IS NOT TAKEN. PLEASE BE CAREFUL PERFORMING THIS JOB, OR HAVE A PROFESSIONAL PERFORM THE JOB FOR YOU. REFER TO FACTORY SERVICE MANUAL FOR ADDITIONAL DETAILS OF THE PROCEDURES BELOW, AS REQUIRED.

The material herein is the intellectual property of Silver Sport Transmissions ("SST") and is to be used by SST customers or their authorized installers for the sole purpose of installing SST-supplied transmissions and related parts. Under no circumstances shall the manual or any portion thereof be copied, duplicated, distributed or incorporated in any written or printed document without the express written approval of Silver Sport Transmissions.