

IMPORTANT

READ BEFORE INSTALLING VALVE SPRINGS

Not all valve springs can be used with a valve rotator. All new springs should be checked for coil bind. Once the valve springs are installed onto the heads, the installer must make sure that there is at least .060" clearance in between the center coils of the springs. (Clearance should be measured with the valves in open position and the springs compressed)