

IMPORTANT!!!!

OIL WARNING & BREAK IN PROCEDURE!

THIS UNIT IS BEING SHIPPED WITHOUT OIL – Please add transmission fluid prior to operating your transmission. The oil capacity of your new **Richmond Gear Super T10** transmission is **2.4 U.S. pints.** (See page 3 in owner's manual)

We **HIGHLY RECOMMEND** that this fluid be changed after an initial break in period (see break in procedure below) of 1000 miles. We also recommend that the transmission fluid in your unit be changed every 12 months or 12,000 miles, or sooner, depending on climate and storage conditions.

PROPER TRANSMISSION BREAK IN PROCEDURE – As a precaution, and to insure proper break in of your **Richmond Gear Super T10** transmission, we recommend driving your vehicle under normal driving conditions with **no power shifting or excessive throttle for the first 1000 miles**, to insure a gradual and proper wear in of the mating gear teeth and bearings. This will coincide with your first transmission fluid change at the 1000 mile interval as specified above. After this break in period, you will be able to use this transmission within the torque limits of the transmission as specified in your **Richmond Gear Super T10** owner's manual.

TO INSURE PROPER SEALING – It is recommended that the following items be sealed with thread sealant or Teflon tape prior to installation:

1. Oil filler plug
2. Shifter mounting holes



Chicago, IL.