



REVOLVER X2 & X45 FORD RANGER 24 & 25+ INSTALLATION SHEET


Any damaged or missing parts?

Parts will be shipped to you directly.
Call 818-365-9000 Mon - Fri 8:30 am - 6:00 pm EST or email support@bakindustries.com

Prior to installation, it is important to examine the bed rails of your vehicle to accurately determine which model year you have. For our purposes, if your bed rail stake pocket covers look like picture A, we refer to your truck as the 2024 model year. If they look like picture B, we refer to your truck as the 2025 model year.

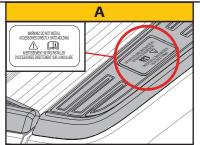

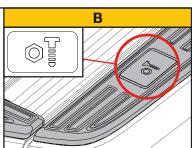

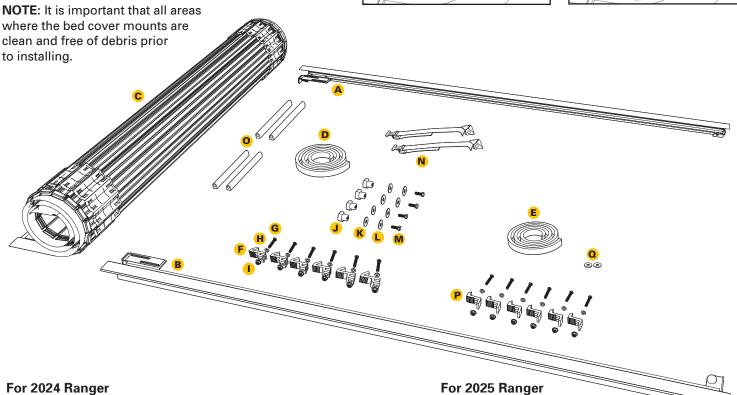

PARTS INCLUDED

- A 1x Passenger side cover rail
- B 1x Driver side cover rail
- C 1x Bed cover

IN YOUR KIT

- 1x Bulkhead seal
- E 1x Bulkhead seal (For 25 Models Only)

1 HARDWARE BAG INCLUDING (2024)

- F 6x Clamps
- **G** 6x Clamp bolts
- H 6x clamp washers
- 6x clamp nuts
- 4x Lock knobs
- K 4x Large flat washers
- 4x Rubber washers
- M 4x Mounting bolts
- 2x Cover straps
- 4x D-shaped bumpers

1 HARDWARE BAG INCLUDING (2025)

Note: Components G-O are the same in this kit along with the two listed below.

- 6x Clamps
- 2x Oversized washers


TOOLS REQUIRED


- 9/16" wrench or socket
- 10mm wrench or socket
- 30 Torx wrench

TOOLS RECOMMENDED


- Torque wrench
- Blow dryer or heat gun

Install the bulkhead seal. Clean the top of the bulkhead where the seal will go with soap and water to remove dirt and debris. Then clean the same area with isopropyl alcohol to remove wax or grease and to evaporate any remaining water. Allow the surface to dry. The seal should be placed flush with the front edge of the bulkhead and should be snug between the truck bed rails. Peel the backing paper from the bulkhead seal (D) for 2024 models and bulkhead seal (E) for 2025 models and apply pressure to the entire seal to make sure that the adhesion is good.

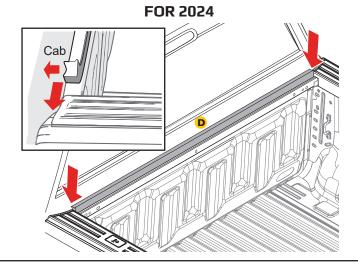

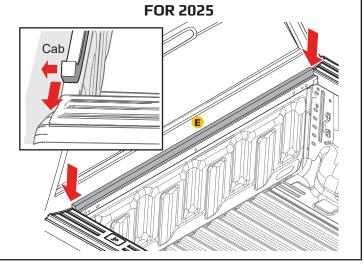


Remove three of the four factory plastic clips as shown below. Pry out the center first, then pry out the entire clip. These will not be used again unless you permanently remove the bed cover assembly.

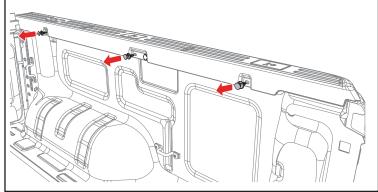


Position the cover rail (A) on the truck rail with the slotted bracket pushed all the way toward the front/cab and the bulkhead. If the truck is equipped with a drop-in bedliner, remove the foam pads located at the front of the slotted brackets.


NOTE: Some drop-in bedliners may require trimming in the corners to fit the rail into the opening.

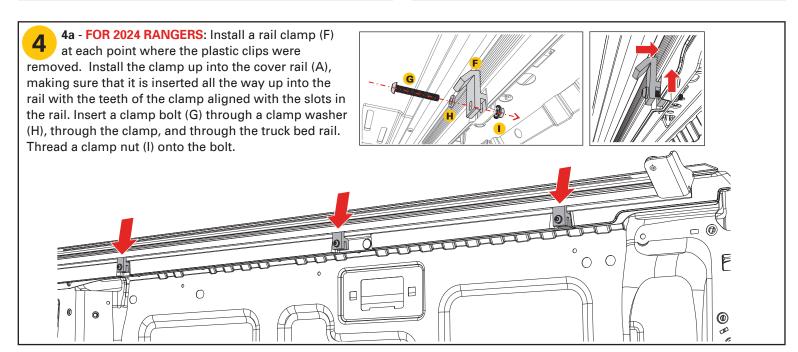


4b - **FOR 2024 RANGERS**: Mount the cover strap (N) to the forward most clamp (F) as shown. Use the provided washer (H) to retain the strap. Tighten to 8 ft/lbs (11Nm) of torque. Mount a strap to both sides.

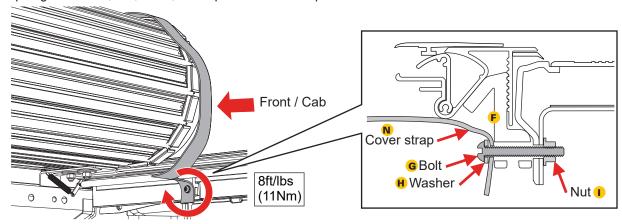



4c - FOR 2025 RANGERS: Install a rail clamp (P) at each point where the plastic clips were removed. Install the clamp up into the cover rail (A), making sure that it is inserted all the way up into the rail with the teeth of the clamp aligned with the slots in the rail. Insert a clamp bolt (G) through oversized washer (Q), through the clamp, and through the truck bed rail. Thread a clamp nut (I) onto the bolt.

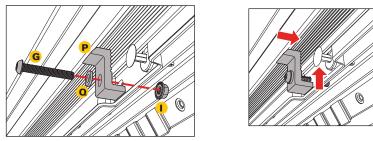


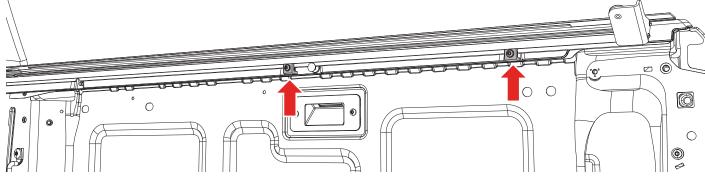


4d - FOR 2025 RANGERS: Mount the cover strap (N) and the forward most clamp (P) as shown. Use the provided oversized washer (Q) to retain the strap. Tighten to 8ft/lbs (11Nm) of torque.

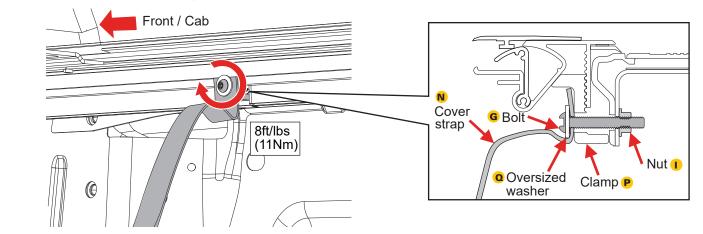


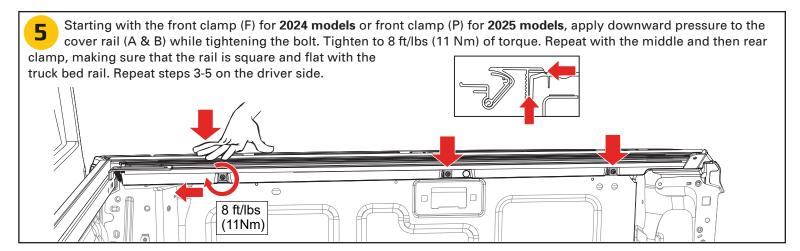


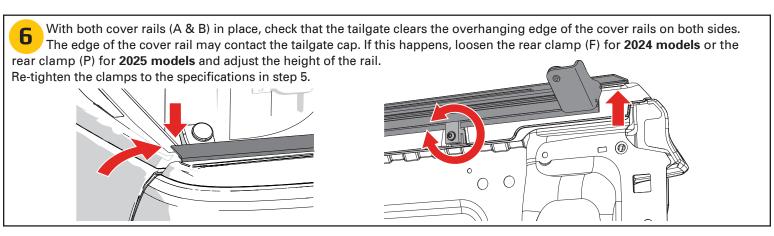




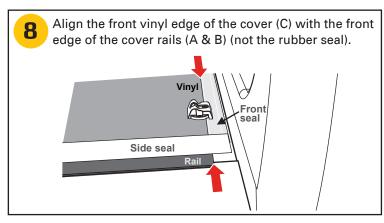

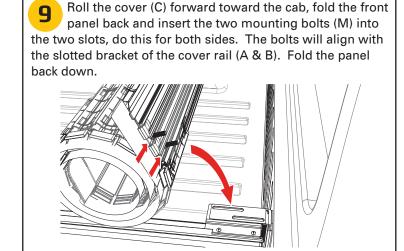

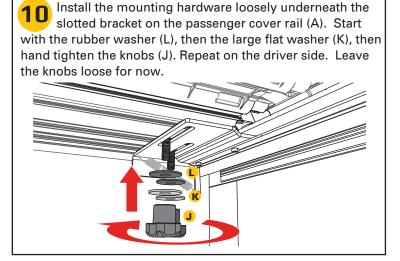


Open and close the cover (C) several times to verify that it rolls freely. The cover should be square with the cover rails (A & B) and roll freely between the rails.

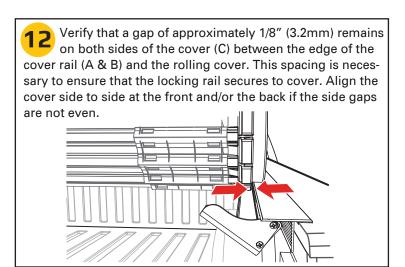

With the cover (C) closed, push the cover toward the tailgate to position it for contact with the D-seal and the tailgate.


Tailgate to D-seal contact assembly


D-seal Tailgate

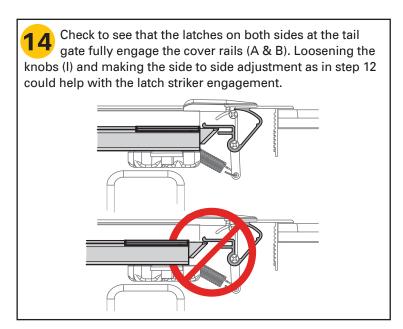


When correctly installed, the vinyl edges of the cover (C) will align squarely with the cover rails (A & B) in all four corners. The latch assembly will align with the rail locking levers at the tailgate on both sides.


The slam latch MUST hit the locking levers squarely, and on both sides.

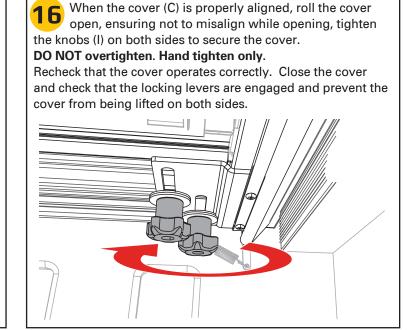

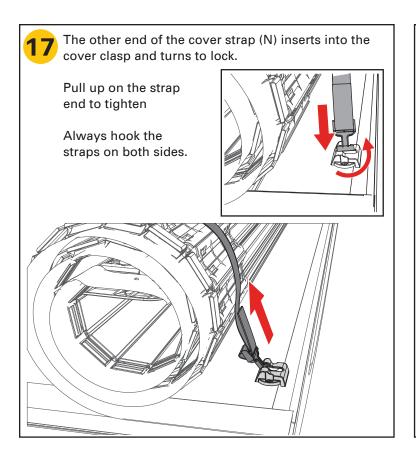


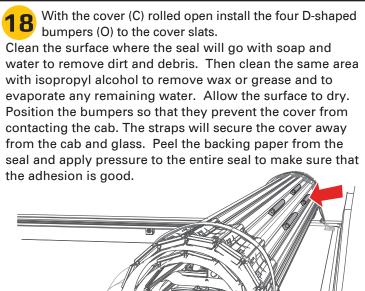


Note: If the side seals of the cover appear wrinkled, exposure to the sun will assist the seals to lay flat. Applying heat with a hair dryer or carefully with a heat gun will also smooth the seals.

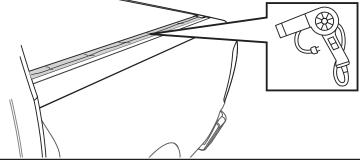

OPENING COVER: Pull down on the latch release cable located on either side of the cover (C) and rotate the tail rail forward and into a rolling motion. When driving with the cover open, the cover must be rolled toward the cab and secured with both strap clamps.

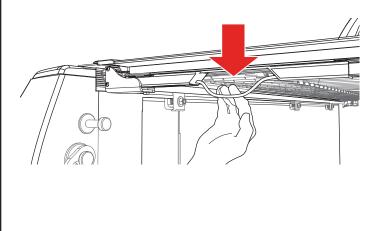


ROLLED UP POSITION: To drive with the cover (C) in the open position, use the cover straps (N). Roll the cover forward, twist and insert the clips into the cover clasps. Ensure that **BOTH** strap clamps are fully inserted into the clasps, pull on the end of the strap to tighten.

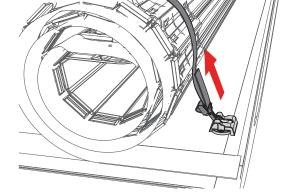

Prior to vehicle operation, the truck bed cover MUST be properly secured.

CLOSING COVER: Roll the cover (C) toward the tailgate and rotate the tail rail down to lock the latches into the rotating locking levers. Note that the locking levers and latches will make a click sound when engaged.

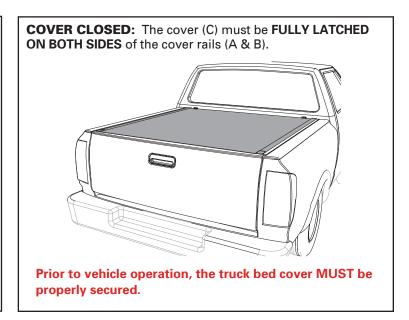

CARE AND MAINTENANCE

The truck bed cover requires occasional cleaning with mild automotive soap and water only. Avoid using abrasive cleaners as they may dull the finish. Some chemicals and fluids such as insect repellents, oils, solvents, and lubricants could potentially damage the rubber hinges and seals and void the warranty.

CAUTION

Always read the ingredients of any product you are using to clean your truck bed cover. Make sure that you use only products that are safe for use with rubber. Many cleaners contain chemicals that could permanently discolor or damage your hinges and seals.

Periodically check that your cover is securely attached to your truck bed and working as intended. Inspect all hardware such as clamps and cover retainer clamps to ensure they are properly installed and working as intended. Covers that are used at high frequency or subject to rough roadways and/or heavy vibration conditions may cause the cover to require adjustment.

It is also recommended that you regularly inspect and service each panel latch. Clean away any excess dirt or grime. Ensure all latches move freely in and properly engage the side rail to provide optimal performance and security.

SAFETY INSTRUCTIONS

- DO NOT place objects on or against cover or framework.
- DO NOT tie cargo to truck bed cover or framework.
- DO NOT operate vehicle with objects on top of the cover.
- NEVER allow children or pets to occupy the truck bed with the cover in the fully closed position.
- The cover is not airtight. Special care is required to keep cargo clean and dry.
- Truck bed covers will not prevent theft of contents inside the truck bed.

TROUBLESHOOTING TIPS

Leaning Rails: Improper engagement of the clamps can cause the rails to appear tilted inward. To ensure the clamps are properly installed loosen the nut. Adjust the clamp(s) until you have full engagement of sections 1 & 2, as shown below. When the clamp and rail are properly engaged an audible click will be heard. Overtightening the bolt can also contribute to tilted rails. **Do NOT over torque the bolt**.

Water Intrusion: Make sure the retaining clamps are tight and properly engaged to the side rails. Check that the bulkhead seal is in place and the cover is resting on it. Make sure that all latches are engaged to the side rails and adjust if needed. Check that the side rails are installed flush with the top of the bed rail.

Sticking Latch: The cable could be pinched in or under the cable guide extrusion. Loosen the three screws on the center cable cover (bar), located in the middle of the panel. Slightly lift up on the cable guide extrusion. Pull on both sides of the cable.

Wavy Side Seal: The seal may be wavy when removed from the box. Allow ample sunlight for seal to lay flat and relax.

LIMITED WARRANTY

WARRANTY COVERAGE

This truck bed cover is warrantied against defects in materials or workmanship as follows. This warranty is void if the product has been damaged in an accident, or due to neglect, unforeseeable use, improper installation, improper servicing, or other cause not arising out of defects in material or workmanship.

Revolver X2 - The truck bed cover carries a limited warranty for three (3) years from the original date of purchase, subject to the terms below.

Revolver X45 - The truck bed cover carries a limited warranty for **five (5) years** from the original date of purchase, subject to the terms below.

WARRANTY IS NOT TRANSFERABLE

The warranty is to the initial owner purchasing the truck bed cover and it is not transferrable to a subsequent end user. Proof of purchase may be required to enforce these warranty rights.

WARRANTY CONDITIONS

Failure to follow care and use instructions will void the warranty.

- Clean with mild automotive soap and water only.
- Cover must be secured at all points when vehicle is in motion.
- Check all clamps and retention mechanisms for tightness after a week of driving following installation (or re-installation) of the cover and periodically thereafter.
- Before opening, the cover must be free of all foreign materials including snow and ice.
- Do NOT tow your vehicle from the rear with the cover on your vehicle. If towing from the rear is required, the cover MUST be removed from the vehicle and properly stored.

WARRANTY PERFORMANCE

If all warranty conditions are met, a defective truck bed cover or hardware component will either be repaired or replaced (at our option). We reserve the right, for any warranty, to substitute a newer model or bed cover having similar form and function, to offer a warranty discount on an entire replacement system, and/or provide remedies other than those mentioned in this document.

WARRANTY RETURN

A Return Material Authorization number must be obtained from our Customer Service Department prior to returning any product. We may require the original item to be returned postage prepaid for final determination. Shipping charges will apply for any repair or replacement. Other than postage or shipping charges, no charge will be made for repair or replacement under this warranty.

This warranty gives you specific legal rights. As an owner, you may also have additional rights and remedies under the laws of your state.

WARRANTY REGISTRATION

Warranty registration must be on file and/or proof of original purchase (detailed and dated receipt) required for warranty to be effective.

https://realtruck.com/bak-warranty

