Installation Instructions

2650-1352-00

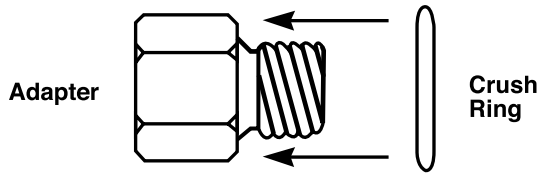

**When installing metric adapter,
tighten until the crush ring is flattened.
DO NOT OVERTIGHTEN.**

STACK, Ltd. Wedgwood Road Bicester OX26 4UL UK **+44 (0) 1869 240404**

Installation Instructions

2650-1352-00

**When installing metric adapter,
tighten until the crush ring is flattened.
DO NOT OVERTIGHTEN.**

STACK, Ltd. Wedgwood Road Bicester OX26 4UL UK **+44 (0) 1869 240404**

Installation Instructions

2650-1352-00

**When installing metric adapter,
tighten until the crush ring is flattened.
DO NOT OVERTIGHTEN.**

STACK, Ltd. Wedgwood Road Bicester OX26 4UL UK **+44 (0) 1869 240404**

Installation Instructions

2650-1352-00

**When installing metric adapter,
tighten until the crush ring is flattened.
DO NOT OVERTIGHTEN.**

STACK, Ltd. Wedgwood Road Bicester OX26 4UL UK **+44 (0) 1869 240404**

Installation Instructions

2650-1352-00

**When installing metric adapter,
tighten until the crush ring is flattened.
DO NOT OVERTIGHTEN.**

STACK, Ltd. Wedgwood Road Bicester OX26 4UL UK **+44 (0) 1869 240404**

Installation Instructions

2650-1352-00

**When installing metric adapter,
tighten until the crush ring is flattened.
DO NOT OVERTIGHTEN.**

STACK, Ltd. Wedgwood Road Bicester OX26 4UL UK **+44 (0) 1869 240404**

Installation Instructions

2650-1352-00

**When installing metric adapter,
tighten until the crush ring is flattened.
DO NOT OVERTIGHTEN.**

STACK, Ltd. Wedgwood Road Bicester OX26 4UL UK **+44 (0) 1869 240404**

Installation Instructions

2650-1352-00

**When installing metric adapter,
tighten until the crush ring is flattened.
DO NOT OVERTIGHTEN.**

STACK, Ltd. Wedgwood Road Bicester OX26 4UL UK **+44 (0) 1869 240404**