PART# 9453 & 9454
FAN SHROUD
INSTALLATION INSTRUCTIONS

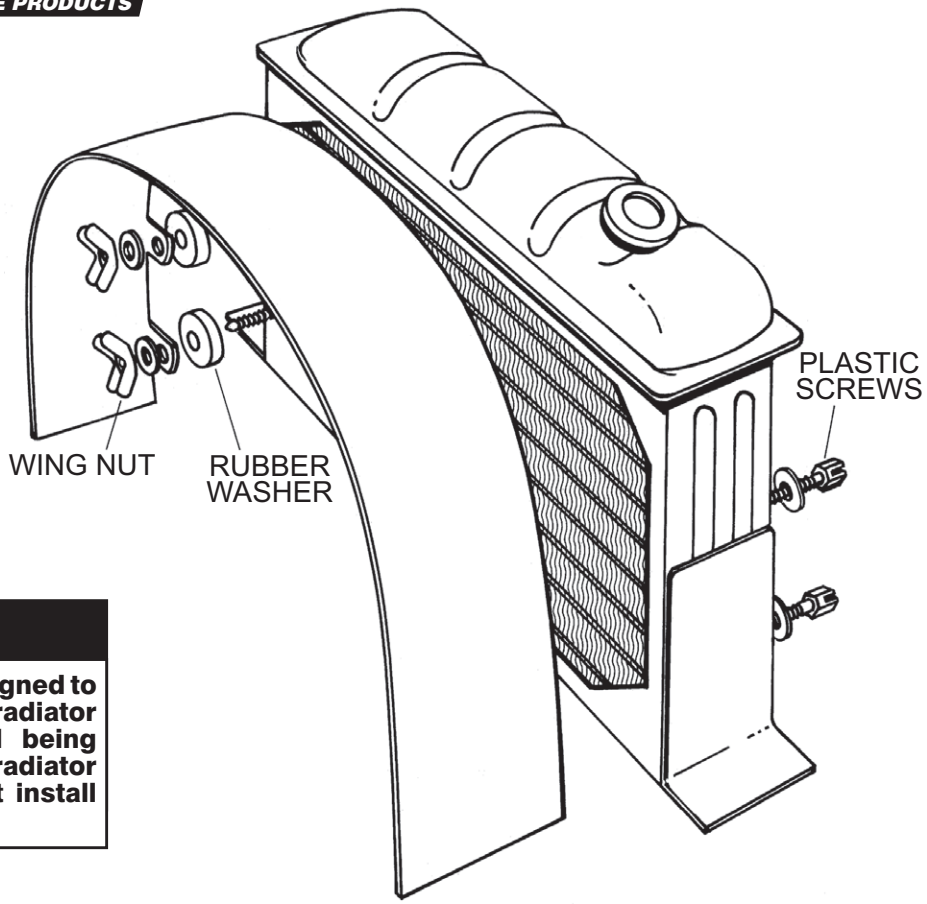

IMPORTANT

This fan shroud is not designed to provide support for the radiator itself. If the fan shroud being removed is part of the radiator support structure, do not install this fan shroud.

1. Turn off motor and disconnect the negative cable on the battery. The motor is to remain off during the entire installation period.
2. Remove the original fan shroud. In some cases, the fan will also have to be removed.
3. If the fan was removed, reinstall it at this time.
4. Position the Trans-Dapt Performance shroud on your radiator. Allow at least 1” clearance between the shroud and thebladed on the fan.
5. Insert one of the plastic screws from the front of the radiator, between the radiator cores so that it extends through the radiator and a tab on the fan shroud. Spin on a wing nut and secure it loosely. If the top of the radiator can extend down below the radiator core, it may require the use of the rubber washers between the radiator core and the shroud, so that the shroud is parallel to the radiator surface.
6. Recheck the clearance between the fan and the shroud.
7. Install the remaining three plastic screws & hardware into the other three tabs in the fan shroud.
8. Recheck clearance between the fan and the fan shroud by manually turning the fan.
9. If the fan shroud has 1" of clearance with the fan blade, tighten all mounting hardware.
10. If you removed & reinstalled the fan blades, check the fan bolts to ensure they are properly torqued.
11. Check for hood clearance before closing the hood.

12438 Putnam Street • Whittier, CA 90602 tel (562) 921-0404 • fax (562) 921-7515
website: www.hedman.com • email: techsupport@hedman.com