



FITTING INSTRUCTIONS

HARNESS PART NUMBER: **SJBLINX.**

HARNESS DESCRIPTION: **ARB SOLIS LINX PATCH.
4m LINX PATCH HARNESS.**

APPLICATION: **ARB WIRING LOOM SOLIS. #SJBHARN.**

FITTING TIME: **10 MINUTES + 60 MINUTES FOR #SJBHARN.**

This loom is designed for installation of the LINX device to operate Solis driving lights.

This product does not include the LINX device, this must be purchased separately.

These instructions require the following ARB Solis loom to install and operate:

- #SJBHARN ARB WIRING LOOM SOLIS.

NOTES:

- ◆ This loom must only be installed in conjunction with the ARB WIRING LOOM SOLIS part# SJBHARN.
- ◆ This product should be installed exactly as per these instructions.
- ◆ The installation of this product may require the use of specialised tools and/or techniques.
- ◆ It is recommended that this product is only installed by trained personnel.
- ◆ These instructions are correct at the date of publication. ARB Corporation Ltd. cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer.
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components.
- ◆ Ensure all electrical connections are correct and tight with good earth connection to the engine and/or chassis. Failure to do this may result in component failure or fire.
- ◆ Make sure all wires are securely fastened away from any hot, sharp or moving surfaces. Do not fasten any wires to the brake lines or fuel lines.
- ◆ Make sure that all electrical connections are strong and well insulated.
- ◆ Work safely at all times.

ARB 4x4 ACCESSORIES

Corporate Head Office

42-44 Garden St
Kilsyth, Victoria
AUSTRALIA, 3137

Tel: +61 (3) 9761 6622

Fax: +61 (3) 9761 6807

Australian enquiries
North & South American enquiries
Other international enquiries

sales@arb.com.au
sales@arbusa.com
exports@arb.com.au

www.arb.com.au



Do not pull on the
wiring harness
forcefully




Do not connect
wiring harness to
engine




Ensure all connections
are tight and pushed
home

FITTING PROCEDURE:

1. Remove the negative (-ve) cable from the vehicle battery.
2. Install the ARB WIRING LOOM SOLIS part #SJBHARN as per instructions supplied with the loom, however, do not install the Touchpad, Illumination signal wire or Plug & play connector. These will be replaced with LINX.
3. With the ARB SOLIS LINX PATCH loom part #SJBLINX, locate the 5-Pin connector (Figure 1 Ⓐ). With the #SJBHARN loom, locate the Touchpad connector (Figure 1 Ⓑ). Connect the 5-Pin connector with the Touchpad connector.

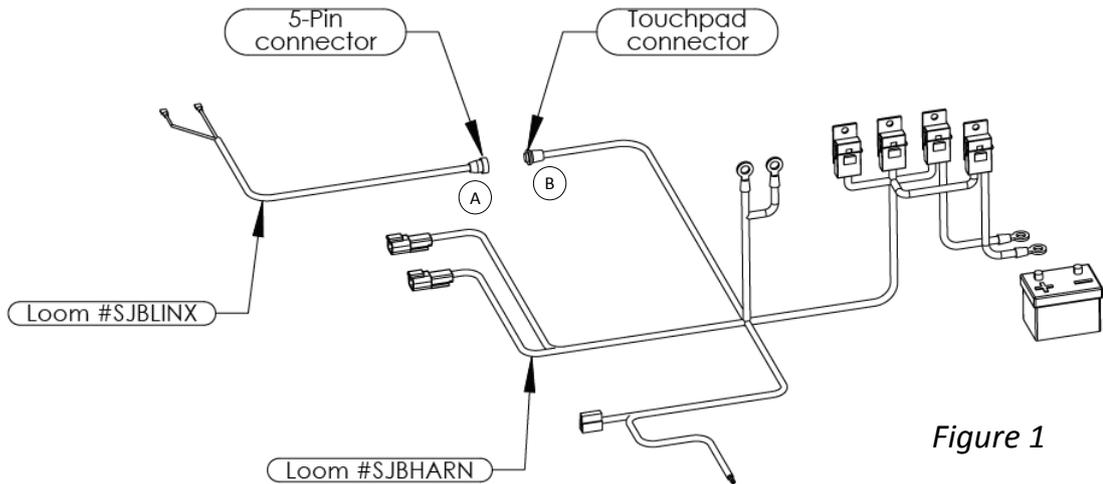

4. Route the #SJBLINX loom and ensure the White and Blue wires reach the LINX controller. Secure the loom with cable ties or tape.
5. Follow the ARB LINX installation guide to insert the White and Blue wires (Figure 2) to the required LINX switchboard outputs. The ARB LINX installation guide is available for download from <https://linx.arb.com.au/>

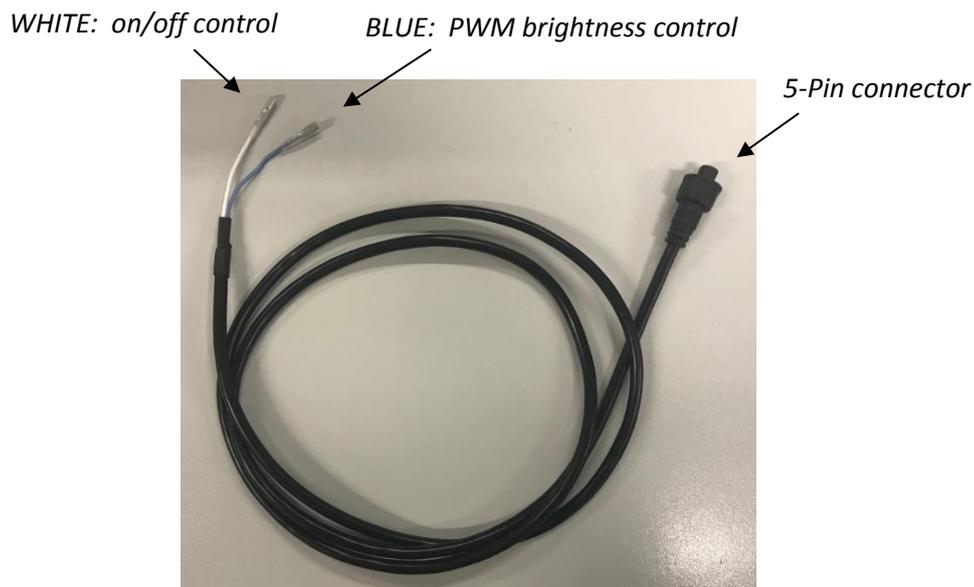

6. Reconnect the negative (-ve) cable to the battery.
7. Check operation of your Solis driving lights with the LINX device.