

DV8 OFFROAD INFEND-02FB(FR)

JK FRONT SINGLE PIECE INNER FENDERS

1. Remove your stock factory JK inner fenders and fender flares from the Jeep.




2. Remove your new DV8 front inner fenders from their packaging.
3. Locate and separate the driver and passenger side pieces.
4. Remove the provided rivet gun and rivets.




5. Take one side, either driver or passenger, and hold it within the wheel well. Ensure that the front corner near the grill, and the back edge closest to the pinch weld near the bottom of the door align.



6. Once aligned, mark holes in inner fender on Jeep body. Using 1/8" drill bit, drill marked holes in body. The inner fender will sit on top of the edge of the wheel well.

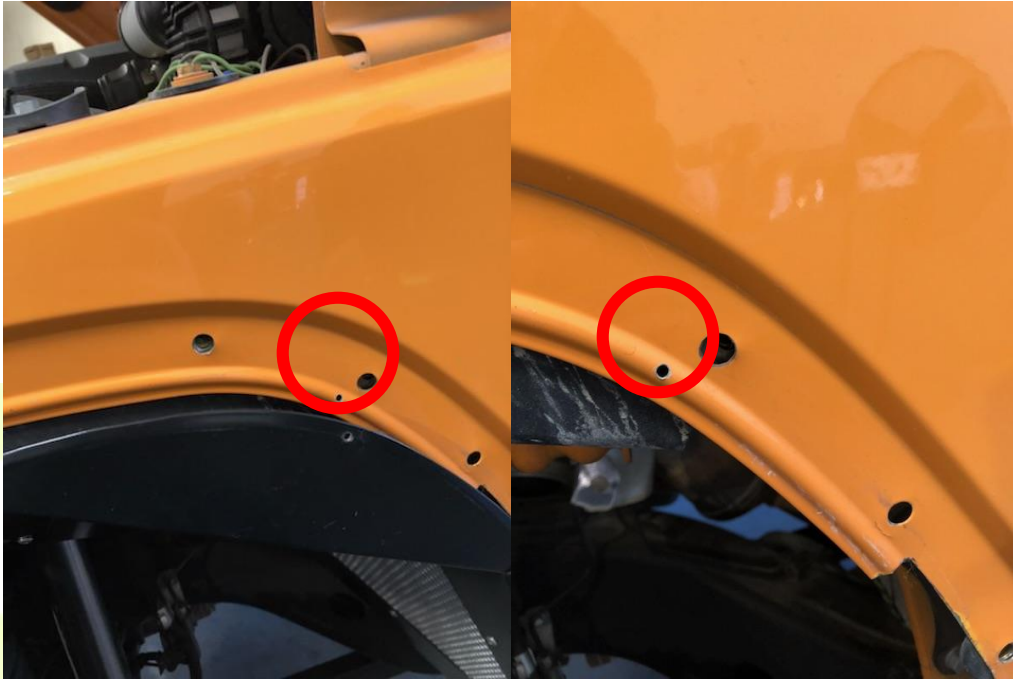

7. Realign inner fender. Using rivet gun and provided rivets, install the inner fender. Ensure proper inner fender alignment prior to install rivets.

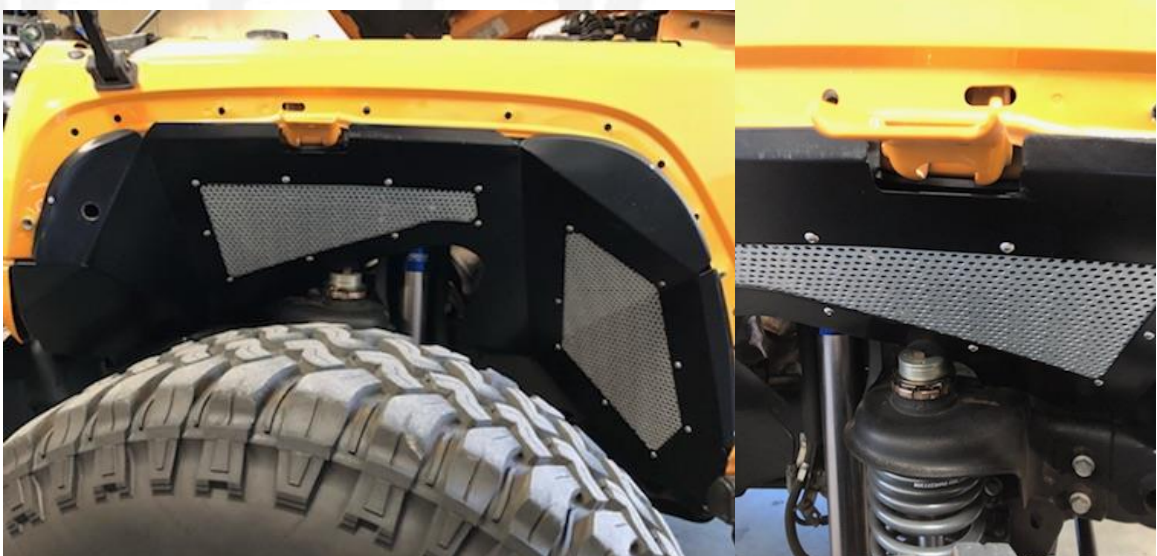

8. Reinstall fender flare.

If you have any questions or concerns, please feel free to call us at 951-680-9595 or email info@dv8offroad.com