



# 2015+ GMC Canyon Rear Bumper Installation

## RBGC-01

1. Open your new RBGC-01 and inspect to ensure bumper, brackets, and hardware are in the package without damage.
2. Begin by unplugging trailer wiring and license plate wiring from factory bumper.

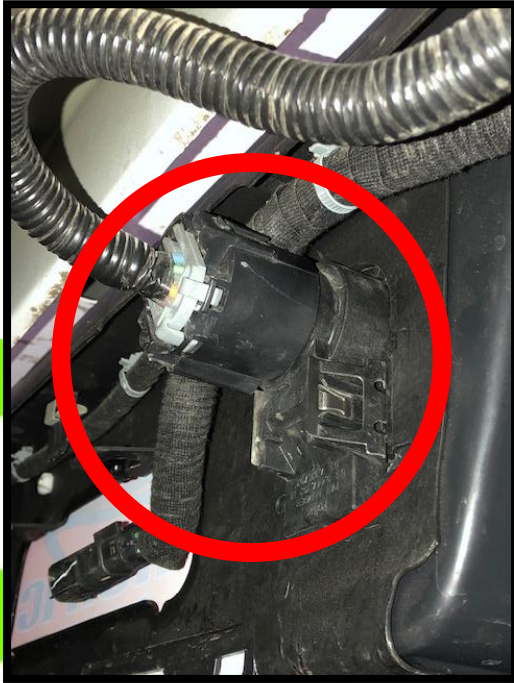


3. Remove factory bolts on both side of bumper. Keep factory mounting hardware since it will be reused.

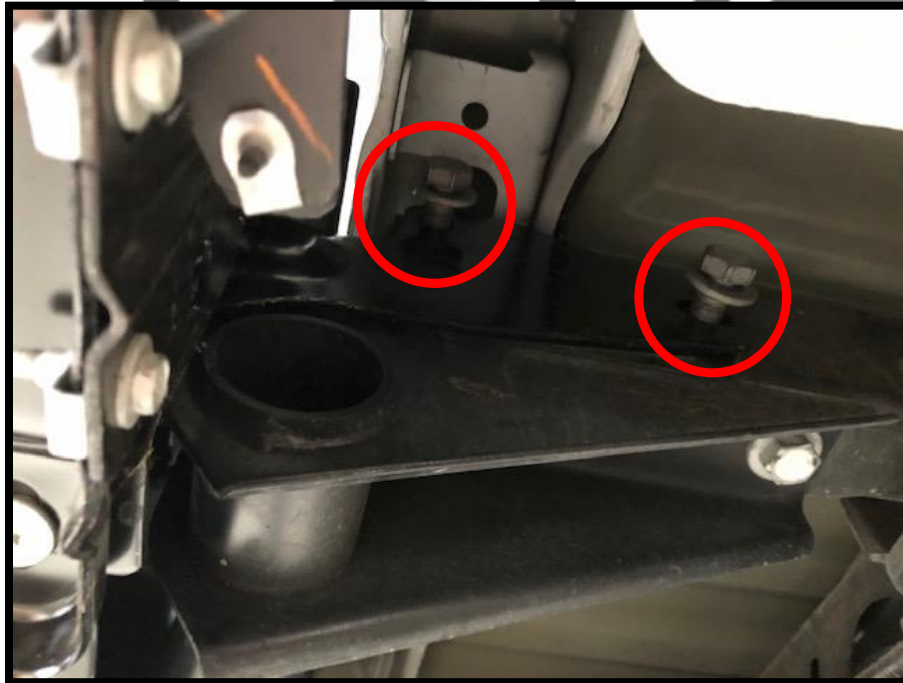

4. Once bumper is removed, install the new bumper brackets onto the frame of the truck using factory hardware. **NOTE: Leave all hardware loose until the end. This will allow for adjustment later on.**



5. Using provided hardware, mount the bumper to the brackets and leave loose.

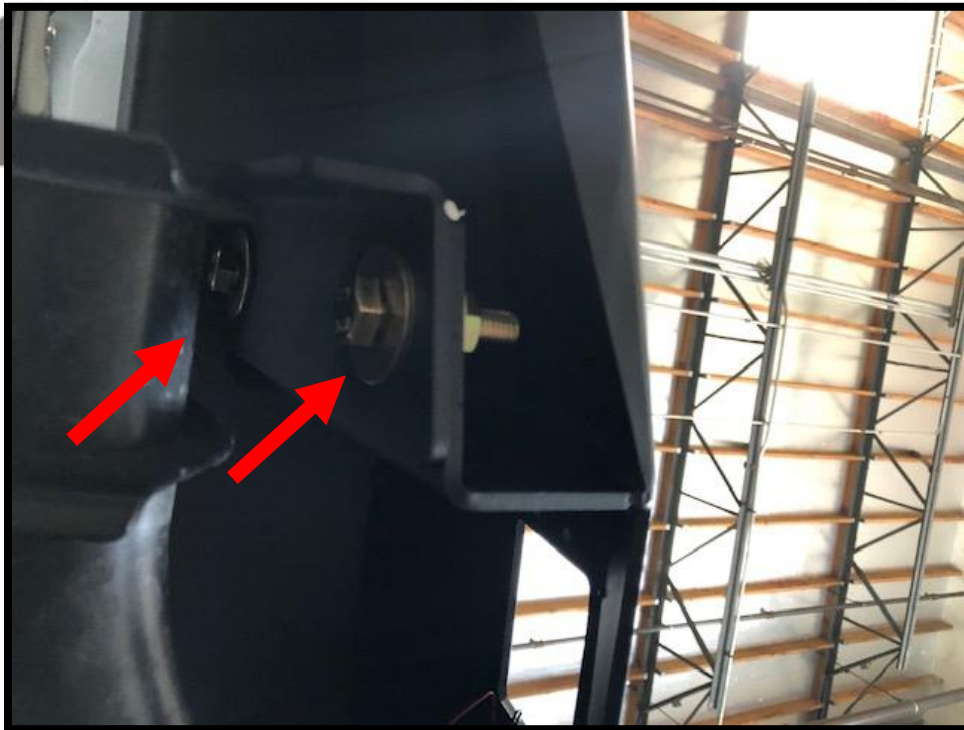



6. Remove the plug housing for the trailer wire from the factory bumper and install it to your new bumper.
7. Plug in the trailer wiring and wire the license plate for the new bumper to the wiring on the truck.
8. Install the tube for the spare tire release into the new bumper.



9. Adjust bumper and ensure proper fitment, then tighten all bolts.



If you have any questions or concerns, please email us at [info@dv8offroad.com](mailto:info@dv8offroad.com) or call us at 951-680-9595.