


# TACOMA ROOF RACK 2016+ (RRTT1-01)

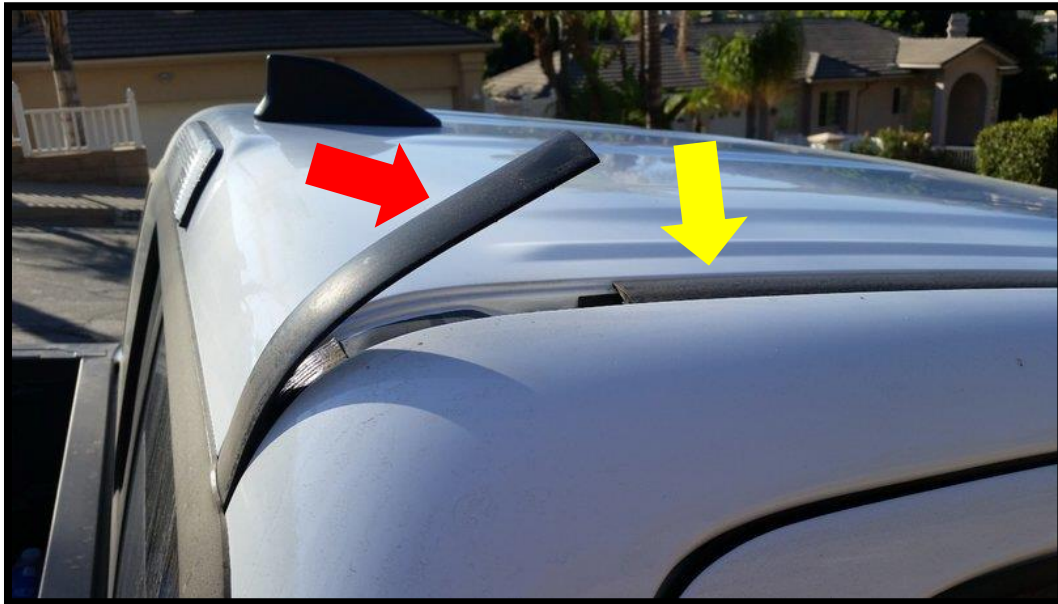

1. Begin by pulling back the rear portion of the weather stripping on each side (red arrow).



2. Then remove the main strip by starting from the back (yellow arrow) until fully removed.

- 3. Hold each side of the rack onto the roof. This will help you locate the factory installed nutserts in the roof. (NOTE: The nutserts are hidden by color matched tape.)**



- 4. Peel back the tape and place each side of the rack over holes. (NOTE: When installing the bolts into the factory nutserts, place a small amount of silicone on the bolt to prevent leaking).**



**5. Beginning from the front (1) and rear (6) first, install the cross bars using supplied hardware. Be sure to leave all bars loose until they are all installed. (NOTE: You do not need to use the supplied spacers unless you are unable to install the rack without gaps in the cross bars).**



**6. Continue to install all bars. Tighten all hardware until secure.**

- **Rack is designed to hold ~100lbs evenly distributed.**
- **Rack is designed for a 45" curved light bar (~47.25" mount to mount)**
- **Rack can hold (4) 6" single row bars**

**If you have any questions, please contact us via email at [info@dv8offroad](mailto:info@dv8offroad) or 951-680-9595**