

INSTALLATION INSTRUCTIONS - INS056

FULL LENGTH HEADERS

Part # 1532, 15320 / 1996-1998 Ford Mustang Cobra
Part # 1533, 15330 / 1999-2004 Ford Mustang Cobra
Part # 1541, 15410 / 1996-2004 Ford Mustang 4.6L GT



Install Time: Approximately 6 hours.



Difficulty: Difficult.



**Additional Parts required
(sold separately) for installation:**


**O2 SENSOR 4 WIRE
HARNESS EXTENSIONS**

12" - Part # 1676

+ BBK short mid-pipe is required.

[See website for additional
information.](#)

Please Note:
BBK O2 Sensor Harnesses
are **no longer** included in this kit –
Must be purchased separately.

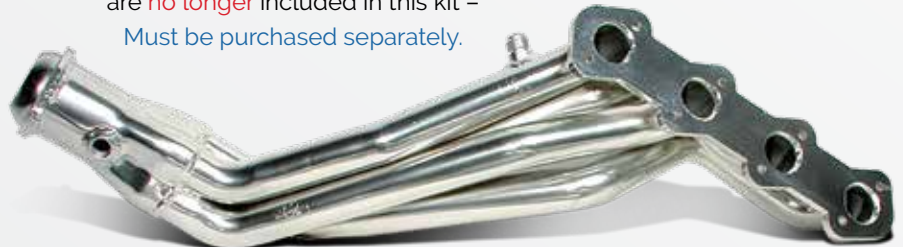

CAUTION. Use extreme caution when working under vehicle. Always use a secondary safety jacking device.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 1

Raise front of the vehicle on safety ramps or jack stands to allow clearance for long header installation, if available a vehicle hoist would be highly recommended.

STEP 2

Disconnect negative battery terminal.

STEP 3

Working from under the vehicle, first remove the exhaust H-Pipe by disconnecting at the exhaust manifolds, muffler pipes and also be sure to unplug all 4 oxygen sensors.

STEP 4

Working from under the hood, disconnect the emissions tubes from both exhaust manifolds, then unbolt and remove the strut tower brace to allow for clearance while lifting the engine on the passenger side.

STEP 5

Working from under the vehicle, unbolt and remove the starter and then the passenger side exhaust manifold.

STEP 6

Unbolt the steering shaft pinch bolt (located on the driver's side just above the steering rack at the rubber coupler or rag joint). Pull the steering shaft up off of the splines on the steering rack and swing the shaft to the driver's side of the engine compartment. Unbolt and remove the driver side exhaust manifold.

STEP 7

To facilitate installation of the header on the passenger side, first remove the engine cross member support bar (G-load brace), then remove the motor mount nut on the passenger side to allow the motor to be jacked about 3-4 inches.

STEP 8

Using a floor jack or jack of some sort, and a piece of wood on the oil pan rail, slowly raise the engine enough to allow the header to be slid into place. Place another piece of wood as a safety block between the engine mount and cross member until the header is installed completely with supplied gasket and hardware. The starter motor must also be installed simultaneously with the passenger side header due to tight clearances.

STEP 9

Lower the engine and re-install the engine mount nut, then simply slide the driver side header into place along with supplied gasket and hardware.

STEP 10

Re-install the steering shaft to steering rack and torque the bolt to factory specifications, then re-install the cross member support bar. At this point check for any interference or clearance problems between the driver side header and steering shaft.

STEP 11

Install the oxygen sensors to the H-Pipe or X-Pipe assembly before installing onto the vehicle. Install the new BBK H-Pipe or X-Pipe assembly using the supplied hardware, first tighten the flanges at the header collectors, then tighten at the mufflers.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 11 (CONT.)

NOTE!!! Be sure to add a small amount of anti-seize to the top thread of each oxygen sensor using the supplied anti-seize packet. As you thread the oxygen sensor back into the part the anti-seize will spread evenly throughout the threads.

STEP 12

From under the hood simply reconnect the emissions tubes to the appropriate fittings on the headers and re-install the strut tower brace. **NOTE!!! Be sure to apply a small amount of the supplied anti-seize on the threads.**

STEP 13

Safely lower the vehicle and reconnect the negative battery terminal to the battery, start your vehicle and check for leaks or loose hardware.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

BBK PERFORMANCE LLC
3060 Performance Circle
Deland, FL 32724

For any questions, email us:
TECH@BBKPERFORMANCE.COM



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION


IMPORTANT NOTICE!

FOR ALL 1996 - 2004 MUSTANG 4.6L 2&4 V HEADERS

BBK has intentionally crimped the driver side header tube(s) in this set to provide necessary clearance for the steering shaft.

BBK has performed extensive R&D / dyno testing on this design.
The crimp does not have a negative effect on performance, tuning, or exhaust flow output.

THE CRIMP DOES NOT CONSTITUTE A WARRANTY CLAIM.

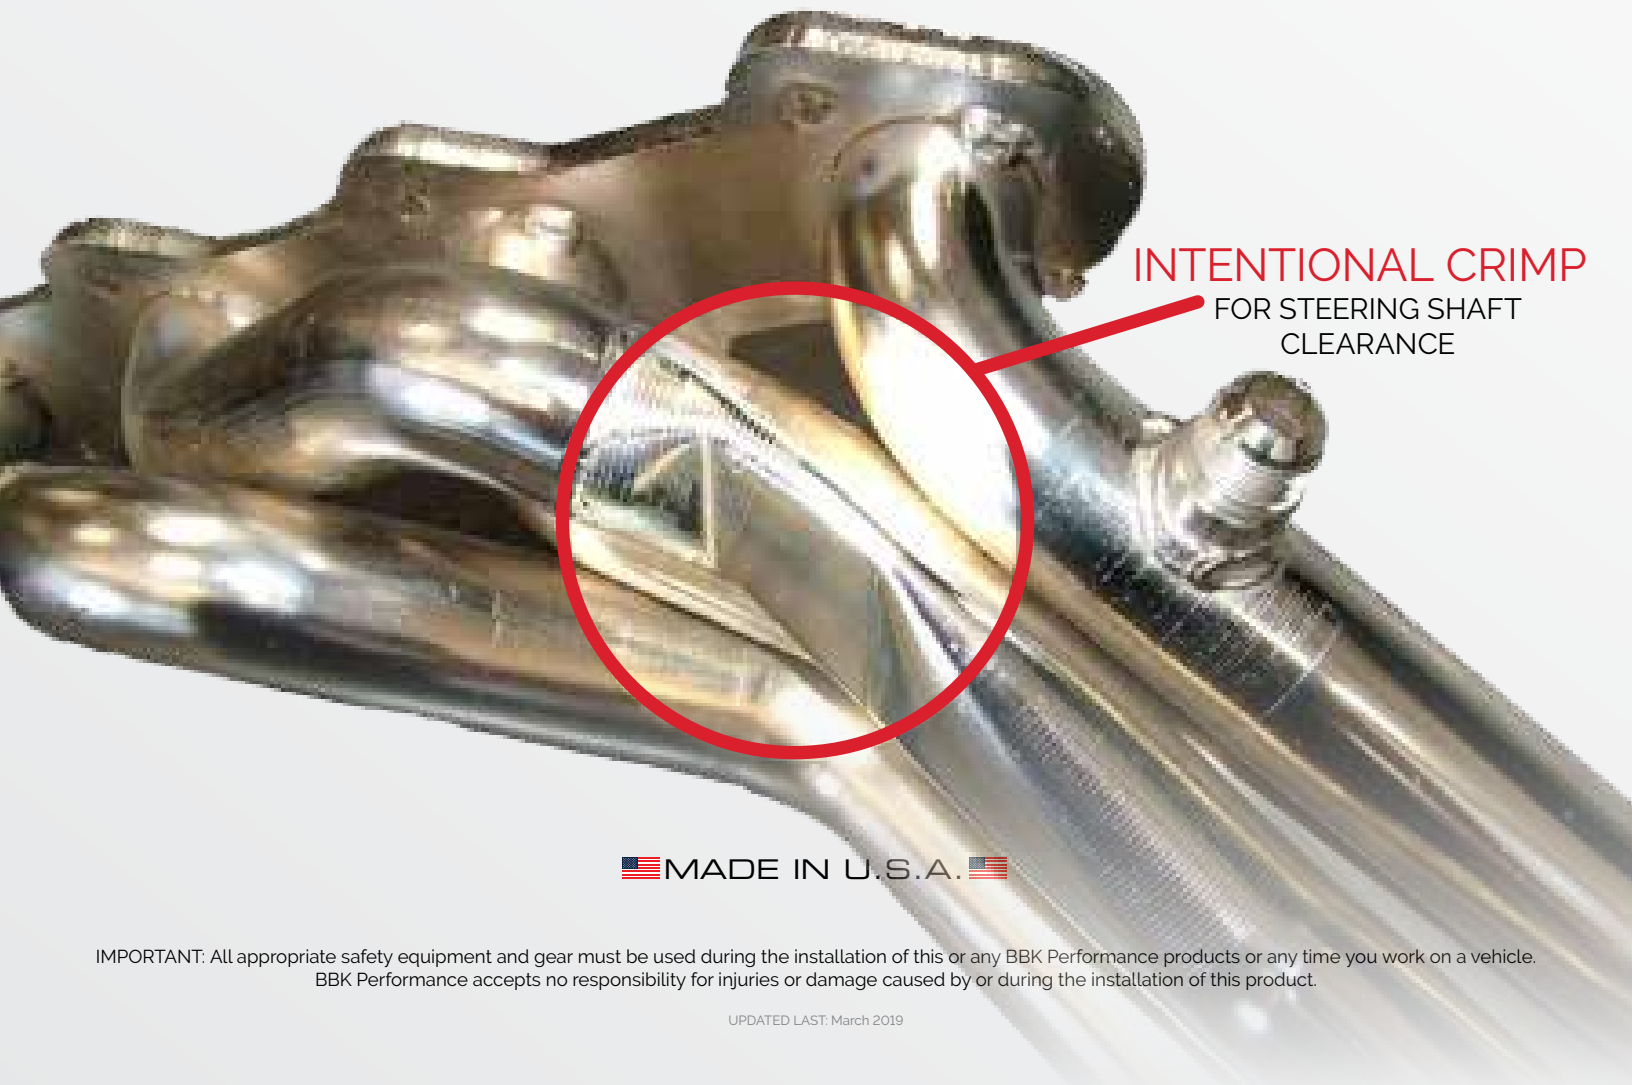

INTENTIONAL CRIMP
FOR STEERING SHAFT
CLEARANCE

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019