



**DOWNLOAD THE LATEST  
INSTALL MANUALS AT  
[www.bddiesel.com](http://www.bddiesel.com)**



# ***BD Hose & Clamp Kit***

## **Dodge 1994-2002 5.9L Cummins**

**P/N# 1045210**

**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION**


# **KIT CONTENTS:**

Please check to make sure that you have all the parts listed in this kit **before** you start the disassembly of your truck.

<b>DODGE 1994-2002 HOSE &amp; CLAMP KIT (P/N# 1045210)</b>	
<b>1405226</b>	<b>1405305</b>
	
<i>5-ply Angled Boot</i>	<i>Intercooler Pipe Boot</i>
<b>Qty: 2</b>	<b>Qty: 2</b>
<b>1405211</b>	<b>1405213</b>
	
<i>HD Spring Loaded Clamp (3.00–3.38")</i>	<i>HD Spring Loaded Clamp (3.89–4.24")</i>
<b>Qty: 6</b>	<b>Qty: 2</b>



1045210 Hose & Clamp Kit  
1994-2002 Dodge 5.9L Cummins

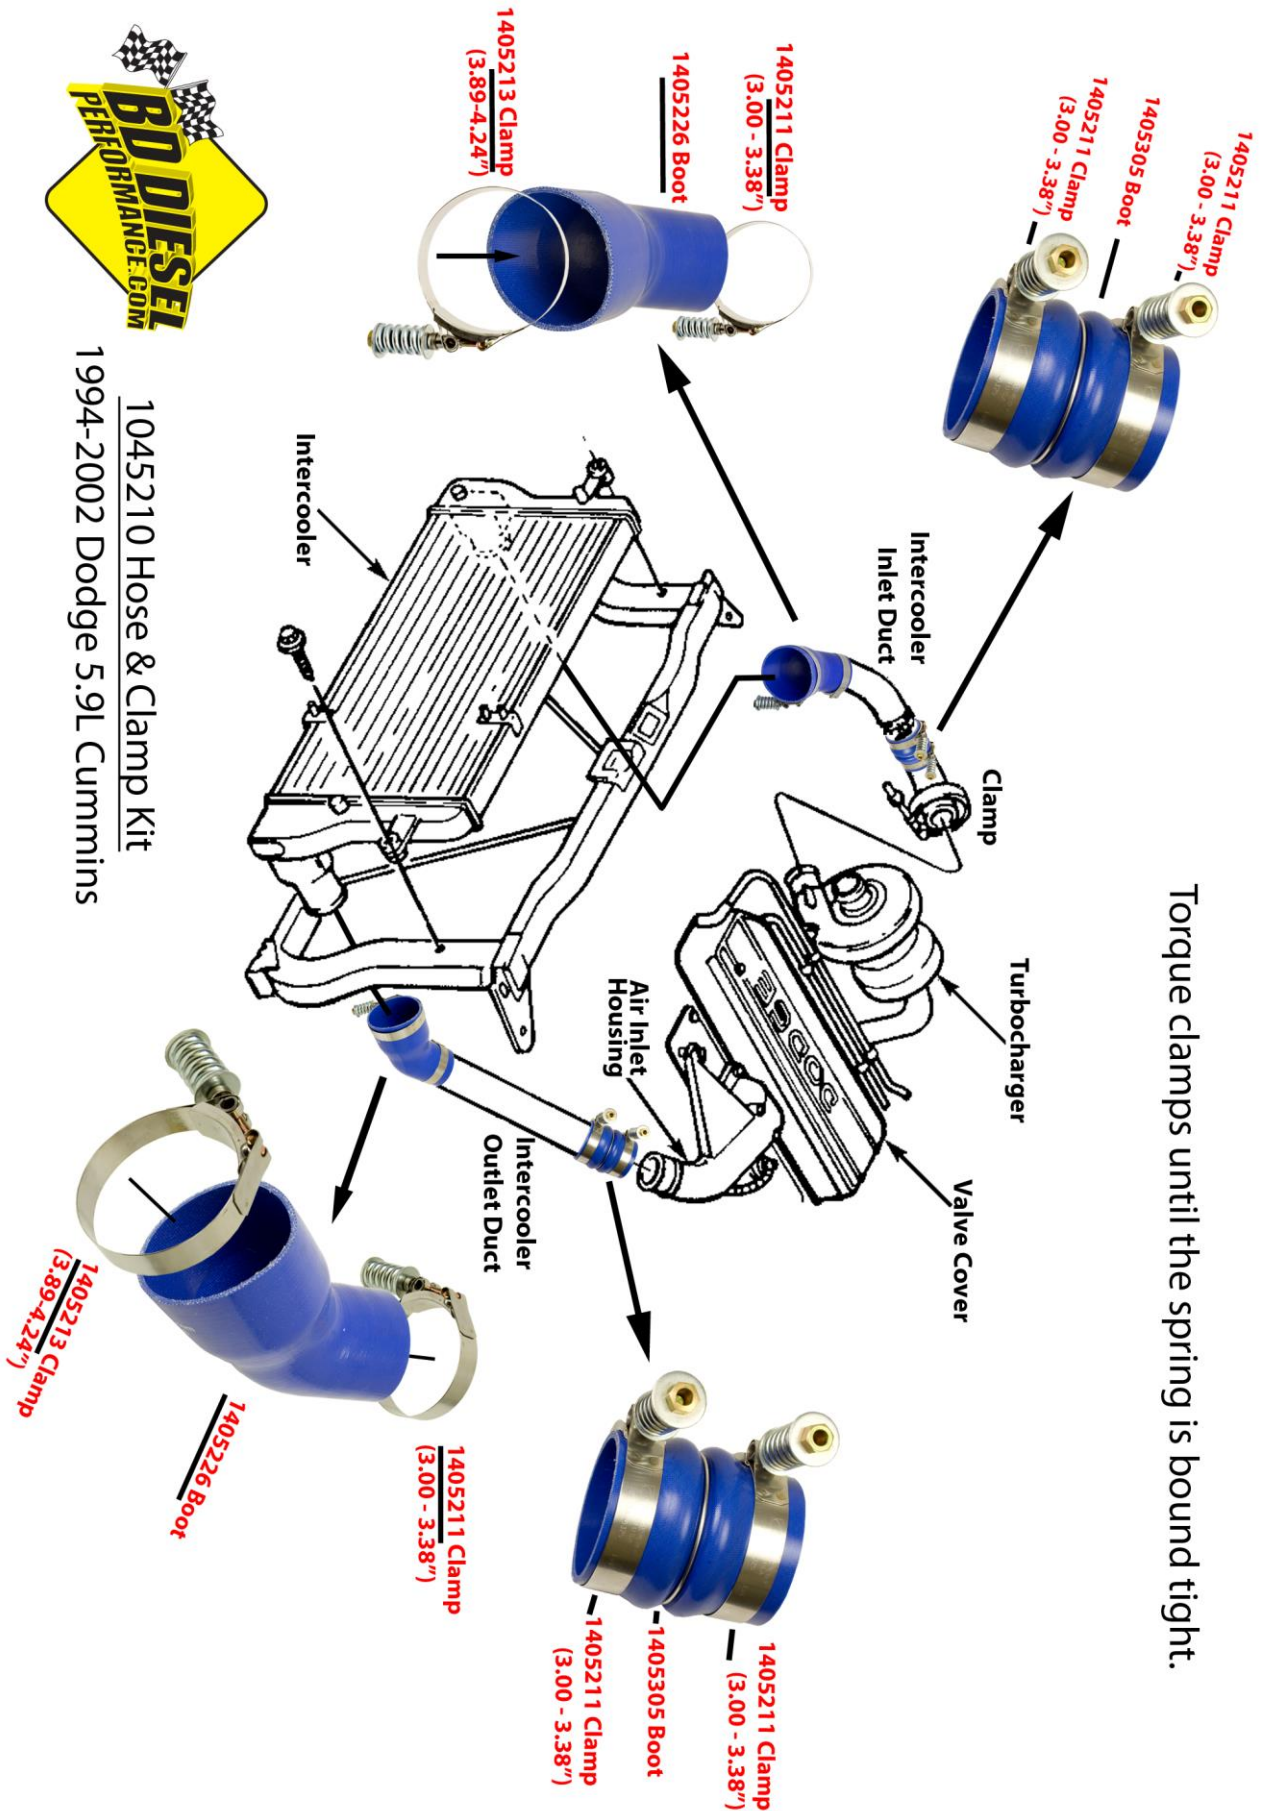

Torque clamps until the spring is bound tight.

**If you have any technical difficulties, concerns, comments, or complaints, please phone our Technical Support hotline at (800) 887-5030 between 8:30am-5:00pm PST (Pacific Standard Time) Monday to Friday.**