




DOWNLOAD THE LATEST INSTALL MANUALS AT www.bddiesel.com

1047034/35 Boot and Clamp Kit (I-00158)

F-Series 2003-2007 Ford 6L – Powerstroke (Will NOT fit E-Series Vehicles)


All supplied boots are of the finest quality in the industry and exceed factory specifications. The silicone boots use a 4-ply high temperature Nomex fiber for increased high temperature strength and long-term durability. As well, the boots are lined with fluorosilicone to prevent the oil from reducing the operational life. All the clamps are made of stainless steel, with the heavy-duty clamps providing over 400 lbs of clamp force.

1047034

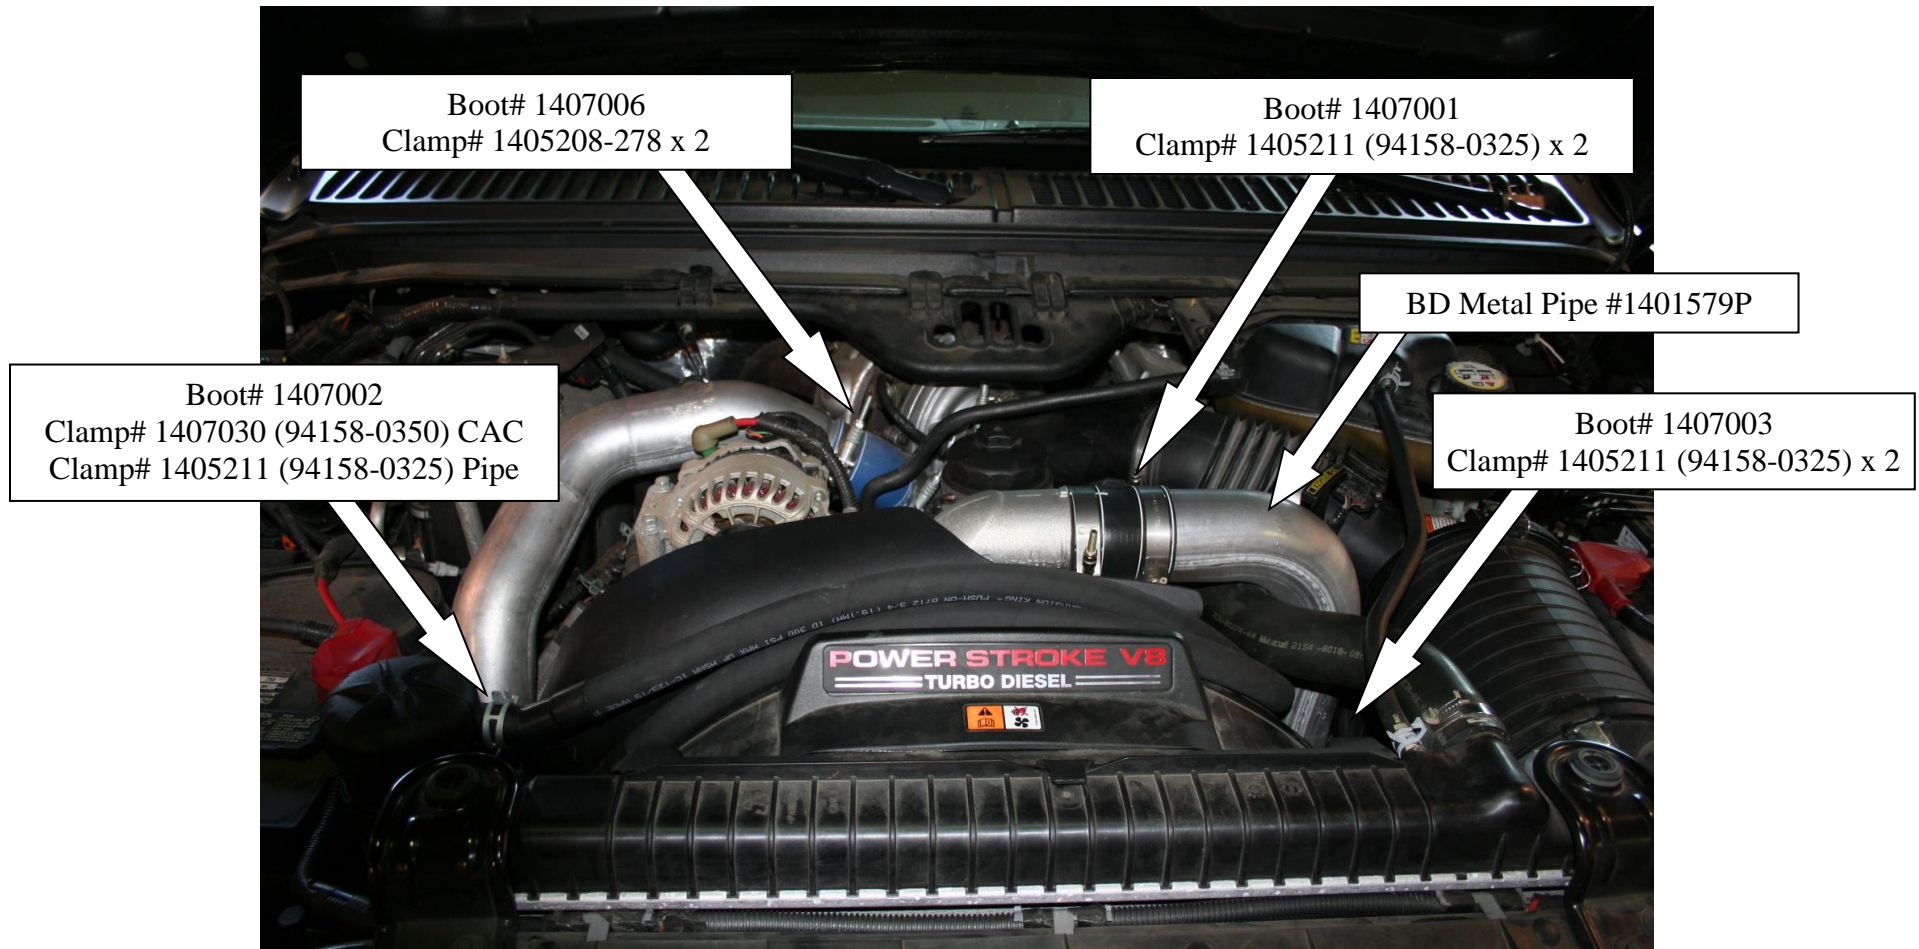



1047035

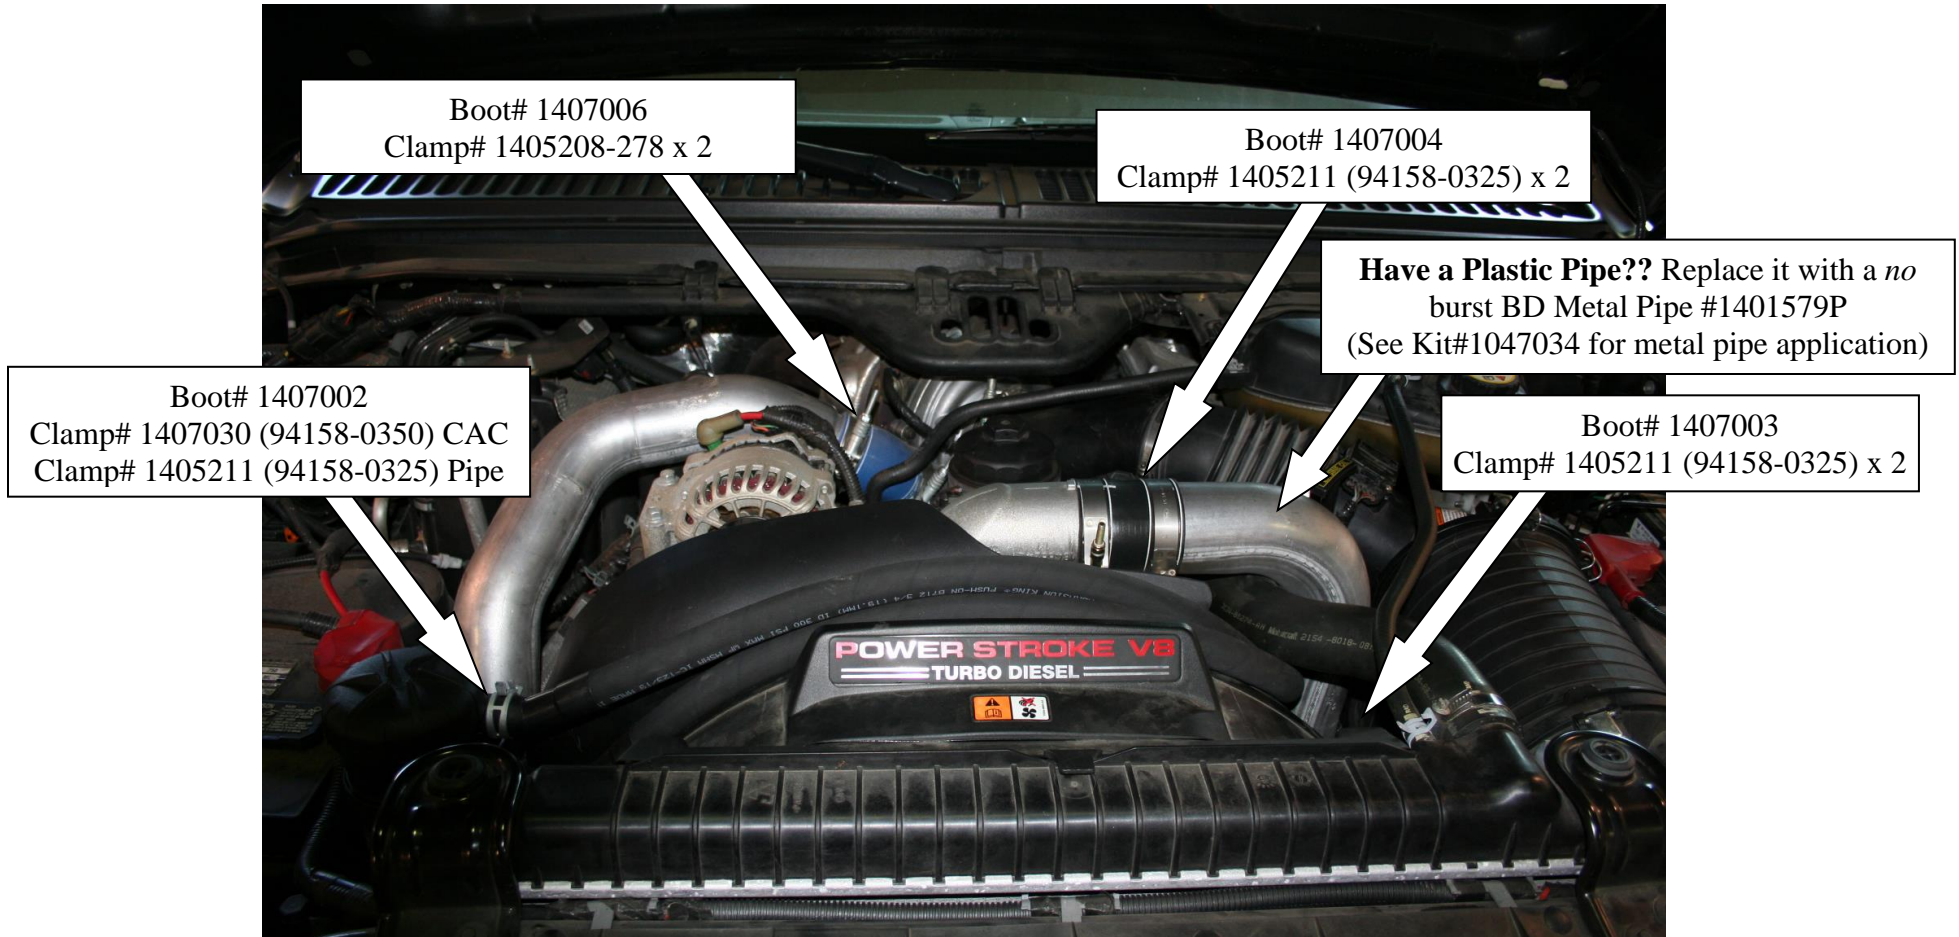




DOWNLOAD THE LATEST INSTALL MANUALS AT www.bddiesel.com

Place clamp over top of internal
ribbed section

Tighten clamp until spring is fully
compressed

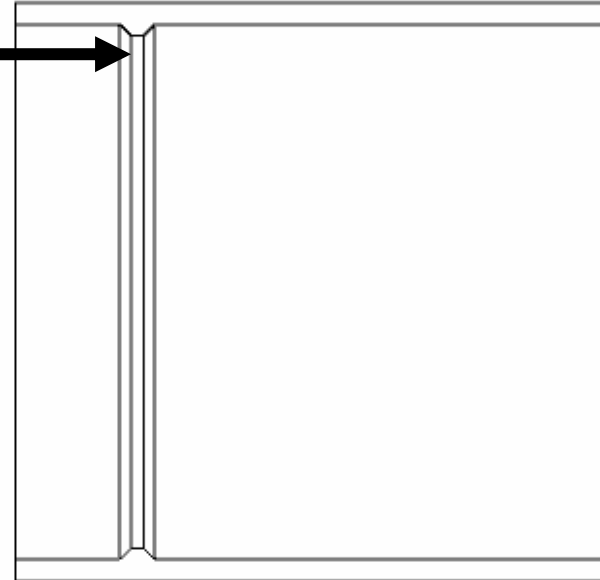

1407006 – Boot

2003-2004 vehicles will need the boot
trimmed along the cut line.

2005-2007 vehicles do NOT need the boot
trimmed.

TRIM LINE

