



**DOWNLOAD THE LATEST
INSTALL MANUALS AT
www.bddiesel.com**



BD Hose & Clamp Kit

Ford 2008-2010 6.4L Powerstroke


P/N# 1047037

PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION


KIT CONTENTS:

Please check to make sure that you have all the parts listed in this kit **before** you start the disassembly of your truck.

FORD 2008-10 HOSE & CLAMP KIT (P/N# 1047037)	
1407001	1407002
	
<i>Turbo/Intake - CAC</i>	<i>Bottom Of CAC</i>
Qty: 2	Qty: 1
1407004	
	
<i>Top Of CAC</i>	
Qty: 1	
1405211	1407030
	
<i>HD Spring Loaded Clamp (3.00–3.38")</i>	<i>HD Spring Loaded Clamp (3.28–3.63")</i>
Qty: 7	Qty: 1

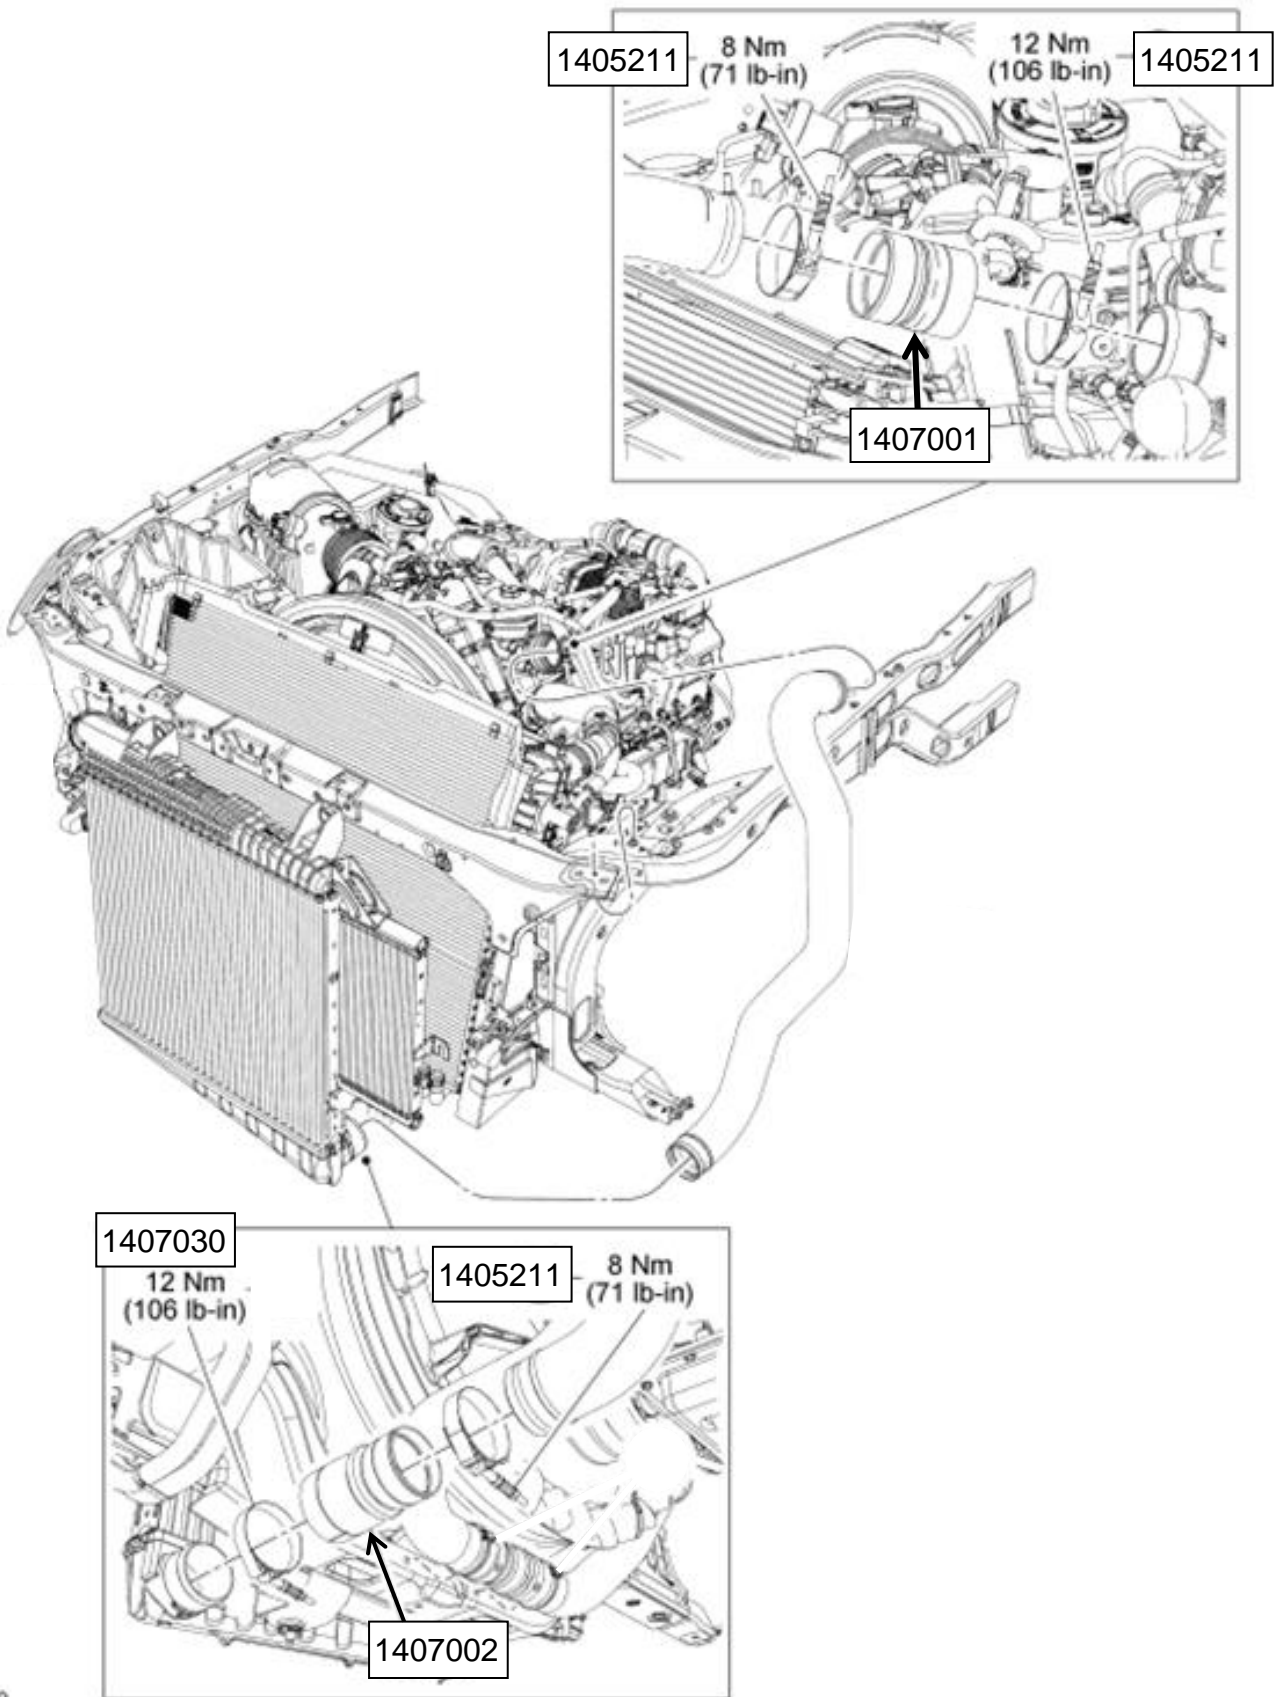

D87139

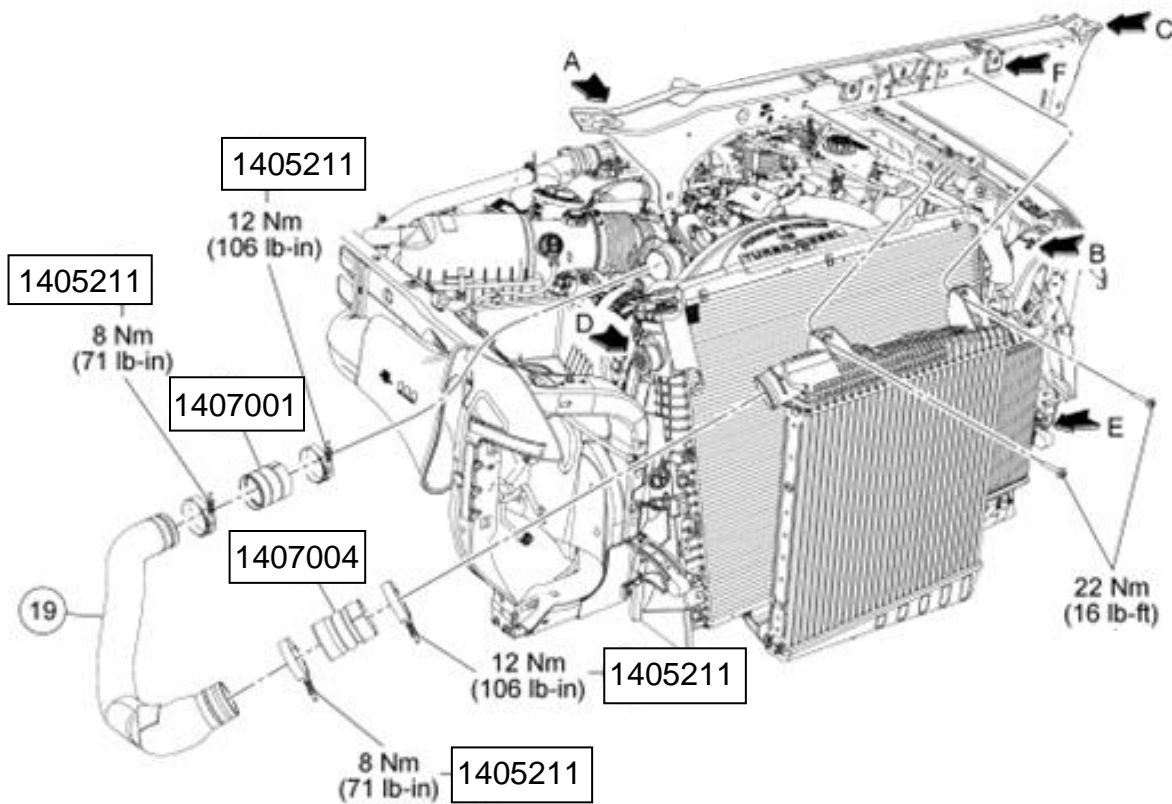

If you have any technical difficulties, concerns, comments, or complaints, please phone our Technical Support hotline at (800) 887-5030 between 8:30am-5:00pm PST (Pacific Standard Time) Monday to Friday.