



**DOWNLOAD COLOUR
INSTALL MANUALS AT
www.bddiesel.com**



FUEL RAIL PLUGS

Installation Instructions

1050070	2003-2007 5.9L Dodge Cummins
1050071	2007.5-2018 6.7L Dodge Cummins
1050071	2004.5-2010 6.6L GMC/Chevy Duramax

PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION

IMPORTANT: PART NUMBER 1050071 MAY ONLY BE INSTALLED ON CALIFORNIA VEHICLES FOR 2004-2010 GMC/CHEVROLET 2500/3500 6.6L & 2007-2012 RAM 2500/3500 6.7L MODELS. SEE PAGE 4 FOR DETAILS.

KIT CONTENTS

Please check to make sure that you have all the parts listed in this kit before you start the disassembly of your truck.

1050070 Kit contents	
1500070	
	
<i>Plug 5.9L</i>	
Qty: 1	

1050071 Kit Contents	
1050071	1500072
	
<i>Plug 6.7L / 6.6L</i>	<i>O-ring</i>
Qty: 1	Qty: 1

Pre Installation Note


- ***Before installing rail plugs ensure surrounding area is clean and that the rail plug sealing surface is completely clean.***



Installation must be completed with great care; any amount of debris or contamination could damage the fuel injectors or fuel system. Rail plugs may cause excessive pressures in the common rail if the vehicles fuel system has been modified. As a result, injector or rail damage may occur.

1050070 Dodge Cummins 5.9L

- Torque rail plug to 52ft/lbs

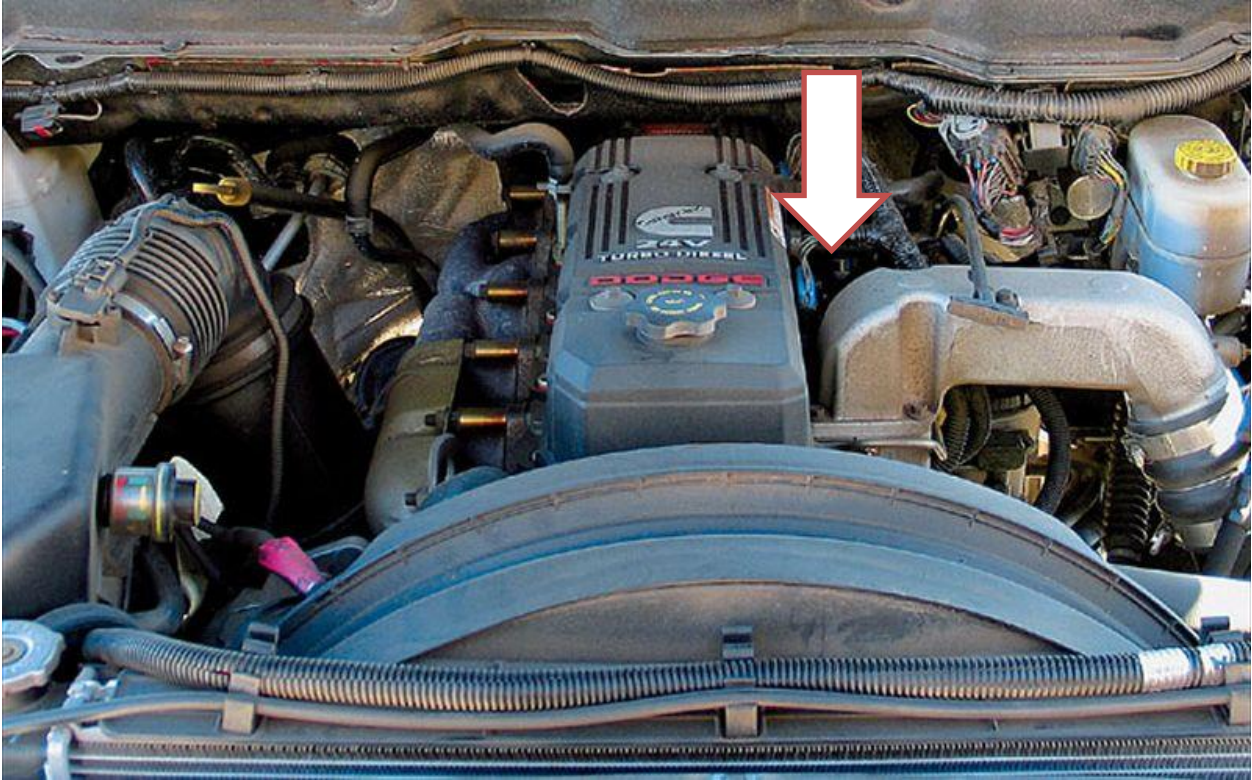

1050071 Dodge Cummins 6.7L

- Torque rail plug to 72 ft/lbs.



1050071 GMC/Chevy Duramax 6.6L

- Torque rail plug to 72 ft/lbs.



CARB EO Decal Installation & Applications (California Only)

This product may only be installed in California on vehicles that are covered by a CARB EO. Part number 1050071 is covered by EO D-553-20 for 2004-2010 GMC/Chevrolet 2500/3500 6.6L and EO D-553-21 only for 2007-2012 RAM 2500/3500 6.7L models.

Install the supplied CARB EO decal under the hood next to the vehicles emissions sticker as shown in the graphic only if it is one of the vehicle models listed above.

