



3rd/4th Gen F-Body Front/Rear Sway Bar Installation Instructions

TOOLS REQUIRED:

- Hydraulic jack and jack stands (or service lift)
- Standard and Metric Wrenches and Sockets

FRONT INSTALLATION:

1. Lift the vehicle and safely support it under crush panels. Remove wheels/tires.
2. Using a 13mm wrench and socket, remove the nuts from the sway bar end links and remove the end links.
3. Using a 13mm socket, remove the nuts from the saddles that mount the sway bar to the sway bar bracket. Remove the OE sway bar.
4. Using the supplied silicone lube, lube the insides of the polyurethane bushings. Slide the bushings over the BMR sway bar then install the saddles over the bushings.
5. Fit the sway bar loosely to the sway bar brackets and make sure the center arch droops downward to clear the balancer as in **IMAGE 1**.
6. Install the end links through the factory mounts on the control and down through the sway bar.
7. Torque the sway bar brackets to 40ftlbs and tighten the sway bar end links until the bushings deform and are the same diameter as the cap washers as in **IMAGE 2**
8. Before setting the car on the ground, be sure to lubricate the grease zerks with synthetic grease.

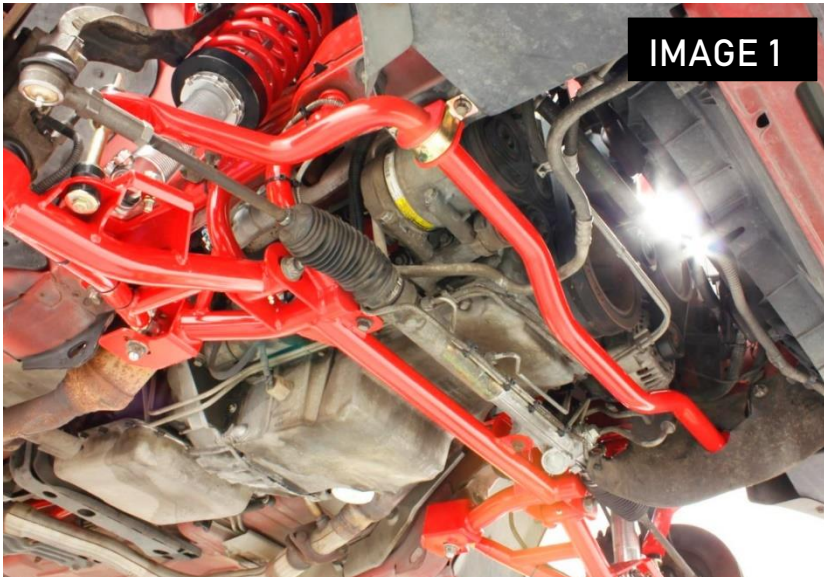


IMAGE 1



IMAGE 2


WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.

3rd/4th Gen F-Body Front/Rear Sway Bar Installation Instructions

REAR INSTALLATION:

1. Lift the vehicle and safely support it under the axle with jack stands. The installation is much simpler with the suspension loaded. Remove wheels/tires.
2. Using a 13mm wrench and socket, remove the nuts from the sway bar end links and remove the end links. See **IMAGE 3** below.
3. Using a 13mm socket, remove the nuts from the u-bolts that mount the sway bar to the rear end. Remove the OE sway bar. See **IMAGE 4** below.
4. Using the supplied silicone lube, lube the insides of the polyurethane bushings. Slide the bushings over the BMR sway bar then install the saddles over the bushings. This should resemble **IMAGE 5**

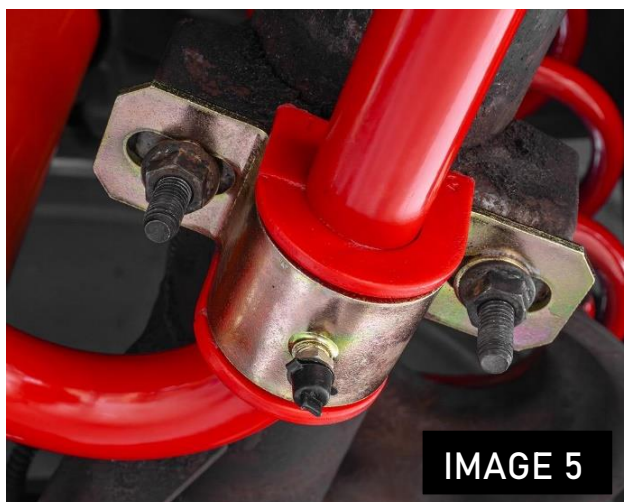

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.

3rd/4th Gen F-Body Front/Rear Sway Bar Installation Instructions

5. Fit the sway bar to the rear axle and make sure the center arch droops downward to clear the differential cover.
6. Install the endlinks through the factory mounts on the frame and down through the sway bar as shown in **IMAGE 6**
7. Before setting the car on the ground, be sure to lubricate the grease zerks with synthetic grease.



WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.