Installation Instructions
Supertop NX Bronco 4 Door

Vehicle Application:
Ford Bronco 4 Door 2021-Current
Part Number 54731

Installation Tips

Before you begin installing your new Supertop NX, please read all the instructions thoroughly.

WARNING Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. Never operate the vehicle in excess of manufacturer's specifications.

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.



Important Note:


Before attaching the hardware to the vehicle, it is recommended that you protect the paint on the sport bar. It is also recommended that you have someone help lift the assembled hardware onto the vehicle. It is best to loosely install all of the fasteners until the top is installed then tighten all of the fasteners.

CAUTION Safety glasses should be worn at all times when installing this product.


WEAR SEAT BELTS AT ALL TIMES


Tools



Safety Glasses

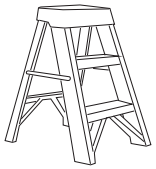
Step Ladder


T20, T30, T40 and T50 Torx Drivers


Scissors


Vise Grips


3mm and 4mm Hex Keys


10mm and 13mm Wrenches


Torque Wrench


#2 Phillips Screwdriver

Installation Time


4 hours

Skill Level

1 2 **3** 4

3 - Moderately Difficult

Support

We're here to help! Go to:
https://www.bestop.com
and click on **Need Help?**

https://www.bestop.com/video-library

© 2026 Bestop, Inc.

Installation Instructions
Supertop NX Bronco 4 Door

Vehicle Application:
Ford Bronco 4 Door 2021-Current
Part Number 54731

Sugerencias de Instalación

Antes de empezar a instalar esta unidad, lea atentamente todas las instrucciones.

Para un buen ajuste:
Para facilitar la instalación, el producto debe instalarse a temperaturas superiores a 72 °F (22 °C).
Por debajo de esta temperatura, la tela puede encogerse una pulgada o más, lo que dificultaría su ajuste al vehículo.

Es normal que la tela se contraiga o arrugue cuando está guardada en la caja de empaque. A los pocos días después de la instalación, la tela se relajará y las arrugas desaparecerán.

⚠ ADVERTENCIA Este producto se diseñó principalmente para mejorar la apariencia del vehículo y proteger a los ocupantes de las condiciones climáticas comunes. De ninguna manera piense que los componentes de este producto pueden servir como medio de contención para los ocupantes del vehículo o que pueden protegerlos contra lesiones o la muerte en caso de accidente. Este producto no protegerá a los ocupantes contra caídas de objetos. Nunca conduzca este vehículo fuera de las especificaciones del fabricante.

USE LOS CINTURONES DE SEGURIDAD EN TODO MOMENTO

Lea y siga con precisión todas las instrucciones de instalación que se proporcionan para instalar este producto. Si no lo hace, podría producirse un mal ajuste que colocaría a los ocupantes del vehículo en una situación potencialmente peligrosa.

⚠ PRECAUCIÓN Debe usar gafas protectoras en todo momento durante la instalación de este producto.

Conseils pour l’installation

Lire toutes les instructions au complet avant de commencer l’installation de cet assemblage.

Pour un ajustement sans problème :
Afin de faciliter l’installation, ce produit doit être installé à des températures au-dessus de 72 °F (22 °C).
Sous cette température, le tissu peut rétrécir d'un pouce (2,5 cm) ou plus, ce qui rendra l’ajustement sur le véhicule difficile.

Il est normal que le tissu rétrécisse et plisse pendant qu’il est dans la boîte d’expédition. En quelques jours après l’installation, le tissu se détendra et les plis disparaîtront.


⚠ AVERTISSEMENT Ce produit est conçu principalement pour améliorer l’apparence du véhicule et pour protéger les occupants des conditions météorologiques usuelles. Ne jamais se fier aux composants de ce produit pour se protéger de blessures ou de la mort en cas d’accident. Ce produit ne protègera pas les occupants des chutes d’objets. Ne jamais utiliser le véhicule au-delà des caractéristiques techniques indiquées par le fabricant.

PORTER UNE CEINTURE DE SÉCURITÉ EN TOUT TEMPS

Lire et suivre, très fidèlement, toutes les instructions d’installation fournies lors de l’installation de ce produit. Ne pas suivre cette consigne peut causer une installation inadéquate et mettre les occupants du véhicule dans une situation potentiellement dangereuse.

⚠ MISE EN GARDE Des lunettes de sécurité doivent être portées en tout temps lors de l’installation de ce produit.


© 2026 Bestop, Inc.

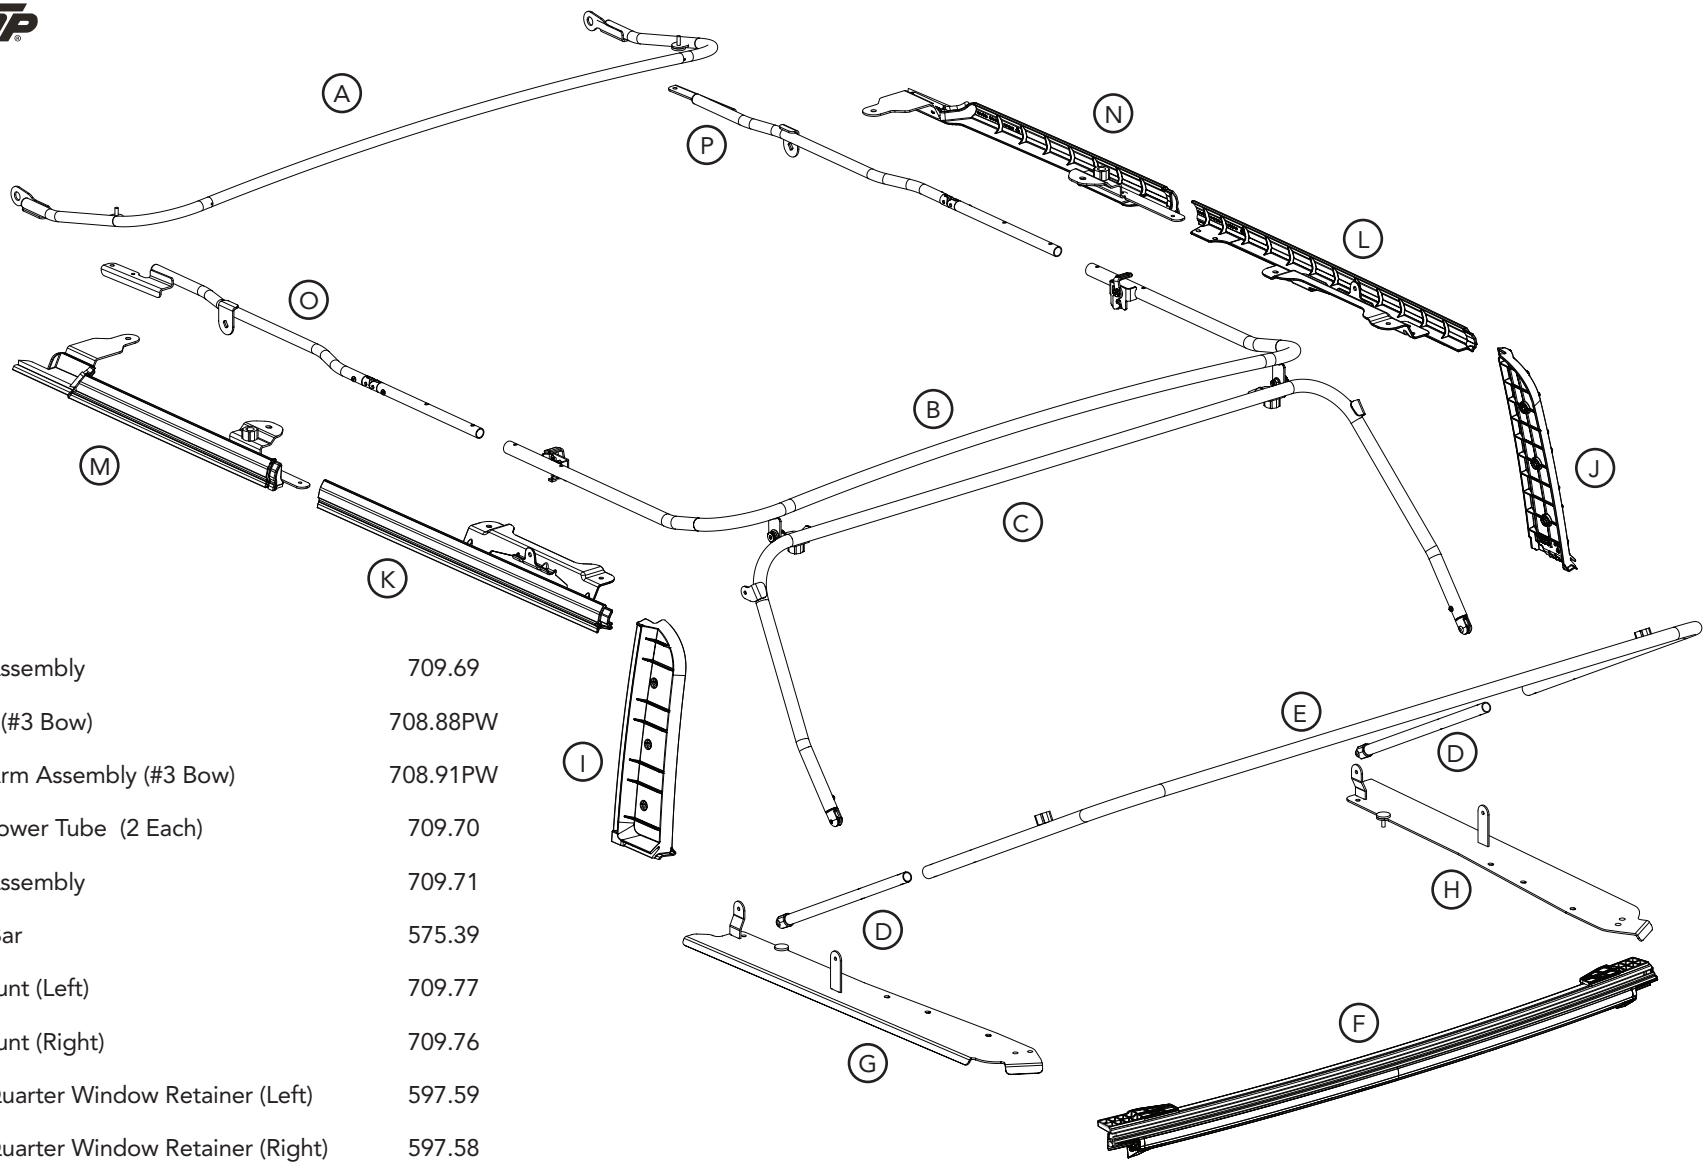


A	#2 Bow Assembly	709.69
B	Top Base (#3 Bow)	708.88PW
C	Control Arm Assembly (#3 Bow)	708.91PW
D	#4 Bow Lower Tube (2 Each)	709.70
E	#4 Bow Assembly	709.71
F	Tailgate Bar	575.39
G	Body Mount (Left)	709.77
H	Body Mount (Right)	709.76
I	Vertical Quarter Window Retainer (Left)	597.59
J	Vertical Quarter Window Retainer (Right)	597.58
K	Upper Door Rail Retainer Rear (Left)	707.05
L	Upper Door Rail Retainer Rear (Right)	707.04
M	Upper Door Rail Retainer Front (Left)	707.07
N	Upper Door Rail Retainer Front (Right)	707.06
O	Sunrider Sleeve Assembly (Left)	709.75
P	Sunrider Sleeve Assembly (Right)	709.74

Installation Instructions


© 2026 Bestop, Inc.



Staypad Plate
Part #706.74PW
Qty. 2

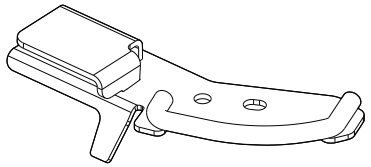


Bracket Staypad-TG Retainer Rt
Part #689.86PW
Qty. 1

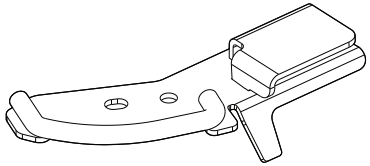


Bracket Staypad-TG Retainer Lt
Part #689.87PW
Qty. 1



1" x 14" PSA Loop Strip
Part #710.51
Qty. 4

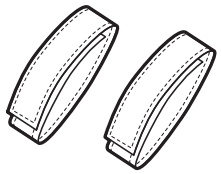


Strap, Sunrider
Tie Down
#410.42
Qty. 4

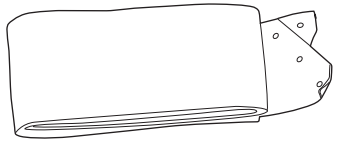


Staypad assembly
#708.84 (Rt)
#708.85 (Lt)
Qty. 1 per side


Foam Kit #710.12




Foam, Header RH
#615.66
Qty. 1




Foam, Header LH
#615.67
Qty. 1




Foam, Body Mount
#711.35
Qty. 2



Foam, Vertical Window
Retainer RH
#608.72
Qty. 1




Foam, Vertical Window
Retainer LH
#608.73
Qty. 1

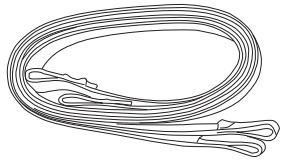


Webstrap 2 bow to 3 Bow
#708.70
Qty. 2

© 2026 Bestop, Inc.

Small Parts Kit #708.87

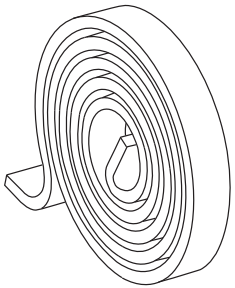

Spring, Lift Assist
Part #487.58
Qty. 2




Pivot, Spring Bow
Part #706.67
Qty. 2




Set Screw, M6
Part #707.03
Qty. 2




Shoulder Bolt
Part #308.65
Qty. 4

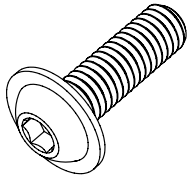


Screw, Button Head
M8 x 20mm
Part #573.09
Qty. 4




Nut, Nyloc M6 (Black)
Part #669.14
Qty. 10

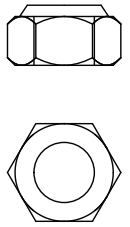


Nut, Nyloc M8 (Black)
Part #434.12
Qty. 4

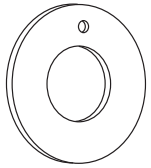

Thrust Washer
Part #587.19
Qty. 2

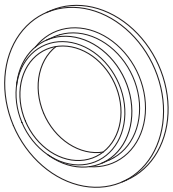


Flange Bearing
Part #519.76
Qty. 2

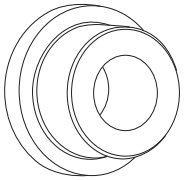


Bushing, Plastic
Part #712.35
Qty. 2



Loctite Capsule
#309.83
Qty. 1

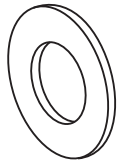


Washer, Plastic
Part #712.73
Qty. 4




Screw, M6 X 1.0 X 15mm
Part #533.61
Qty. 4




Screw, Phillips #8 x 1/2”
Part #393.79
Qty. 23




M6 x 30mm
Flanged Button
Head Cap Screw
Part #682.51
Qty. 8




Screw,M8 X 38mm
Part #532.17
Qty. 14

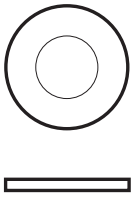

Washer - Flat, M8 x 24mm
Part #433.98
Qty. 6




Washer - Flat, M6
Part #660.46
Qty. 2

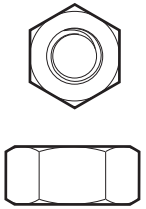

Hex Nut, M8
Part #686.22
Qty. 4



Screw, Button Head
M6 x 20mm
Part #661.27
Qty. 2




Screw - Button Head
M8 X 20mm
Part #598.93
Qty. 2


Installation Instructions


© 2026 Bestop, Inc.

Note: If your vehicle came with a Factory Soft Top or Dual Top option then you must remove these brackets to complete the installation. We recommend you keep the hardware with the top that you removed.

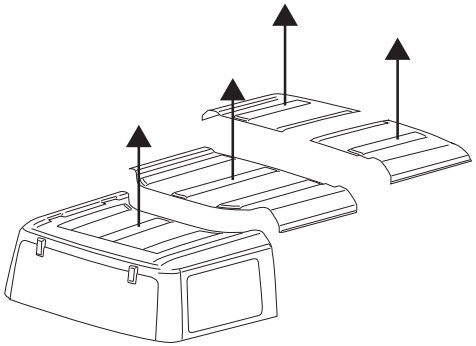


Remove the hardtop or factory soft top. (See owners manual for details)

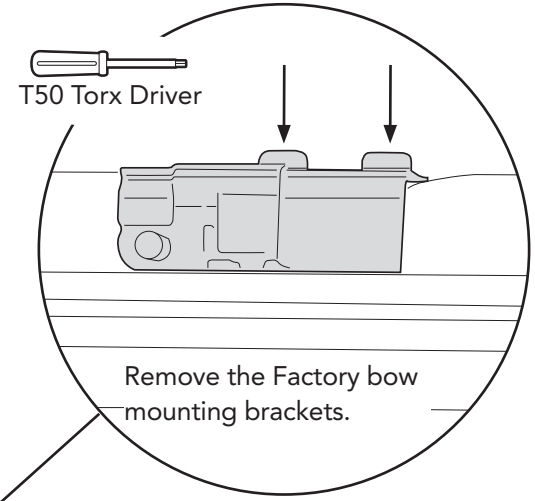

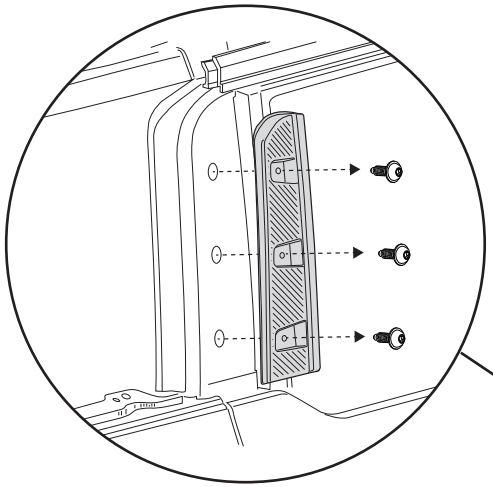



Remove the Factory Vertical Window retainers (if equipped) and the three screws from behind the door windows. The three screws will be there even if the retainers were not installed.

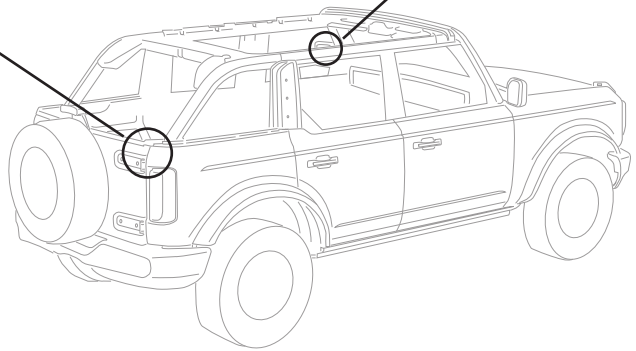


Repeat on both sides of the vehicle.


© 2026 Bestop, Inc.

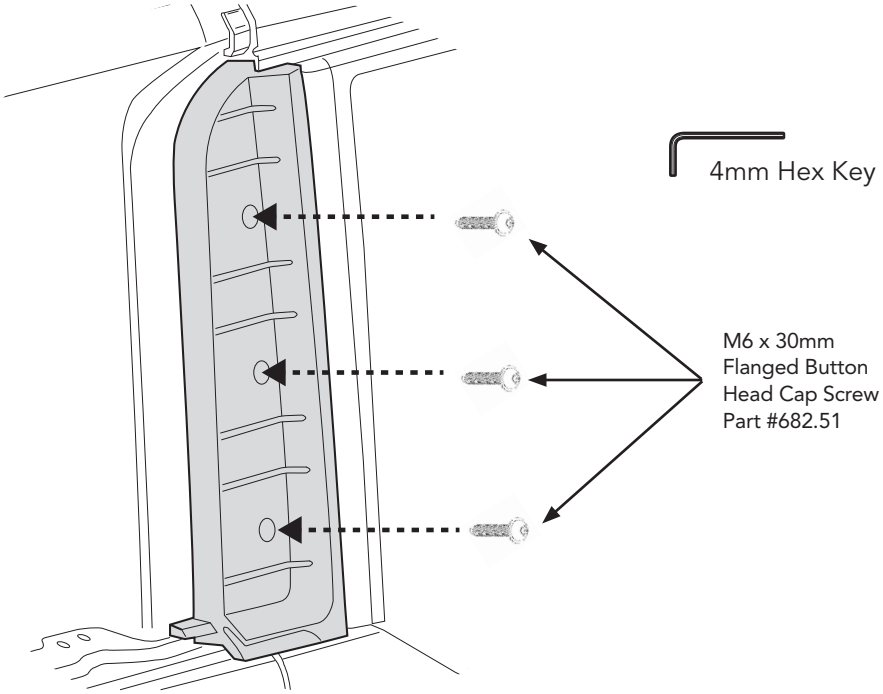

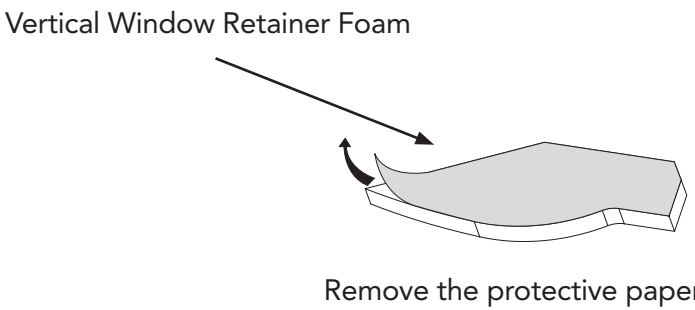


Remove the protective paper

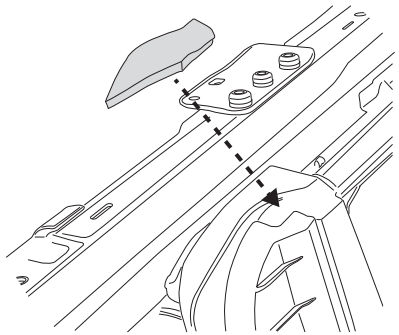


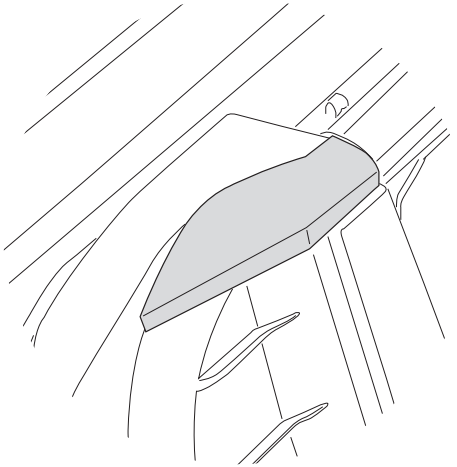


Repeat on both sides of the vehicle.

© 2026 Bestop, Inc.

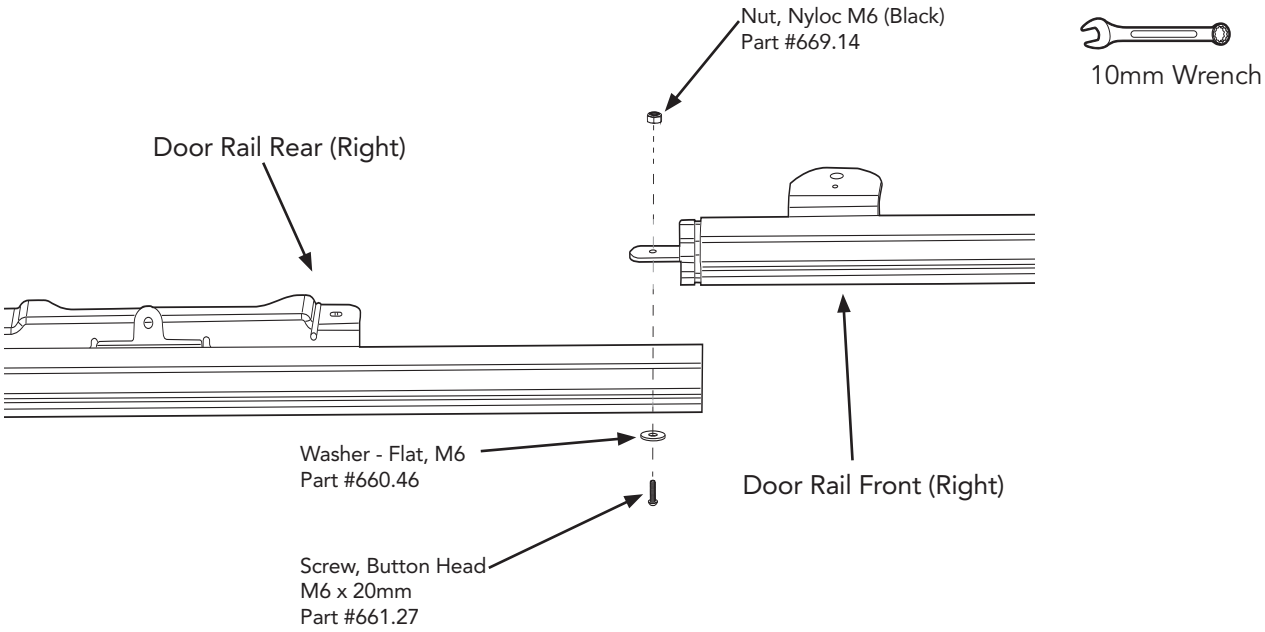

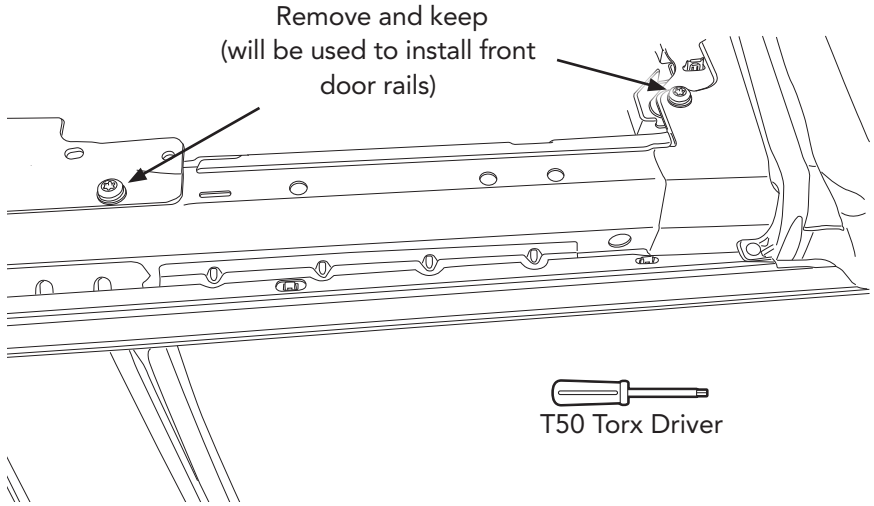


© 2026 Bestop, Inc.

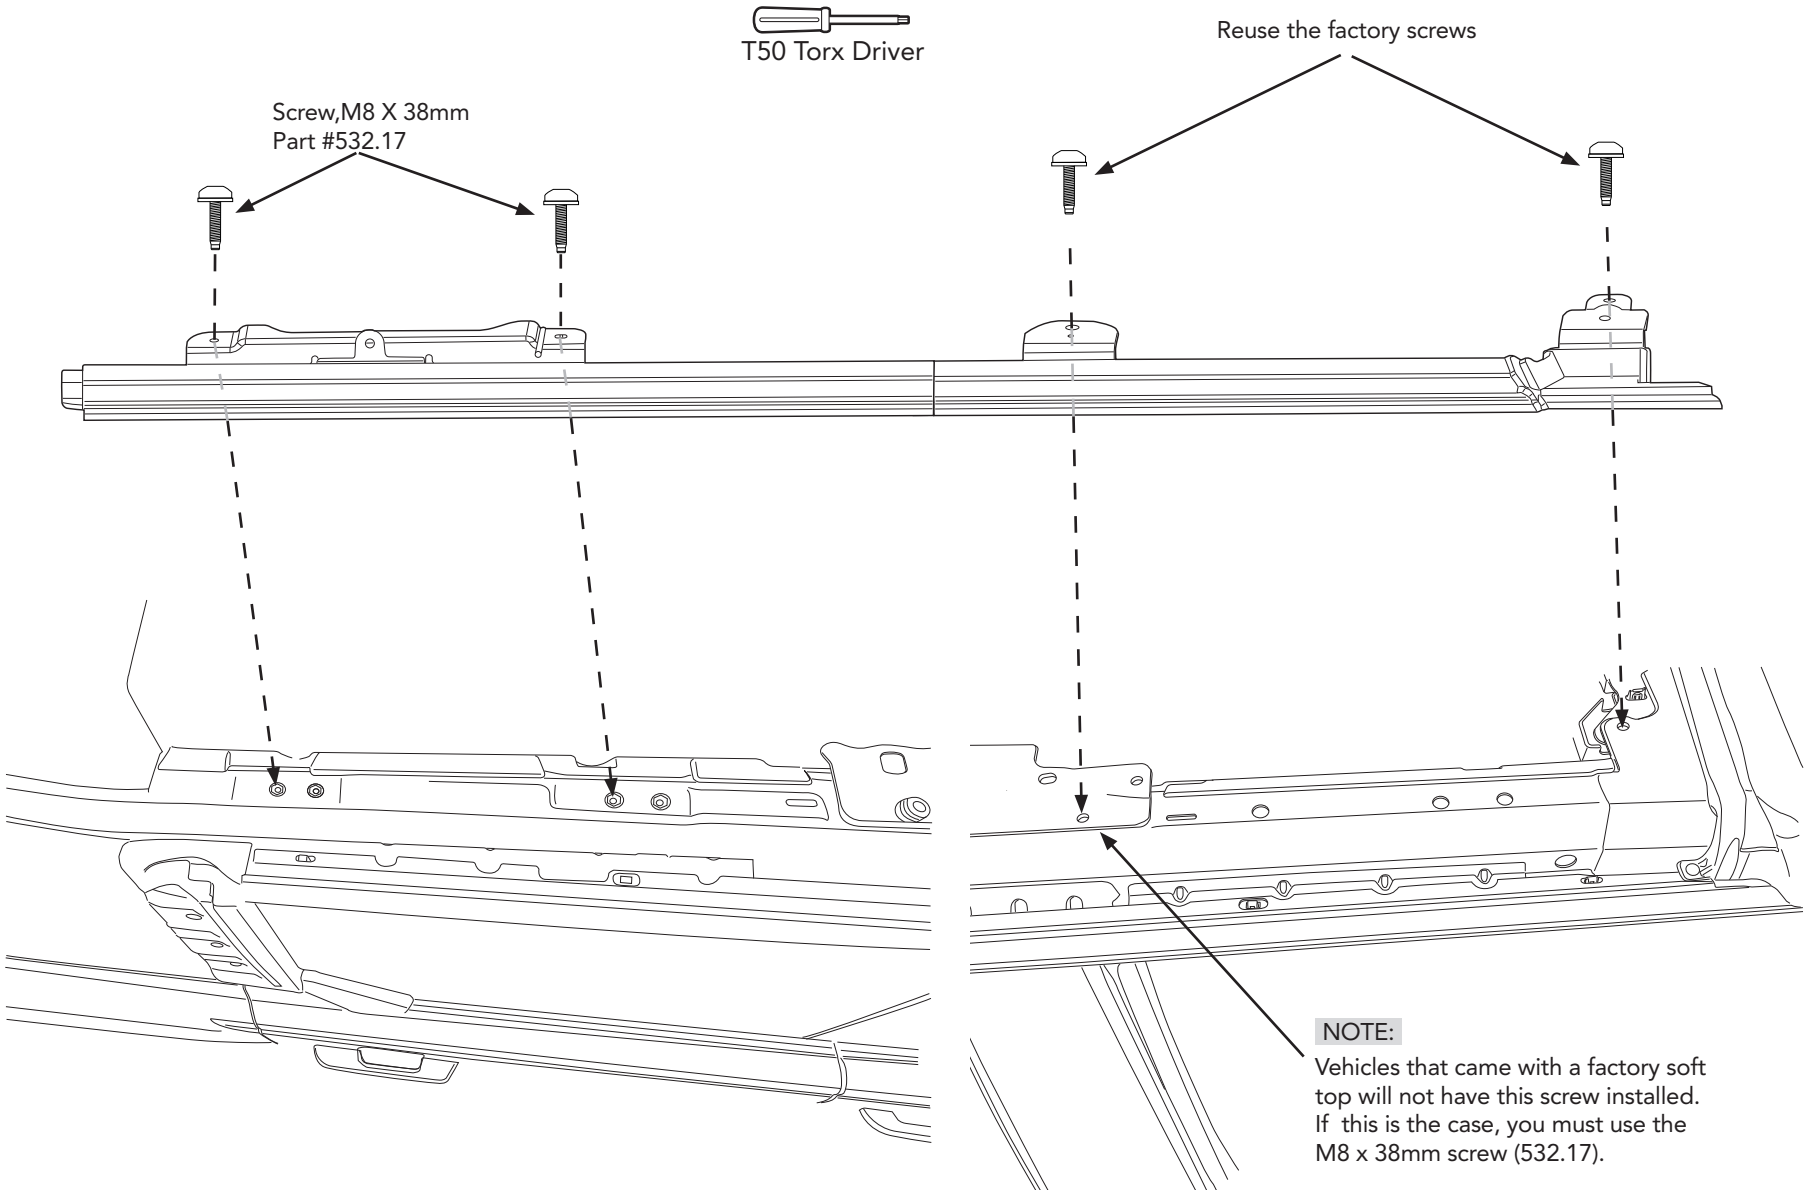


Repeat on the other side of the vehicle.


© 2026 Bestop, Inc.

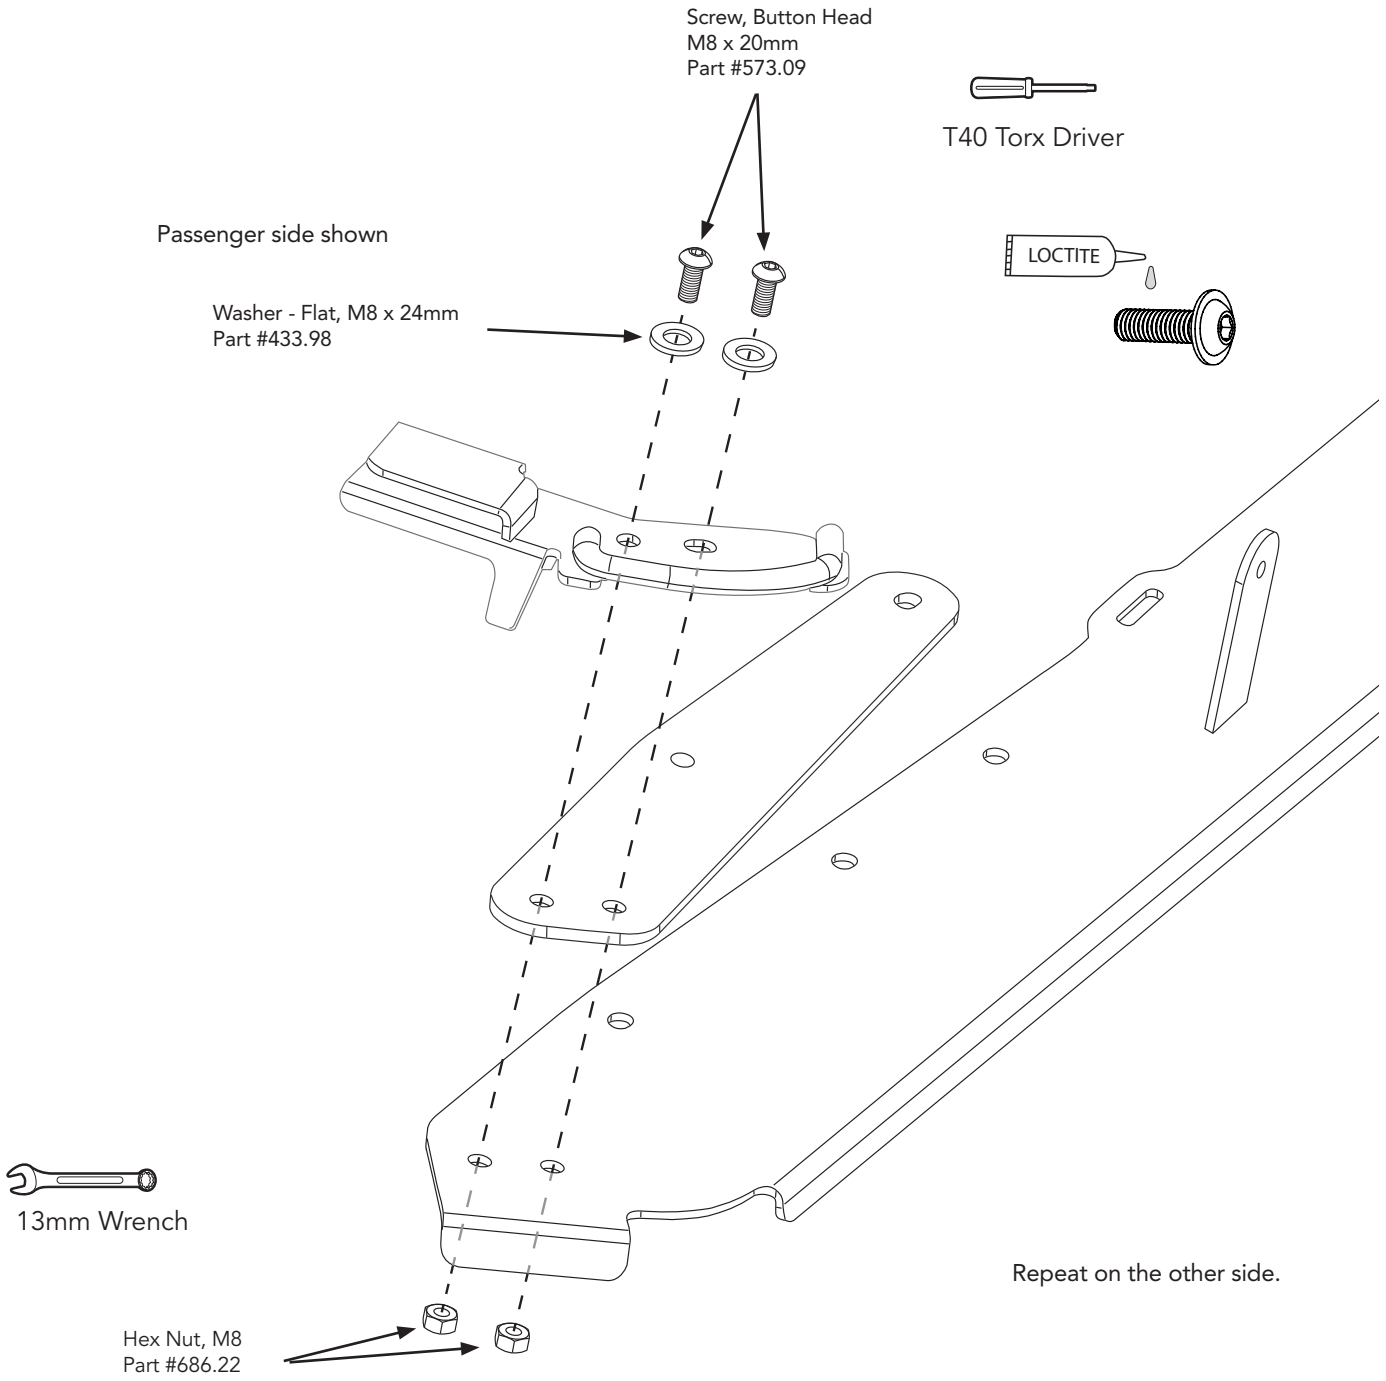


© 2026 Bestop, Inc.

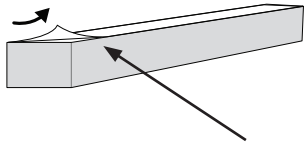

Peel protective strip from the foam seal

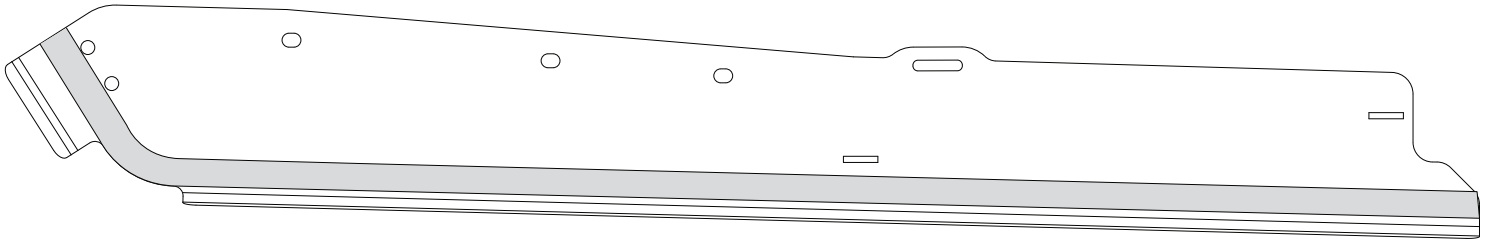


With the adhesive side down, attach the foam to the bottom of the overbody bracket.
Leave about a 1/4 inch between the lip on the side and the foam.

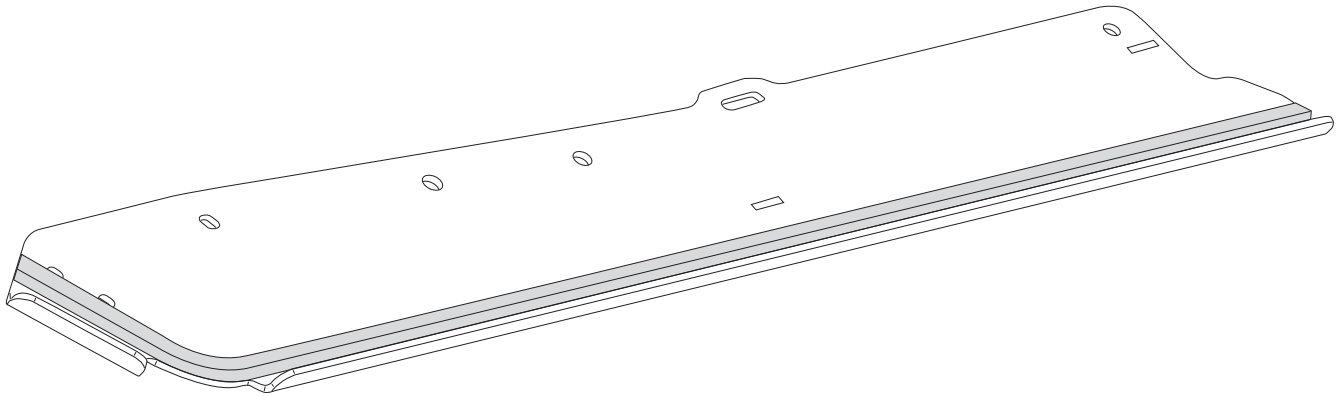

Repeat this step on the other overbody bracket.


© 2026 Bestop, Inc.

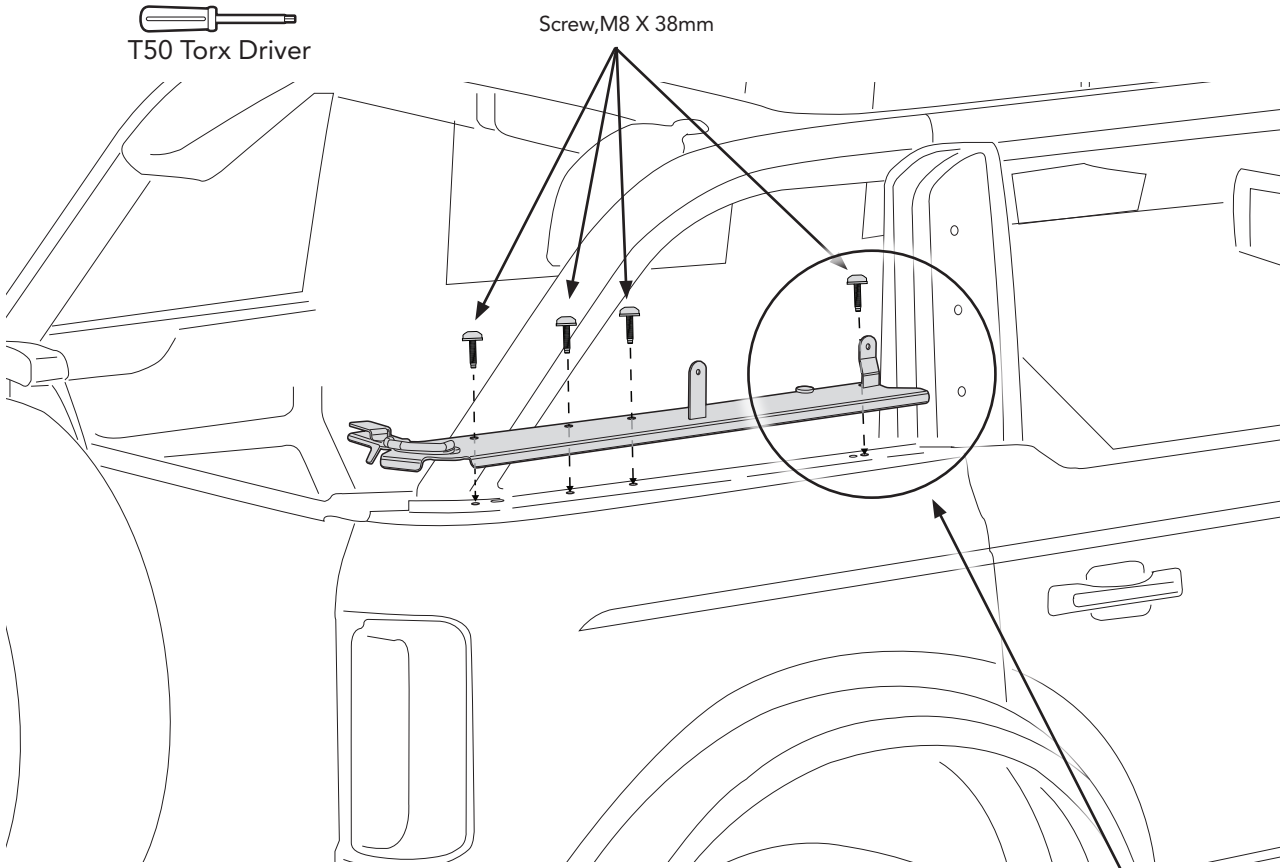


Tip


Place this screw through the bracket before setting the bracket in place then finger tighten it before placing the other three (3) screws

© 2026 Bestop, Inc.

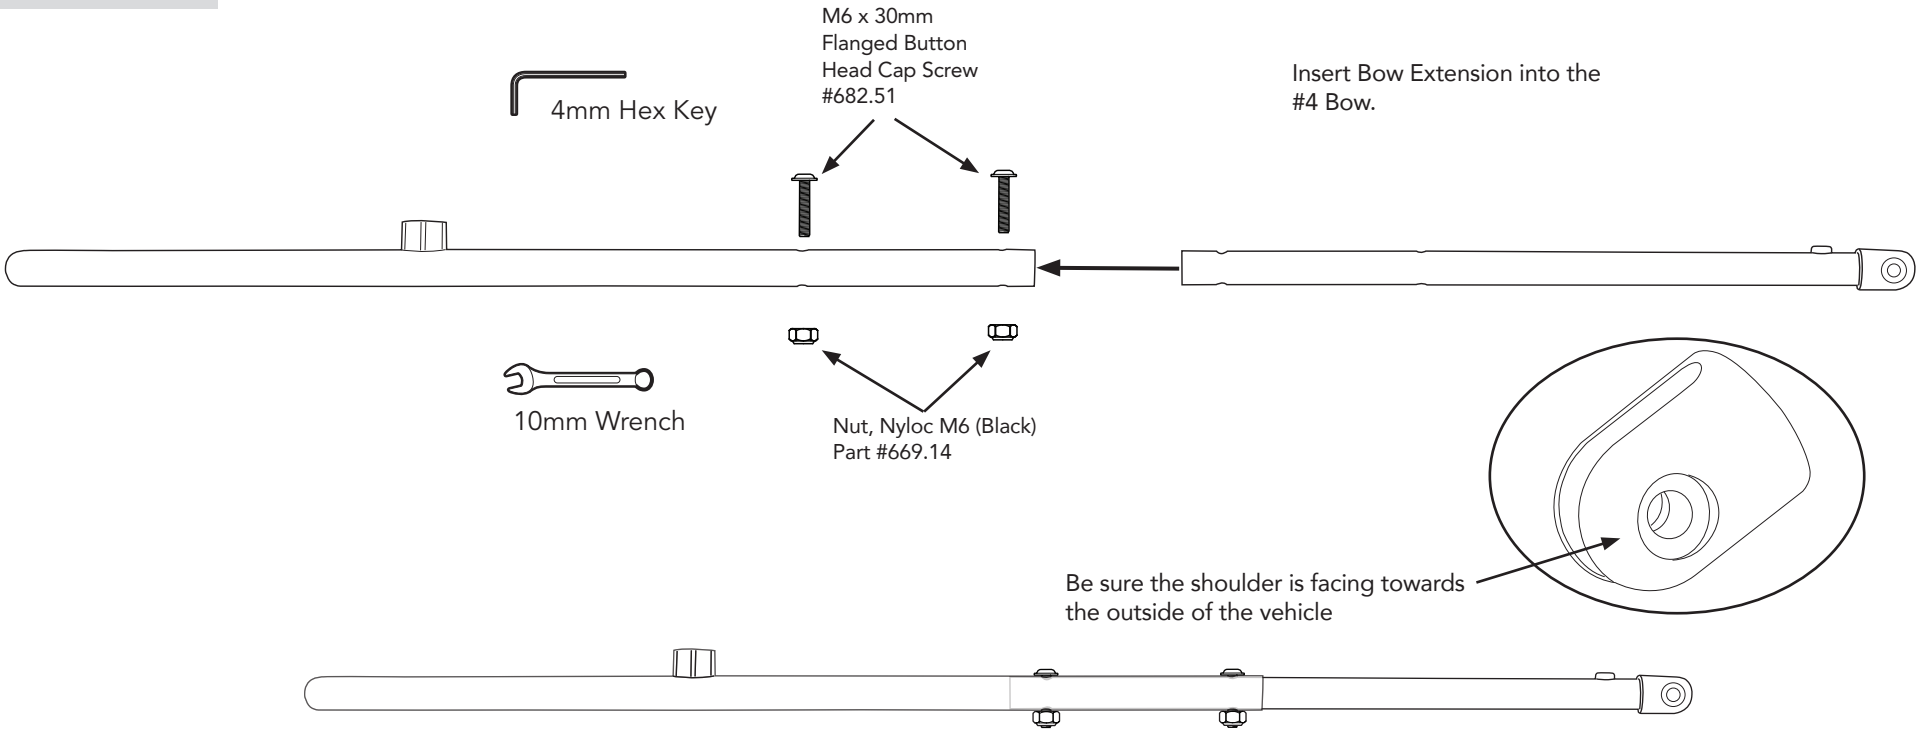


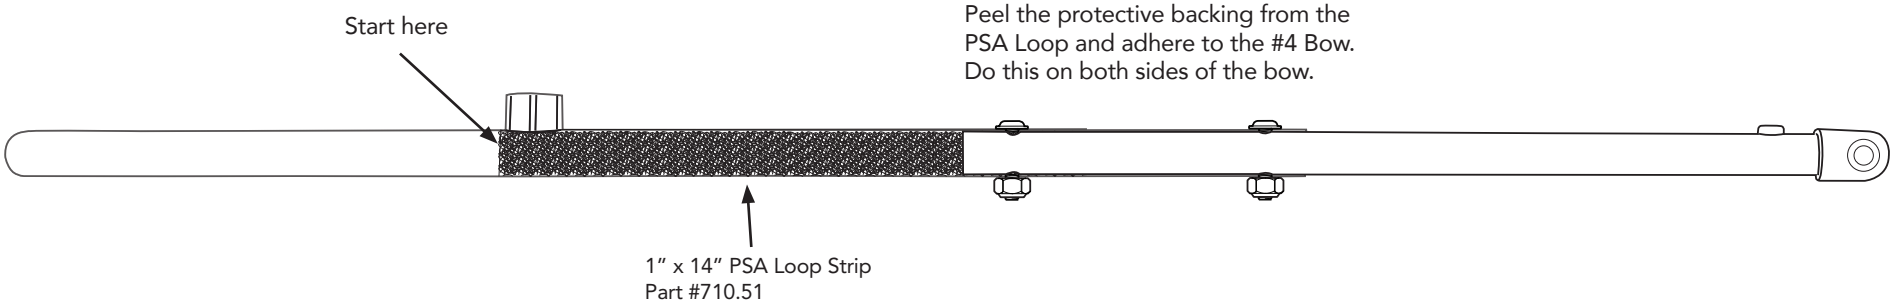

© 2026 Bestop, Inc.

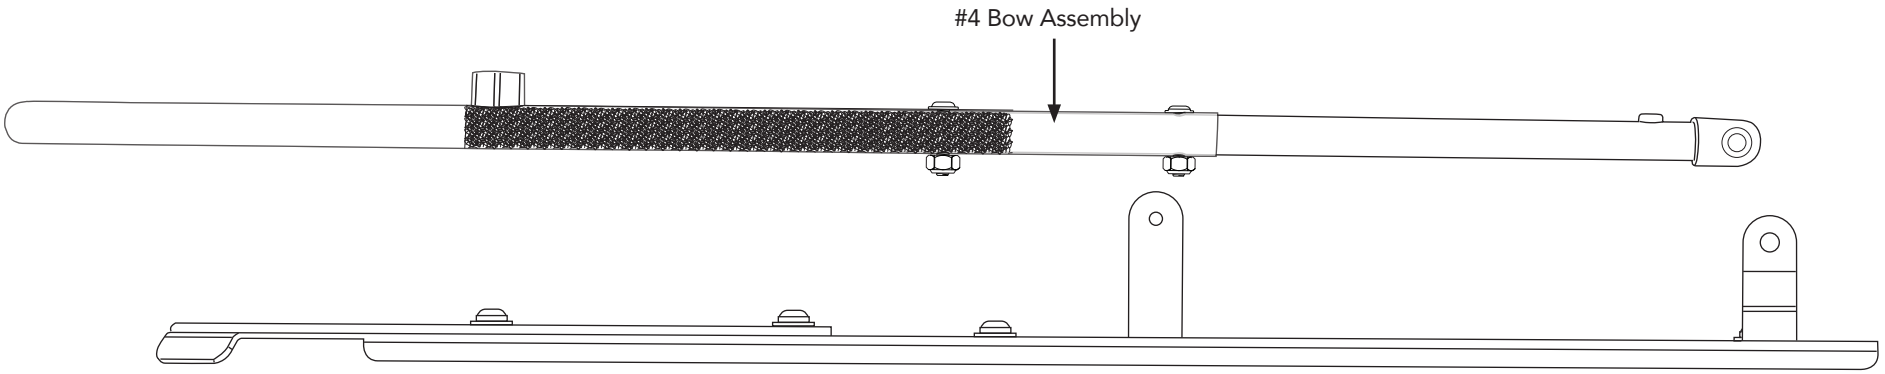


Place the #4 bow onto the bow mount tab located at the front of the over body bracket. Do this on both sides of the bow.

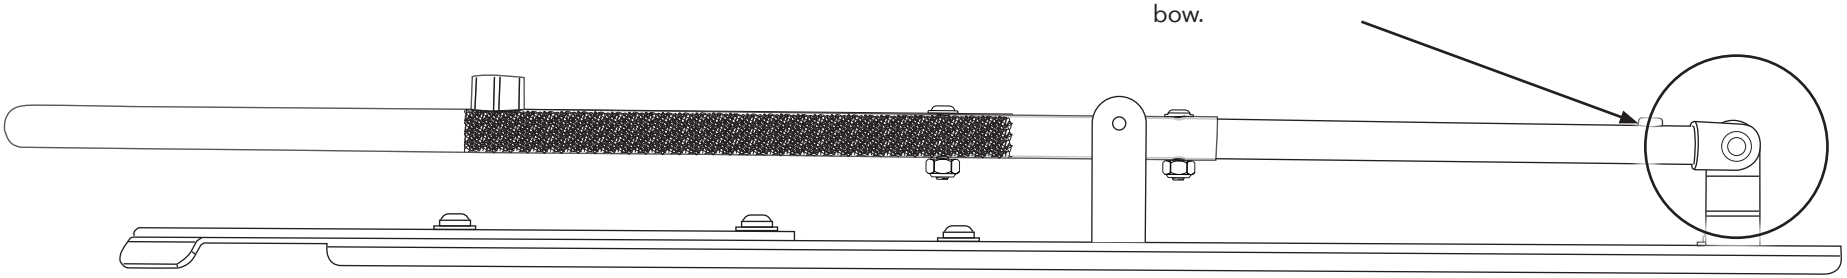






T30 Torx Driver

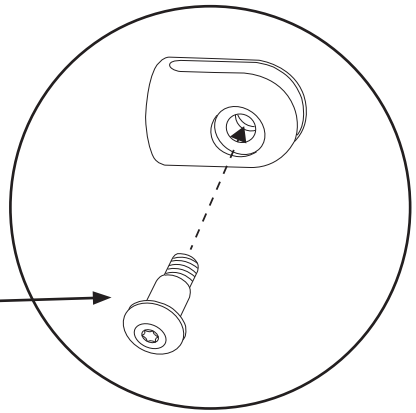


© 2026 Bestop, Inc.

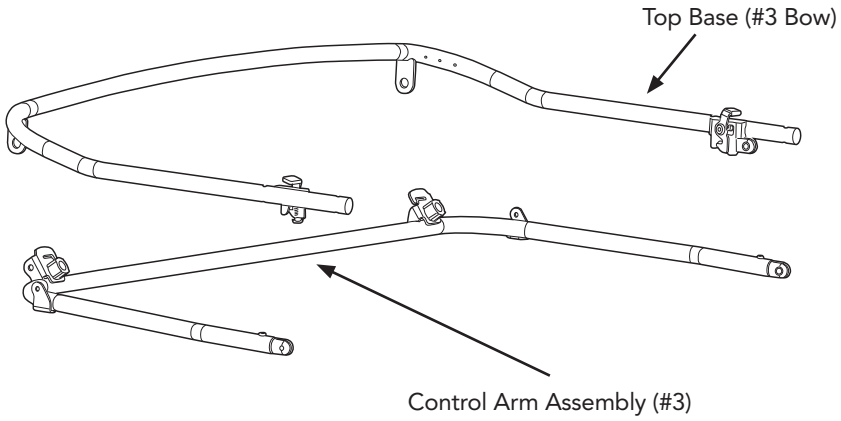

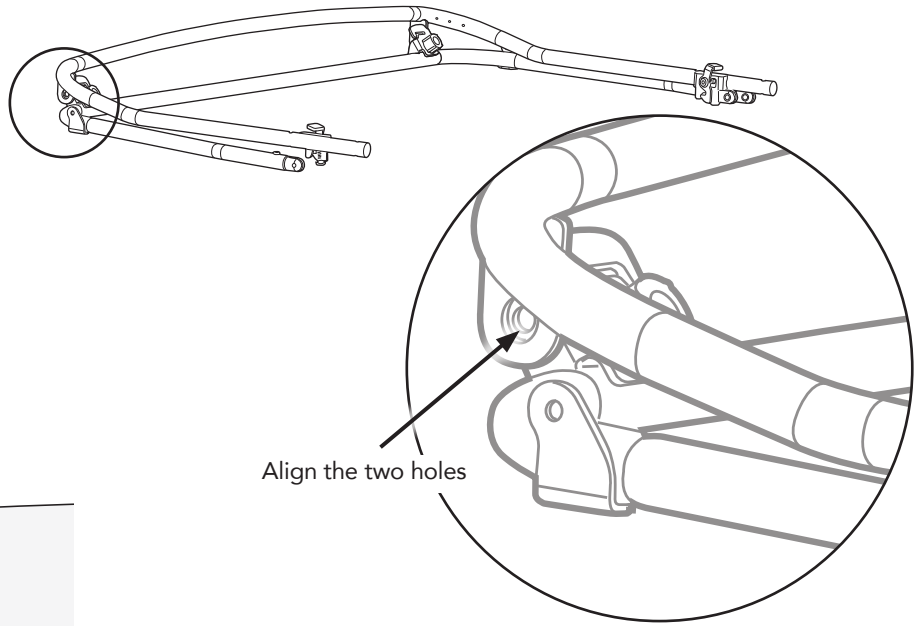

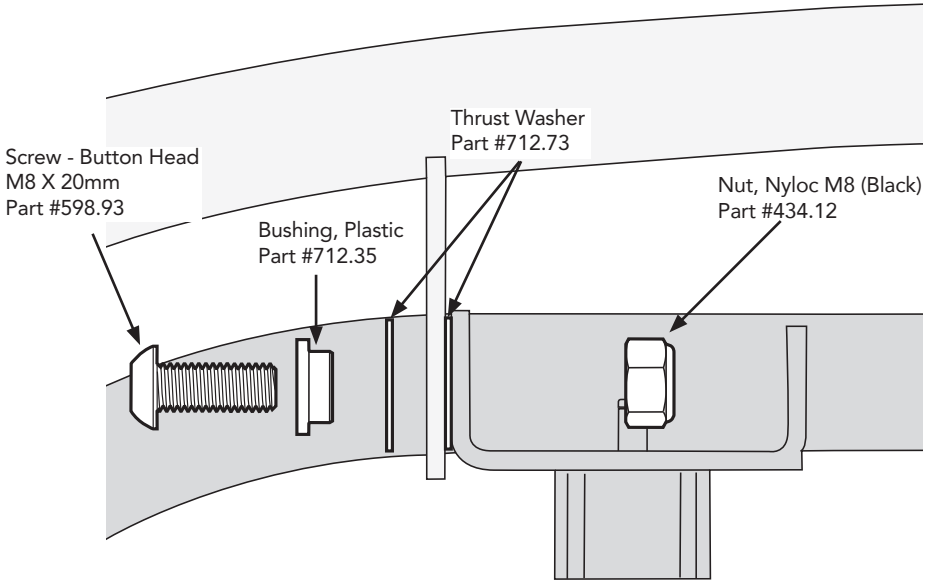


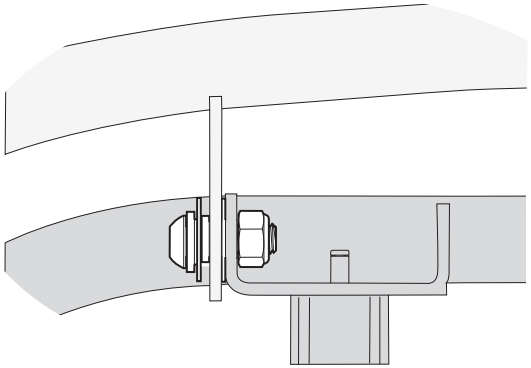



T40 Torx Driver


13mm Wrench

© 2026 Bestop, Inc.

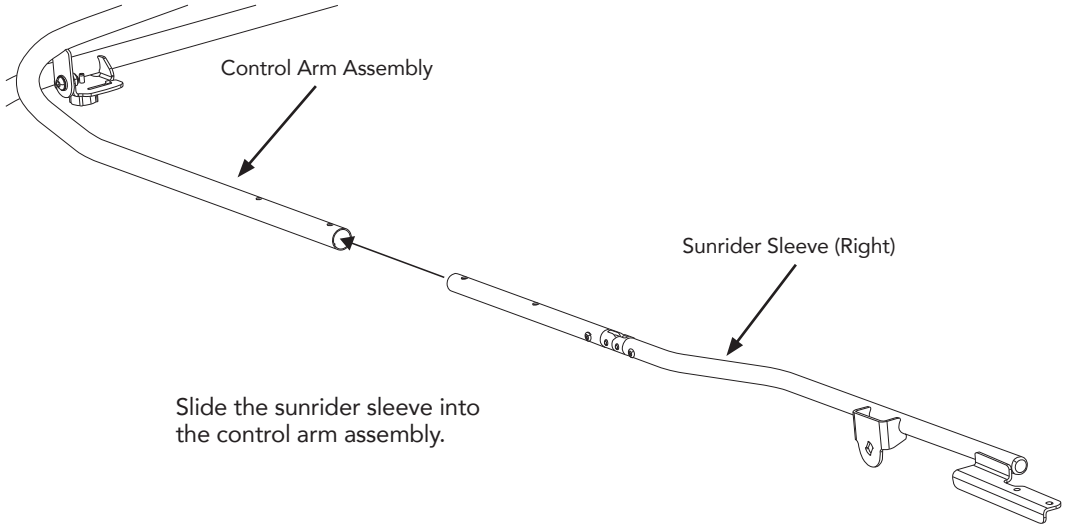

Slide the sunrider sleeve into the control arm assembly.

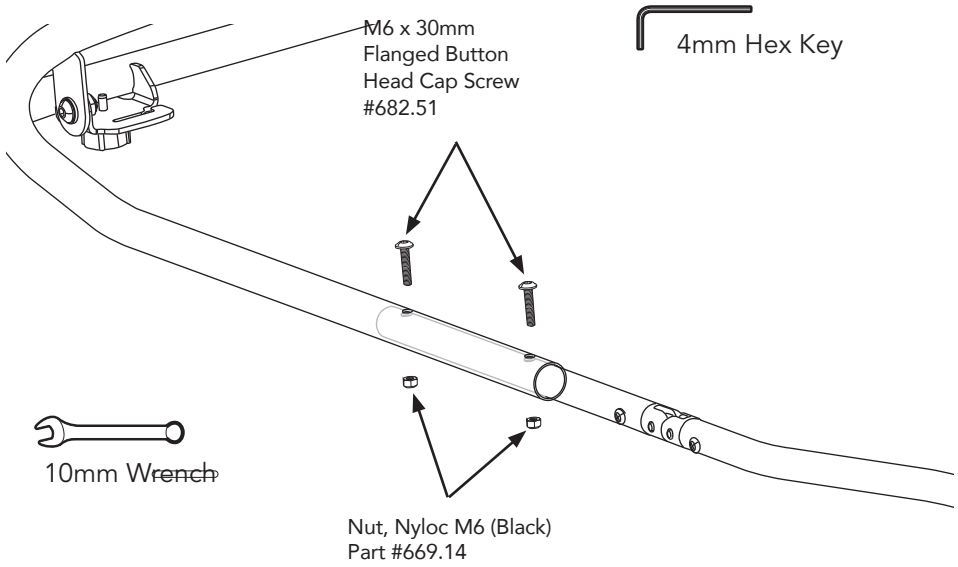



Repeat this on the left side of the #3 bow assembly.

© 2026 Bestop, Inc.




13mm Wrench

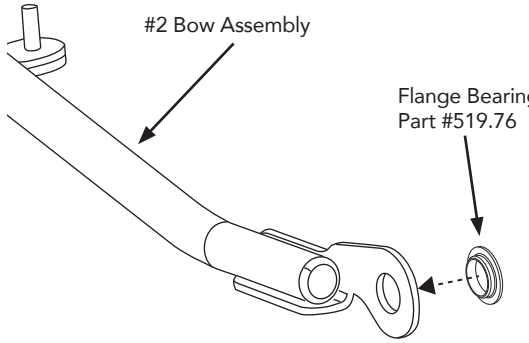

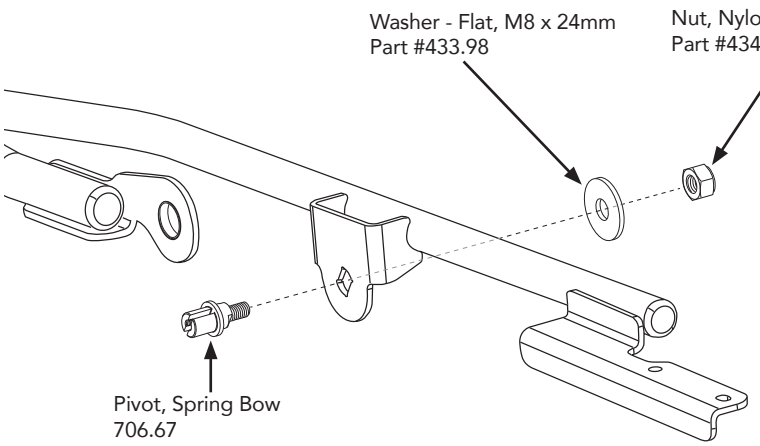

Place the #2 bow on the pivot, spring bow and be sure the bow is in the forward position.

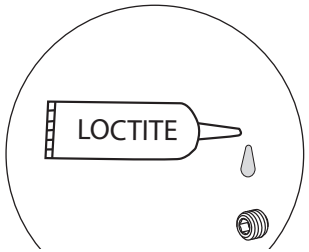

Place a drop of loctite on the set screw then screw it into the pivot.




3mm Hex Key

Place the lift assist spring onto the pivot

#2 Bow Assembly

Repeat steps on the other side of the bow assembly.


© 2026 Bestop, Inc.

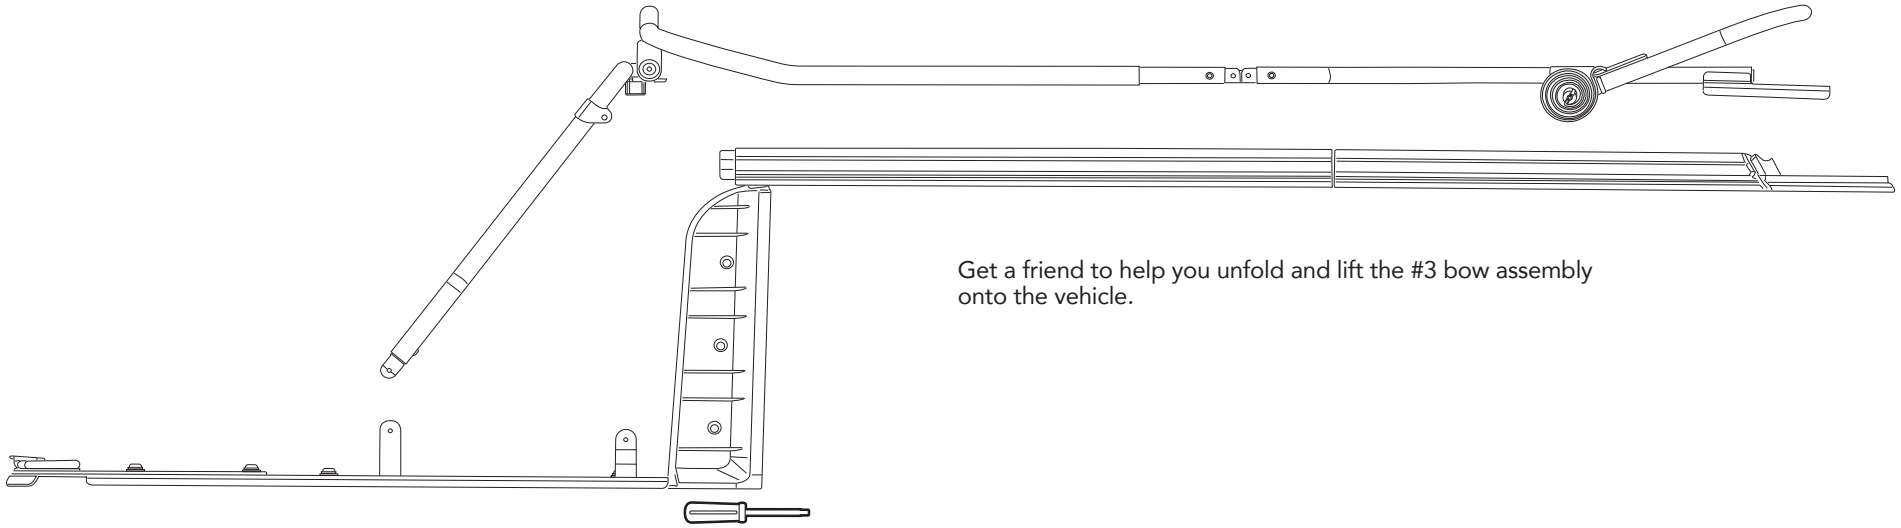

Get a friend to help you unfold and lift the #3 bow assembly onto the vehicle.

T30 Torx Driver


Place the #3 bow onto the bow mount tab located at the center of the over body bracket. Do this on both sides of the bow.

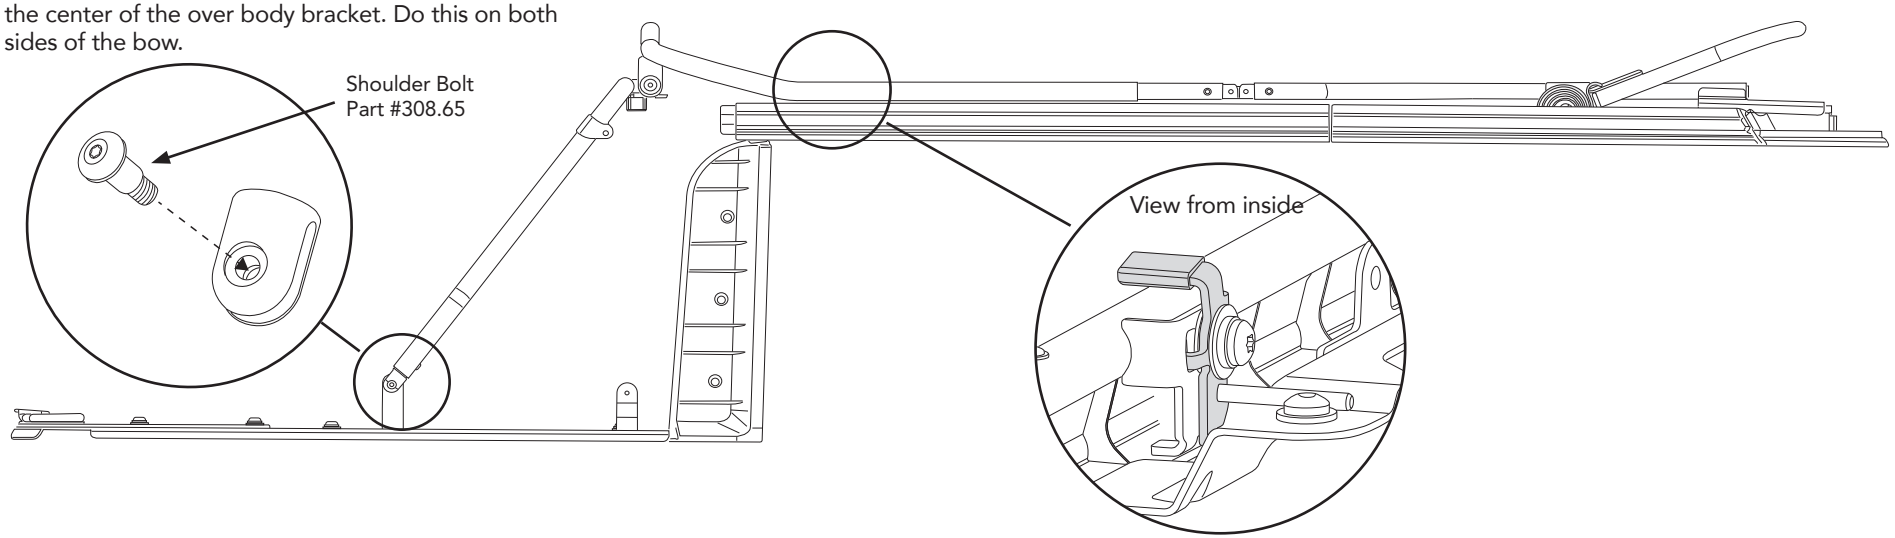

Tip


Be sure to sunrider latch is engaged to make it easier to control the #3 bow assembly.

© 2026 Bestop, Inc.

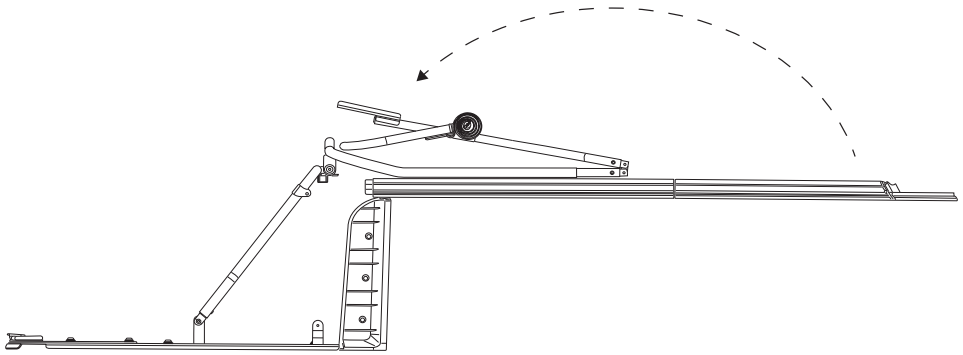

Move Sunrider sleeves and #2 bow to the open position.

Place fabric assembly on the hood of the vehicle and set the header on top of the windshield.

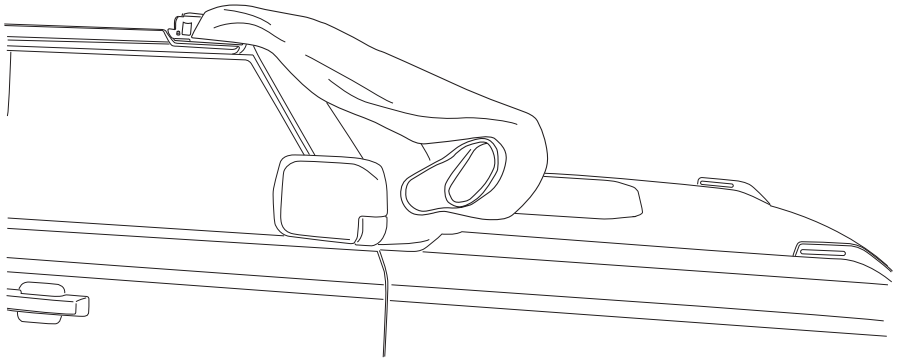


Tip

Place a blanket on top of the hood before placing the top assembly to help prevent scratches.




T30 Torx Driver

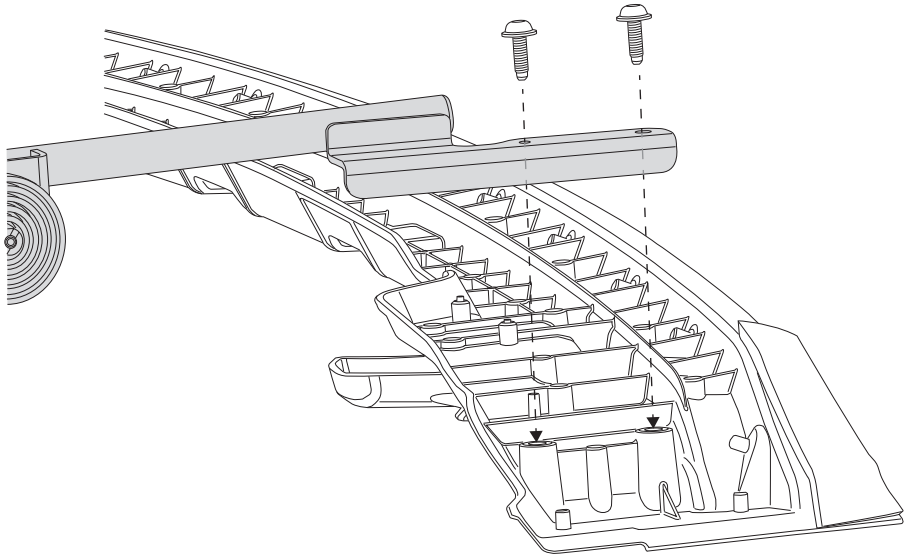

© 2026 Bestop, Inc.




#2 Phillips Screwdriver

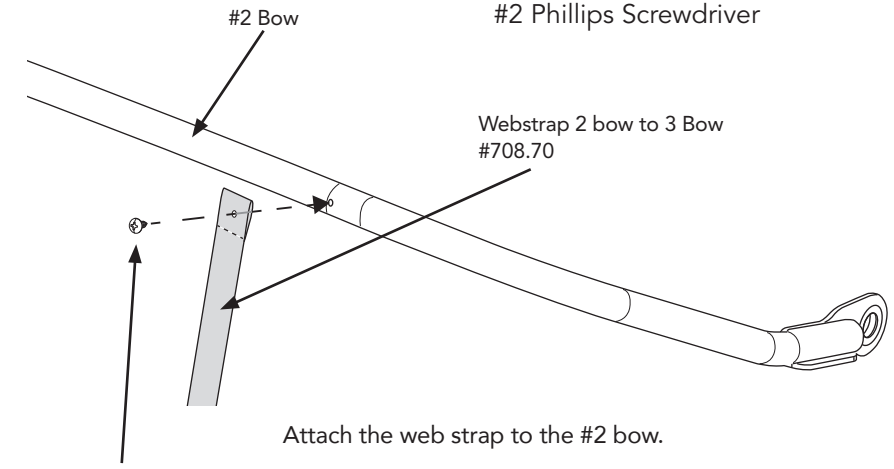


Attach the web strap to the #2 bow.


Screw, Phillips #8 x 1/2"
Part #393.79

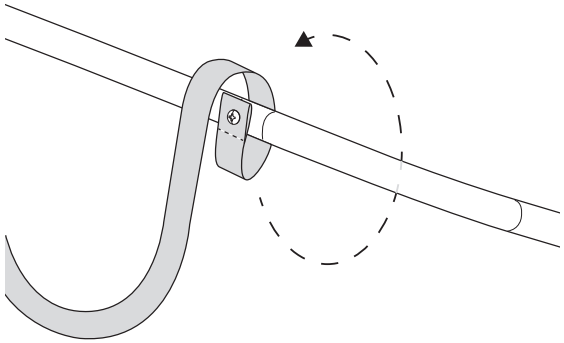

Pull the strap forward then up and over the #2 bow and back towards the #3 bow.

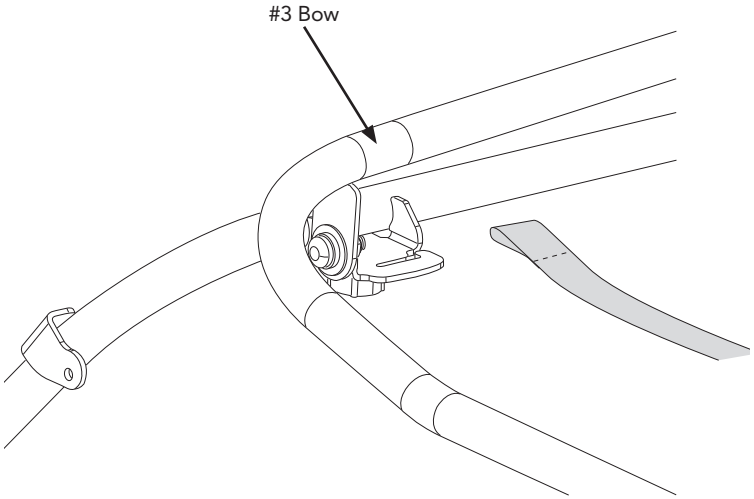


Slide the loop of the web strap onto the hook located on the #3 bow assembly.

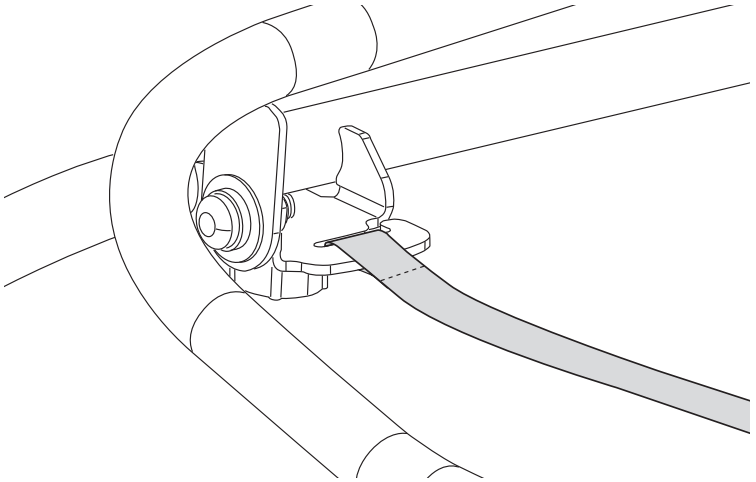


Repeat this on the other side of bows.

© 2026 Bestop, Inc.

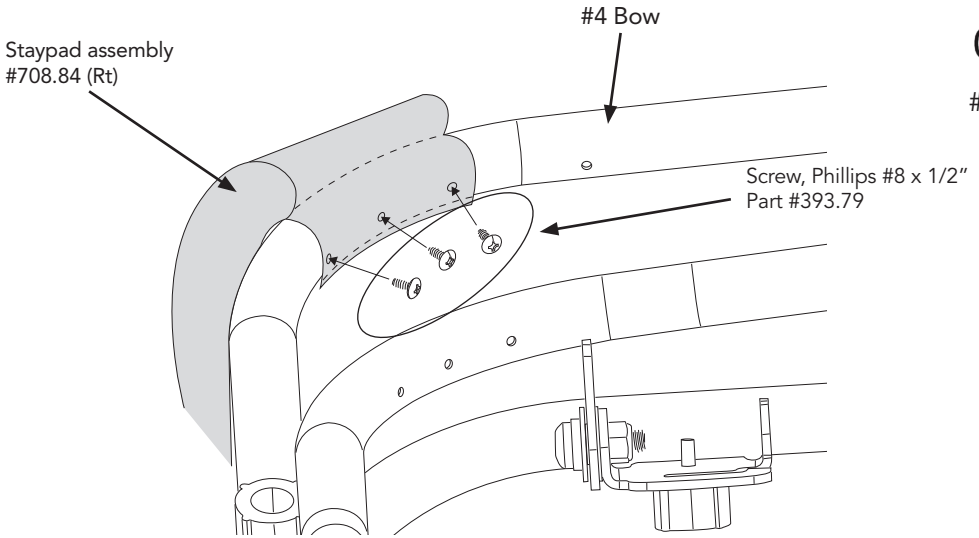





#2 Phillips Screwdriver

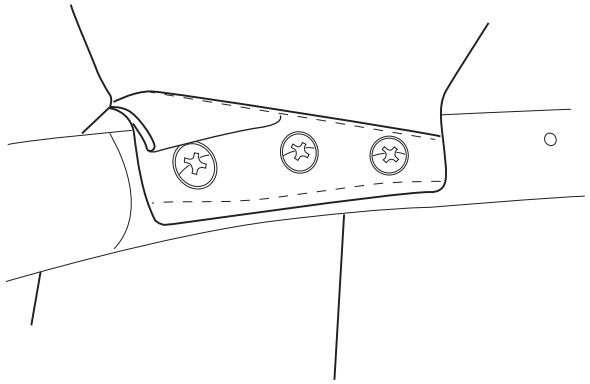

Pull the tab on the staypad forward and attach with three sheet metal screws.

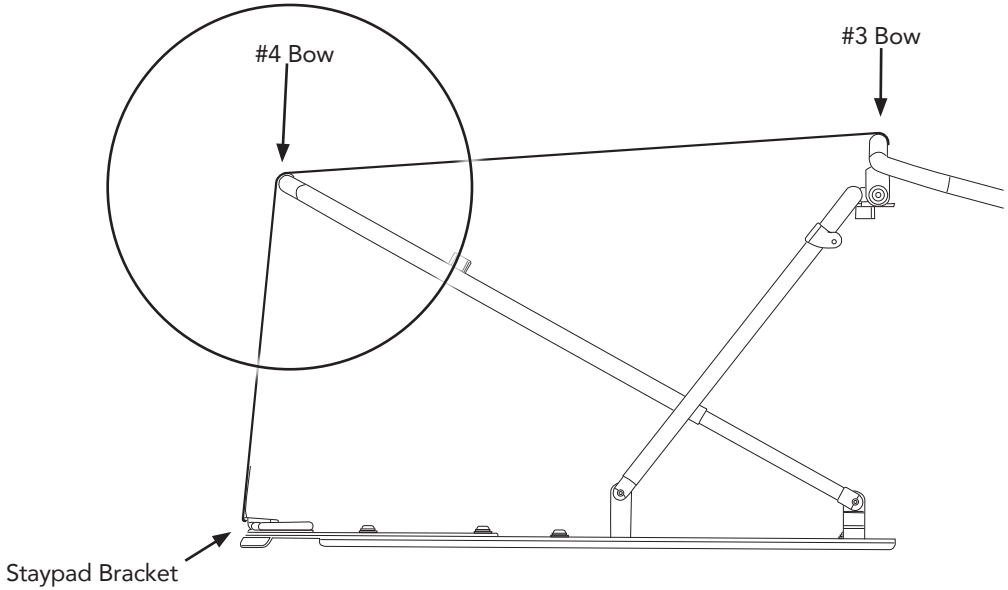


© 2026 Bestop, Inc.

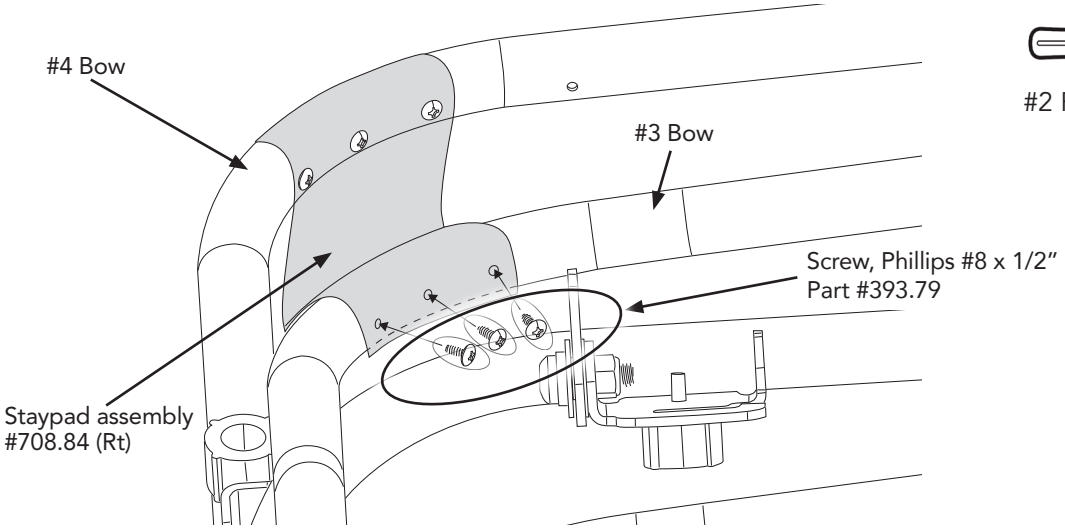




#2 Phillips Screwdriver


Pull the staypad forward and attach to the #3 bow assembly with three sheet metal screws.

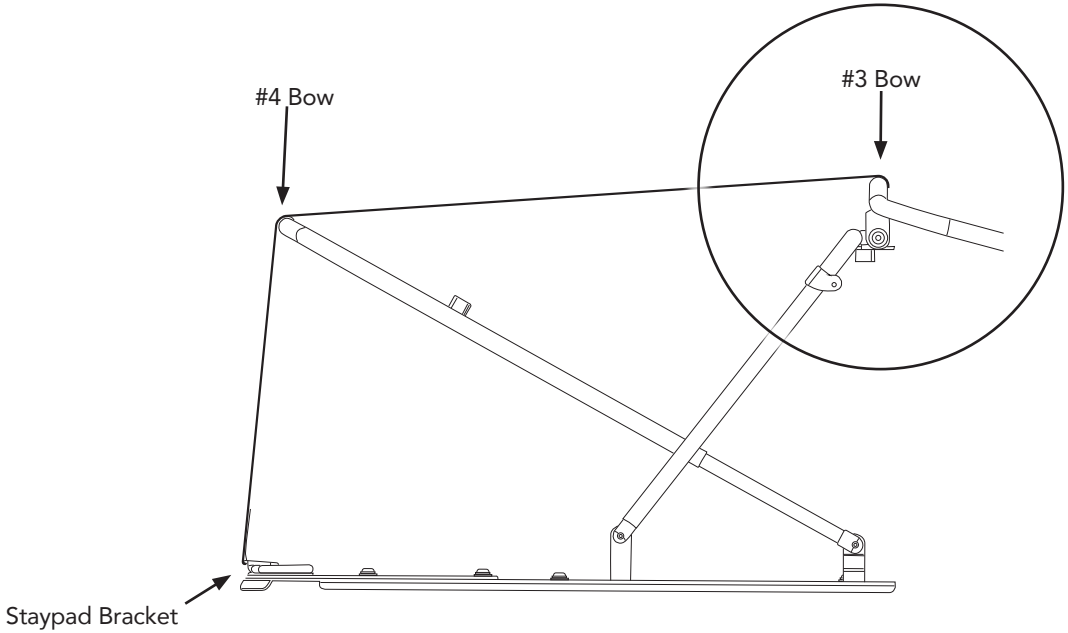


© 2026 Bestop, Inc.

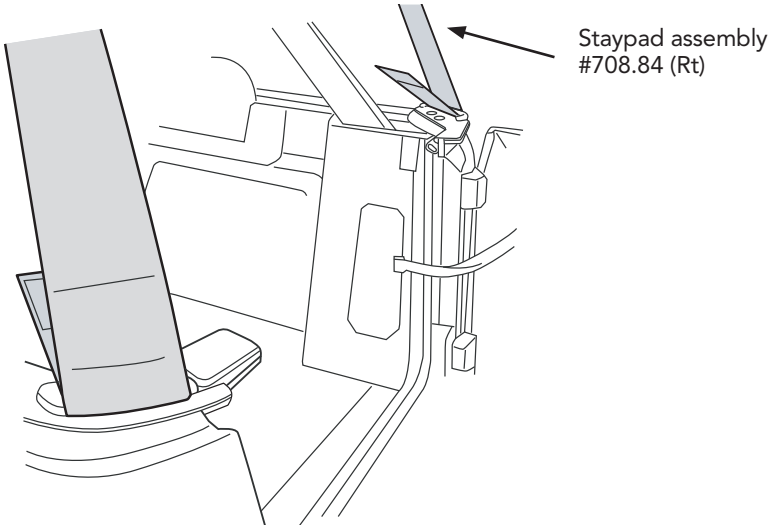

Pull the staypad down and thread it through the staypad bracket (from the outside to the inside) then attach the hook to the loop at the loosest setting.

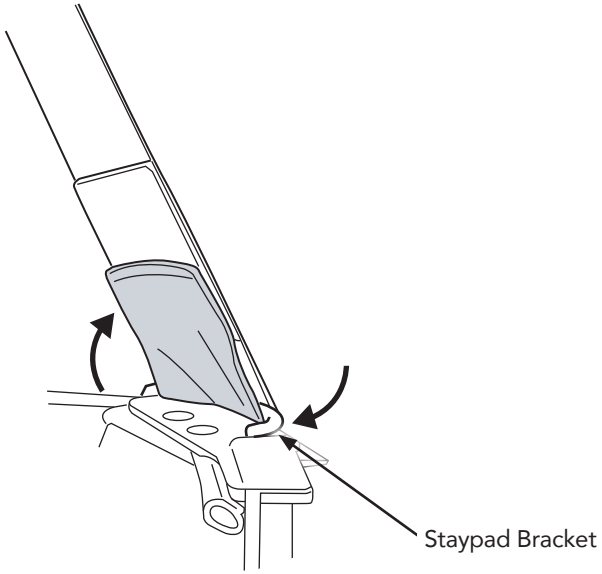


NOTE: You may need to adjust the staypad after the fabric assy installed.

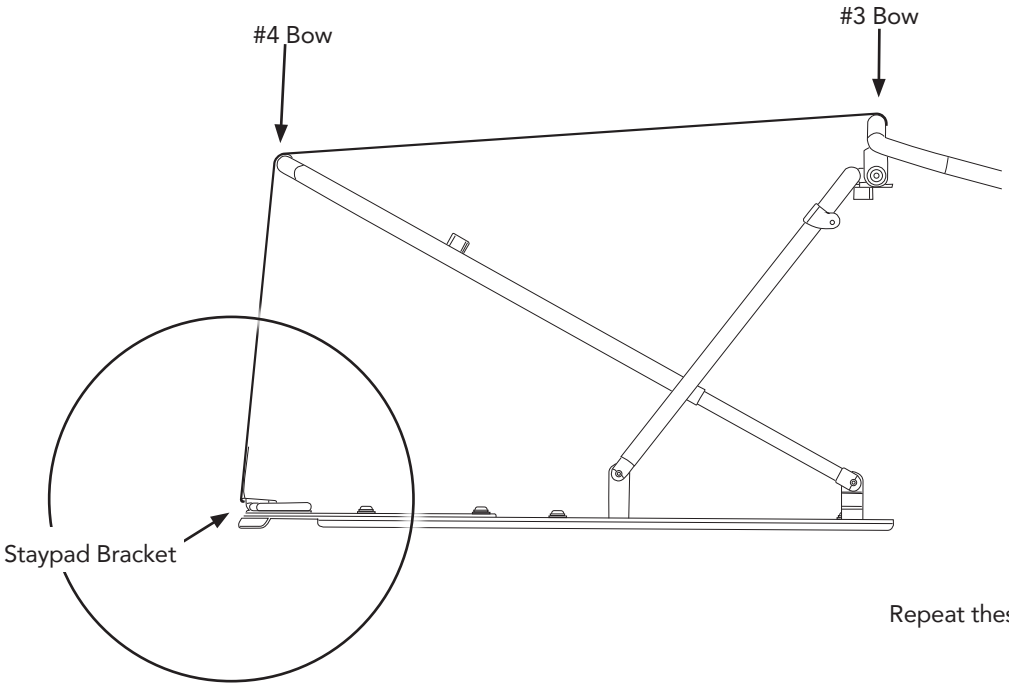


Repeat these three steps on the other side of the bow assembly.

© 2026 Bestop, Inc.


Roll the fabric out over the bow assembly.

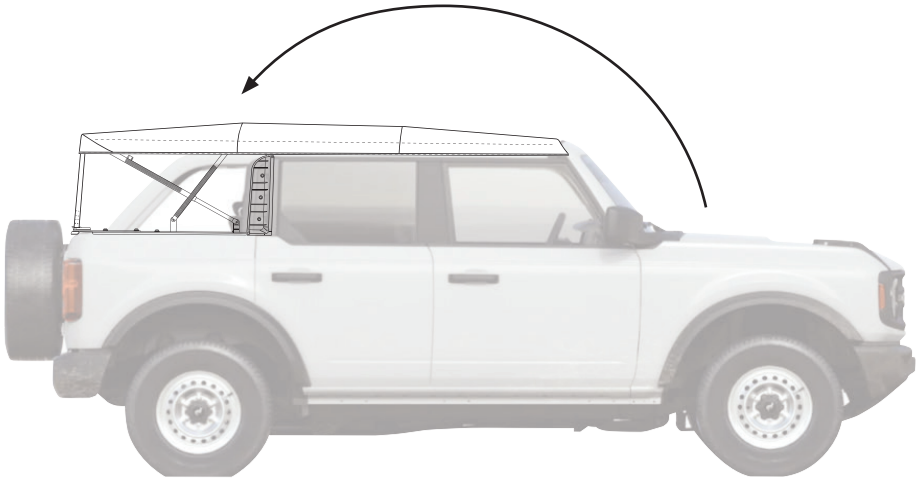


Open the sunrider.

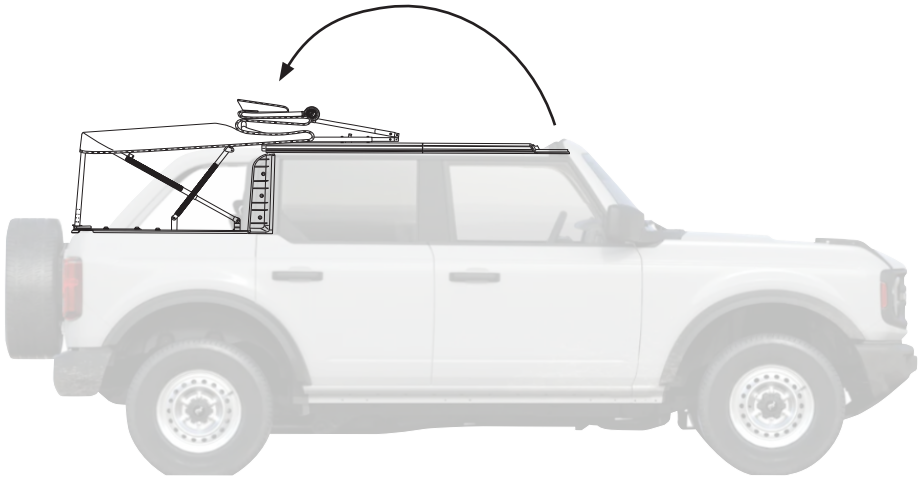


© 2026 Bestop, Inc.

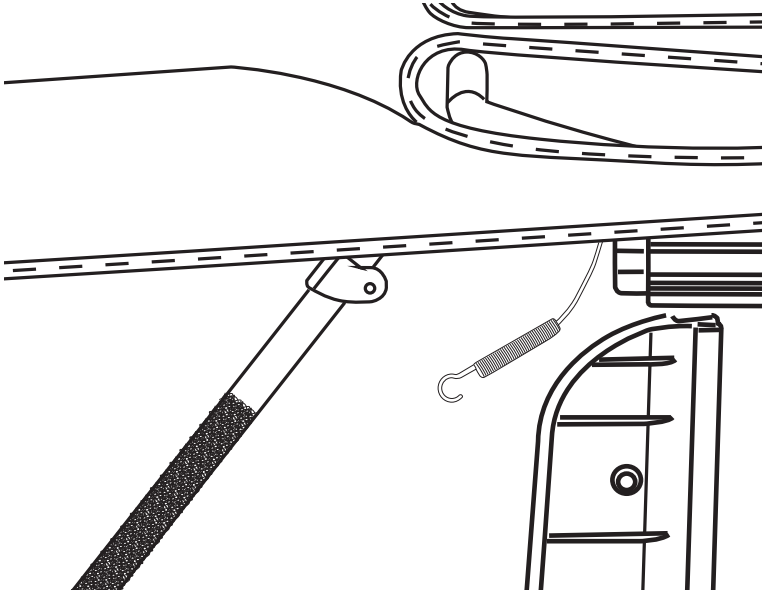

Pull the cable spring from the inside of the fabric assembly.

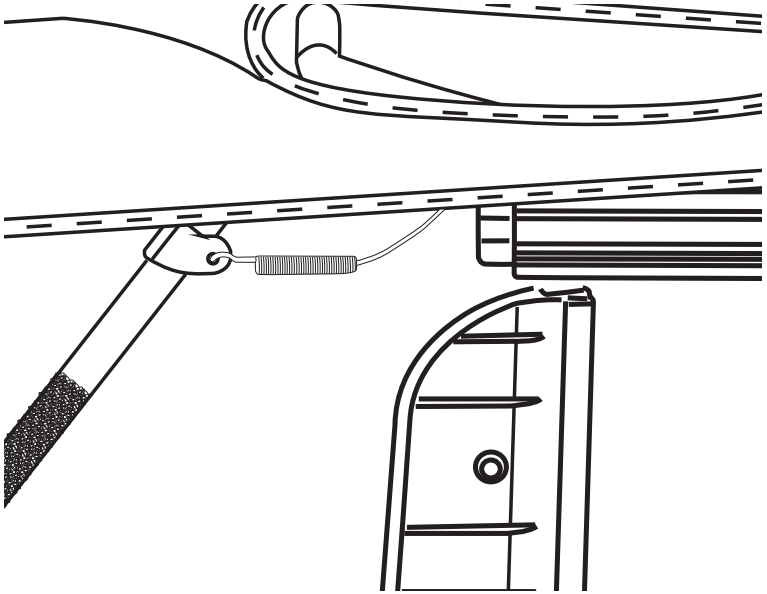

Attach the cable to the bracket on the #3 bow.

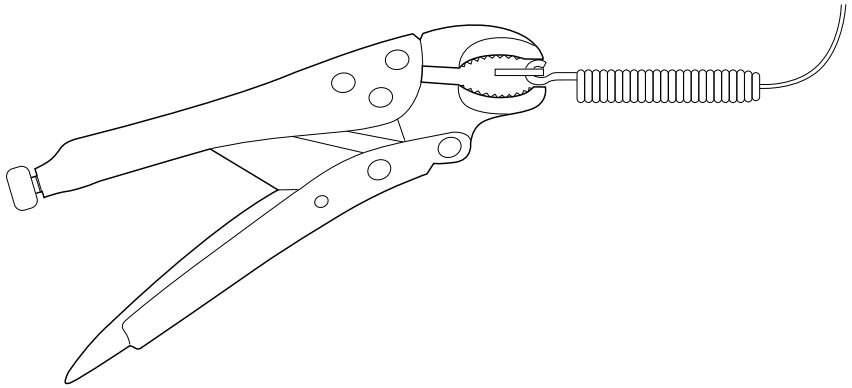


Crimp the cable spring to the bracket.
Repeat on the other side of the vehicle.

© 2026 Bestop, Inc.



#2 Phillips Screwdriver

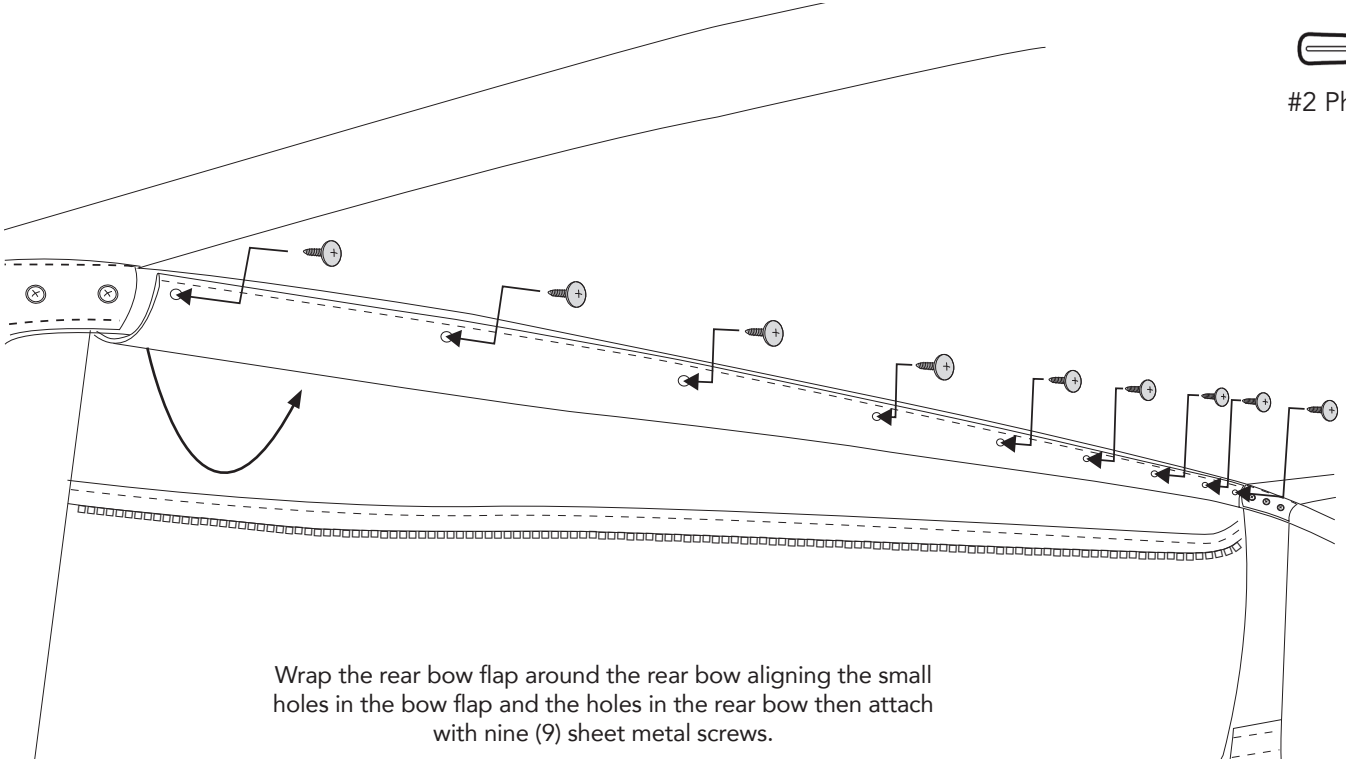


Wrap the rear bow flap around the rear bow aligning the small holes in the bow flap and the holes in the rear bow then attach with nine (9) sheet metal screws.


Tip


Attach the end screws first then finish with the inside screws.


© 2026 Bestop, Inc.

Close the top.

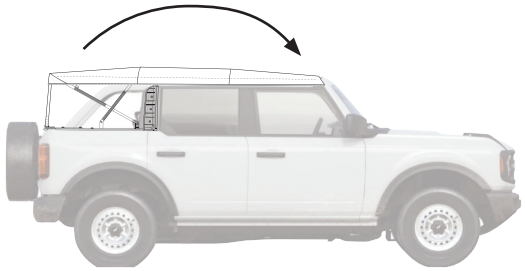

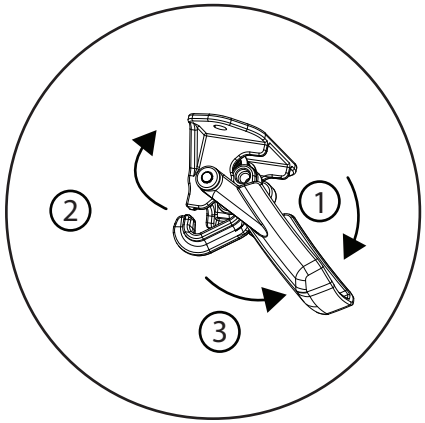

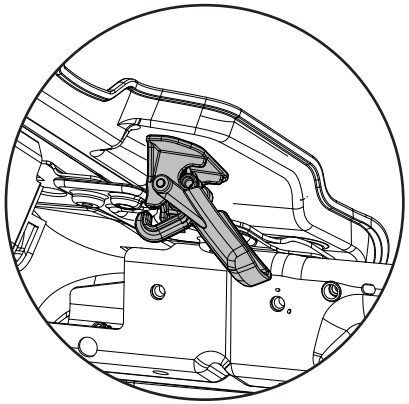

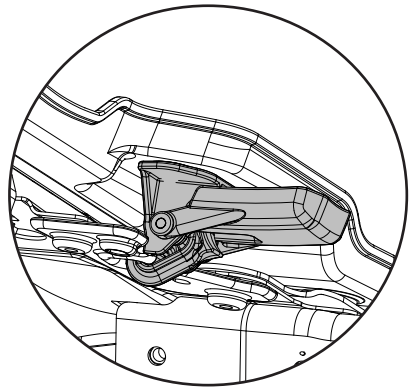


Secure both latches to the vehicle's windshield header.


① Pivot the latch handle down;

② Engage the hook;

③ Pivot the latch handle back up.

#3 Bow

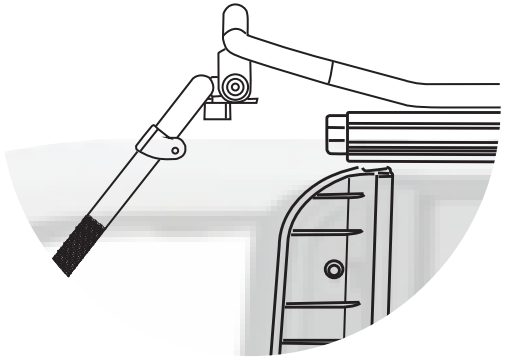


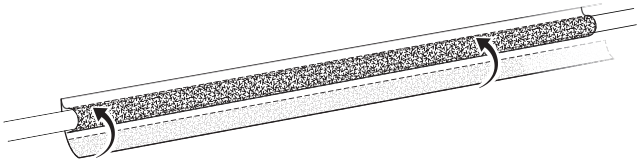


#3 Bow #2 Bow




#2 Bow

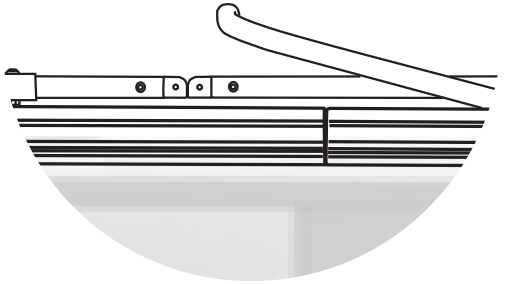


© 2026 Bestop, Inc.

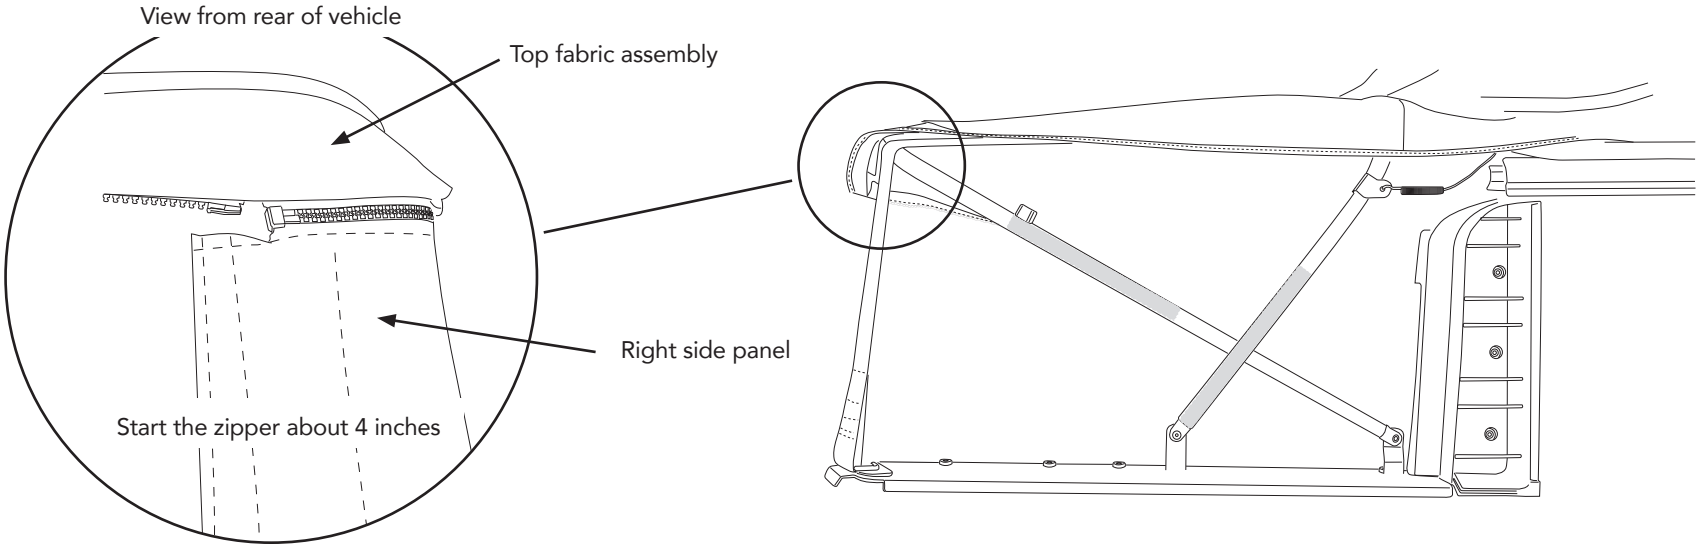


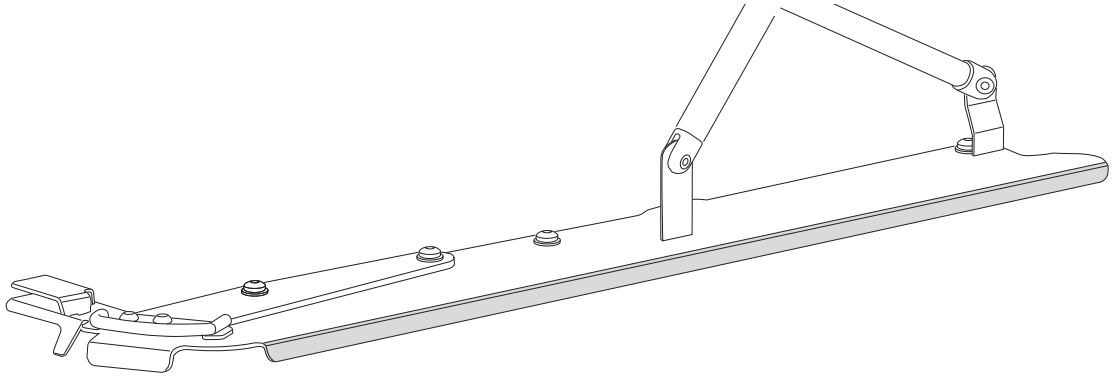


Attach the plastic retainer located on the inside bottom edge of the side panel to the outer edge of the body mount bracket aligning the plastic strip with the ends of the tab.

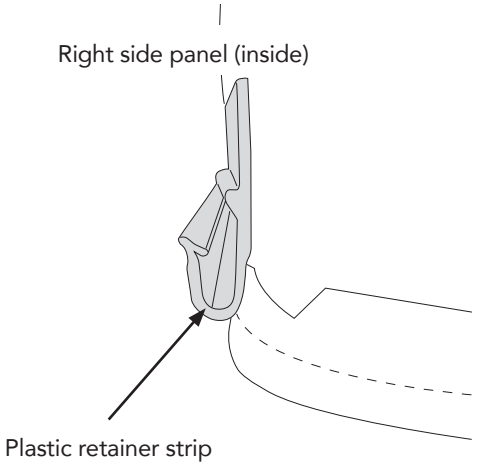

© 2026 Bestop, Inc.

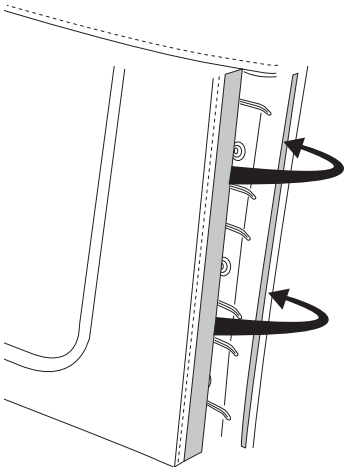

Attach the front window retainer into the slot in the vertical quarter window retainer.

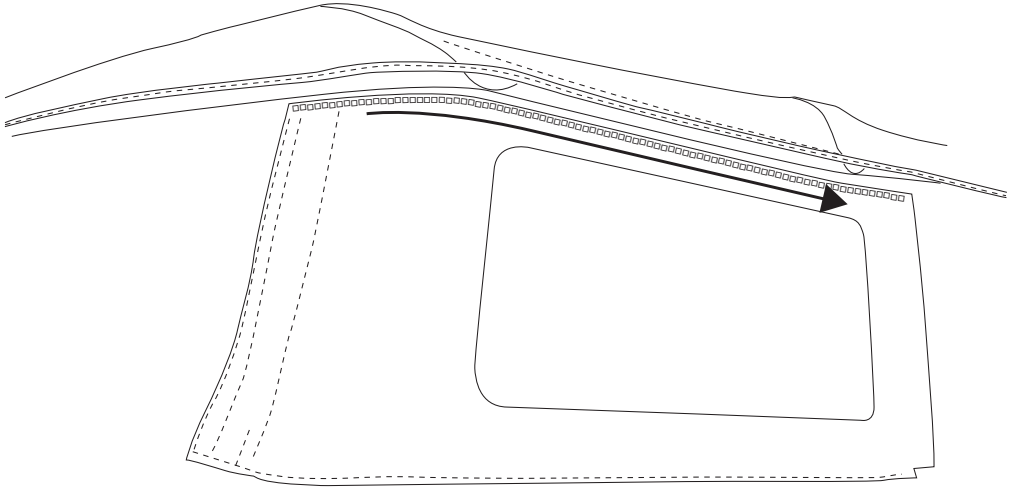

Finish zipping the window to the top assembly.

Complete the steps on the other side of the vehicle


© 2026 Bestop, Inc.




1. Zip the top of the rear window to the top fabric all of the way across.
2. Start zipping the rear window to the side panels about 3 inches.

© 2026 Bestop, Inc.


View from inside the rear window

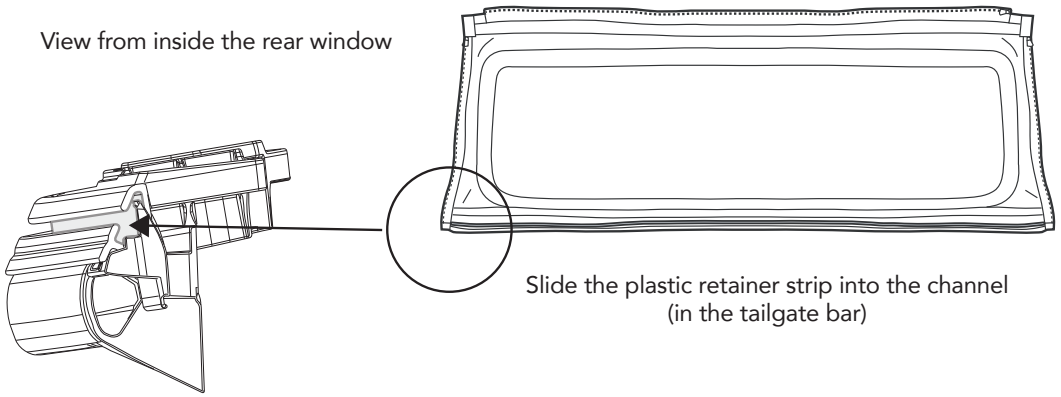


Slide the plastic retainer strip into the channel (in the tailgate bar)

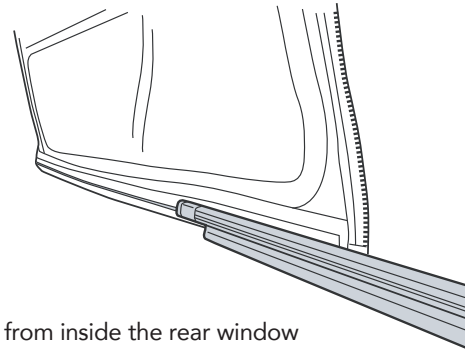

View from inside the rear window

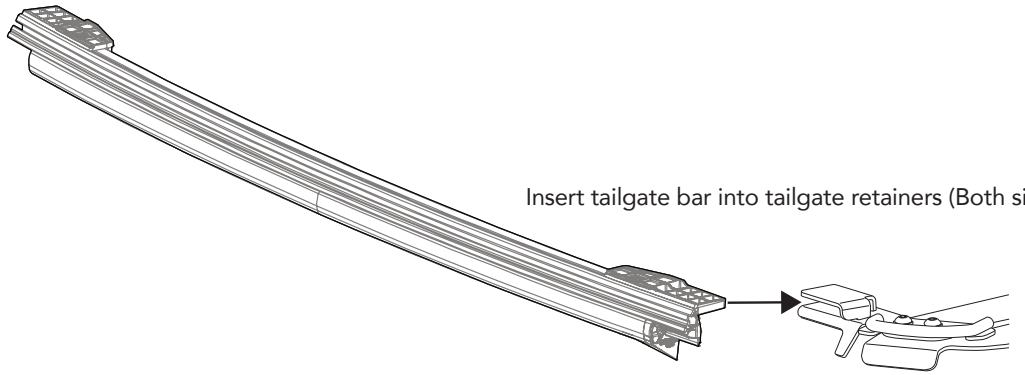

Insert tailgate bar into tailgate retainers (Both sides)

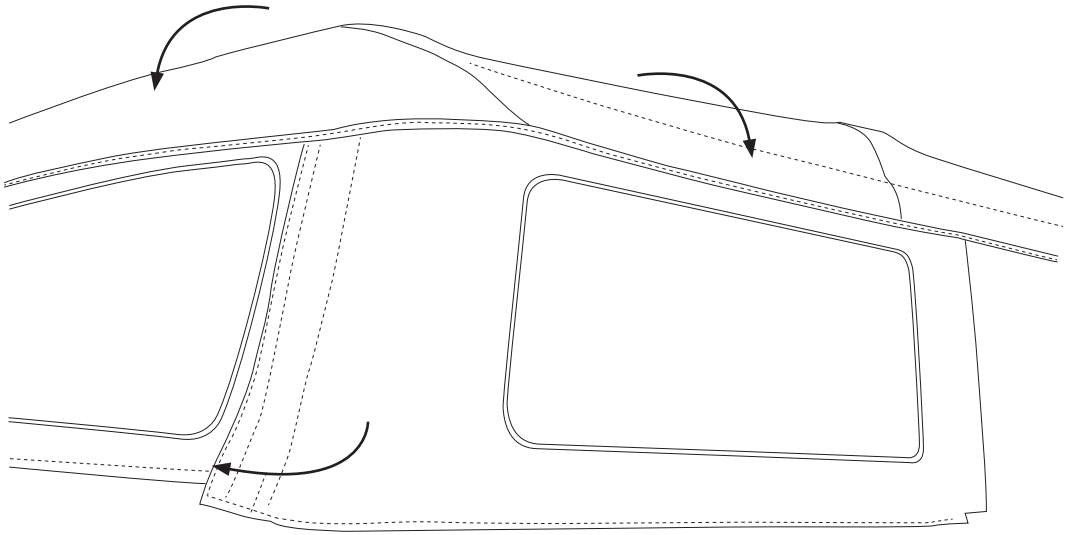

Finish zipping the rear window to the side panels, connect the hook to the loop on the side panels to the rear window then fold the flap of the top fabric down over the top of the side panels and the rear window.

© 2026 Bestop, Inc.

Care and Maintenance of your Bestop Product

Your Bestop product is made of the finest materials available. To keep it looking new and for the maximum possible wear, it will need periodic cleaning and maintenance.


Fabric: The fabric should be washed often using soap, warm water and a soft bristle brush Rinse with clear water to remove all traces of soap. Bestop recommends using Bestop Cleaner (part no. 11201-00) and Bestop Protectant (part no.11202-00) for Vinyl fabric and Bestop Twill Protectant (part no. 11207-00) for Twill fabric. Bestop Cleaner and Bestop protectant are specially formulated to provide a total cleaning and protection system. Bestop Cleaner safely removes the toughest stains, will not harm vehicle finishes, is biodegradable and environmentally friendly. Bestop Protectant protects against UV-fading, cracking and hardening, and repels dust, grease, dirt and mildew.

Windows: Keep windows clean to avoid scratching. DO NOT use a brush on the windows! Wash with a water-soaked cloth or sponge and a mild dishwashing detergent. Bestop recommends Bestop Vinyl Window Cleaner (part no. 11203-00), which safely cleans and protects vinyl windows and helps prevent UV damage. NEVER WIPE THE WINDOWS WHEN THEY ARE DRY. Be careful when cleaning snow or frost from the vinyl windows since they are easily scratched and may crack at low temperatures. DO NOT roll the sides or rear window in cold weather. The windows become stiff and will crack. Cracks caused by misuse in cold temperatures are not covered under warranty.

Water: Seeping through at the seams may be stopped by applying 3-M Scotchgard® on the inside of the seams.


Snaps: Keep snaps cleaned and lubricated with silicone to help prevent snaps from sticking to the studs. If a snap does become stuck to a stud, use a screwdriver and GENTLY pry apart to prevent permanent damage to the snap or the top fabric.

Zippers: Keeping zippers cleaned and lubricated with Bestop's Zipper Cleaner (part no. 11206-00) will help prevent damage and keep the zippers in smooth working condition. If a zipper opens behind the slider, the slider may have been spread apart. This problem can usually
be repaired by using an ordinary pair of pliers to bring the sides back into parallel. Return slider to the end of the zipper in the normal Open position. Squeeze lightly at first and test the zipper. If the zipper continues to remain open squeeze more firmly with the pliers and try the zipper again. Repeat this procedure until the zipper operates correctly.

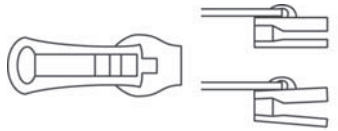

Normal Slider-
Jaws Parallel

Damaged Slider-
Jaws spread apart
(Sometimes broken)



For Bestop Warranty Information, Please go to;
https://www.bestop.com/help/warranty-information/

© 2026 Bestop, Inc.