



baja designs®
THE SCIENTISTS OF LIGHTING

**2024-2025, GMC, Canyon, Yukon
2500/3500 & 2025 1500 AT4-X, S1
Fog Pocket Kit**

44-7878 & 44-7879



2950 Norman Strasse Rd • San Marcos • CA • 92069

Phone 760-560-2252 x3 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com





baja designs[®]
THE SCIENTISTS OF LIGHTING

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.

Buyer is responsible for ensuring that it uses the products (and its vehicle) in accordance with all applicable laws, regulations, guidelines, and standards of care. Buyer acknowledges that some products may only be used when off-roading, and Buyer will comply with all vehicle and road safety guidelines. Buyer is solely responsible for (and will indemnify and hold Bestop harmless for) any claims, losses, damages, fines, fees, costs, or other amounts arising out of Buyer's non-compliance with these provisions.




Under the hood you will remove 2 T15 screws.

Then slide out the hood latch.




Next, remove 9 Pushclips as shown.

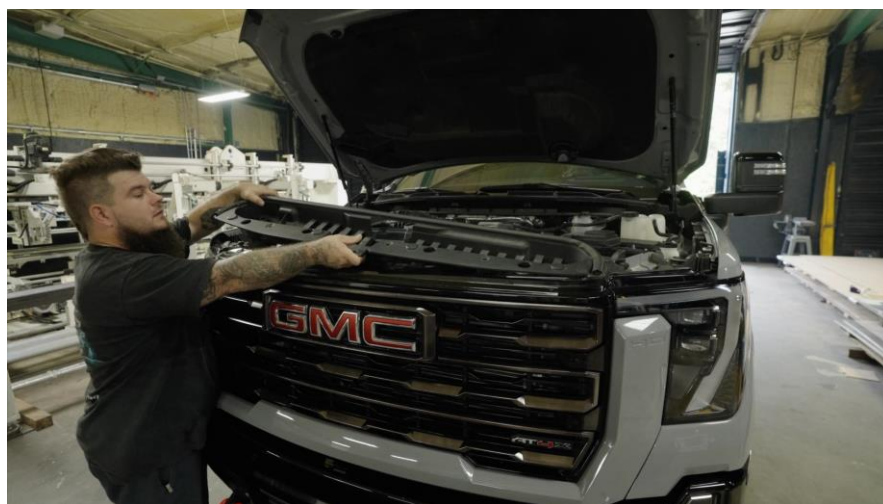

You will then lift out the radiator shroud.



Remove 4 10mm bolts in the top of the grille.

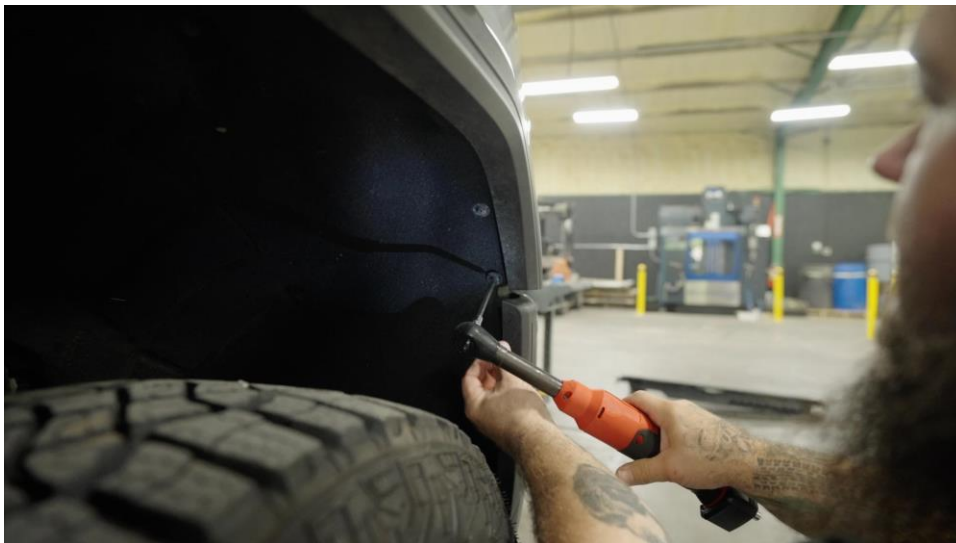

Then, remove 2 T15 Screws in both driver side and passenger side wheel wells inside of fenders.



Pop out front of fender trim. It will have 2 clicks when removing.
Repeat on both sides.




Remove the 7mm bolt behind the fender trim.
Repeat on both sides.



Remove the front corner panels on both sides. This is held in with clips.



On the passenger side behind the front corner panels you will find a main wiring harness, as well as your front grill camera harness. Disconnect both.

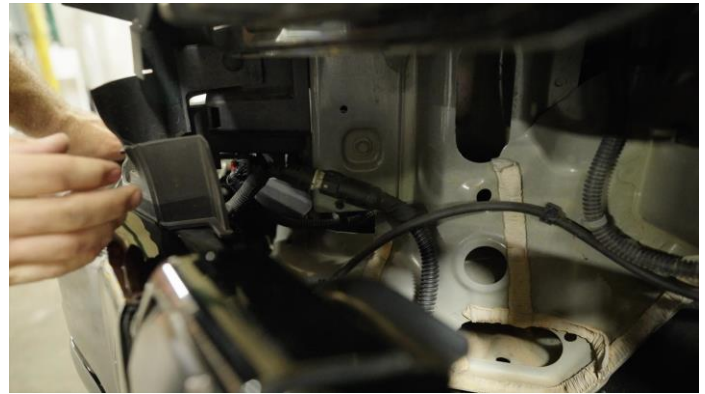

On the drivers side behind the front corner panels you will disconnect your camera cleaning hose. If your truck is equipped with a front bumper block heater (shown on the right), disconnect this harness as well.



Pull up on the grill to remove the locking tabs.



Remove the front grille.




Remove 4 18mm bolts under the front grille. (Reference photos below)





If you have aftermarket tow hooks remove them. If your truck has stock tow hooks they don't need to be removed to take off your bumper.

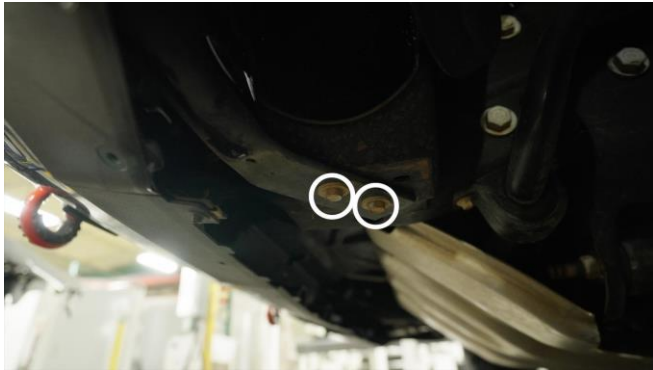

Remove 4 15mm Bolts underneath the bumper.



Remove the front bumper. Place upside down on your work station.



Using a pry tool unclip the 2500/3500 badge in your front bumper.
Repeat this and the next 4 steps on both sides of the bumper.



Under the badge remove 2 7mm bolts.



Behind the bumper remove 2 7mm bolts.




Pop out 4 push clips. Then remove bumper trim from the frontside of the bumper.



Under the trim piece, you can then remove 2 13mm bolts.



You will then remove eighteen 13mm bolts as shown in white circles. Two of the 13mm bolts are behind the brackets held in by two 15mm bolts shown in black circles above.

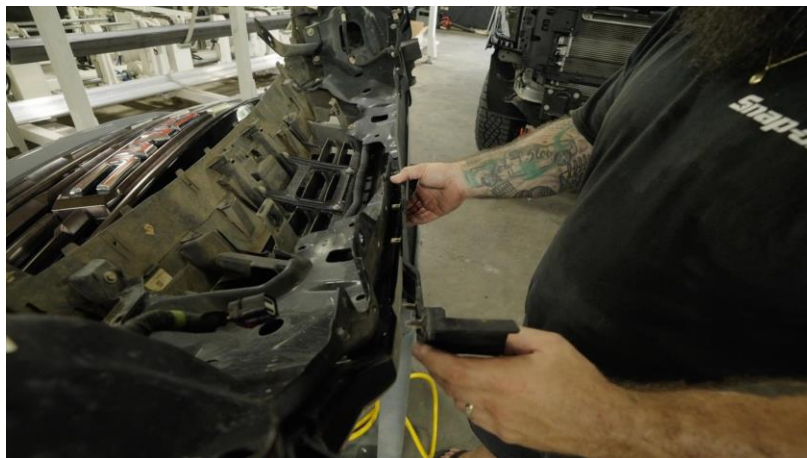

Next remove the trim piece on the top of the bumper. This is held in with push clips and should come right off.





You can then pull the metal bracket to the side, revealing your fog light housing.



Remove the three 7mm bolts to take out the factory fog light out of its housing.



Disconnect the factory fog light harness and remove the factory light.





Attach your BMC adapter to the factory harness.



Attach your wiring harness to the adapter, then set your new BMC Fog light utilizing a Baja S1 and screw in the 7mm bolts.

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.

