

03-06 Jeep TJ Adaptor Mounts (C24)

Install Instructions



Read through all of the instructions completely before beginning the install.



Parts Included:

- A. One set of adaptor mounts
- B. 4, 3/8" Washers
- C. 4, 3/8" x 1" Bolts and nylock nuts

Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.

Time:

Approx 30 minutes.

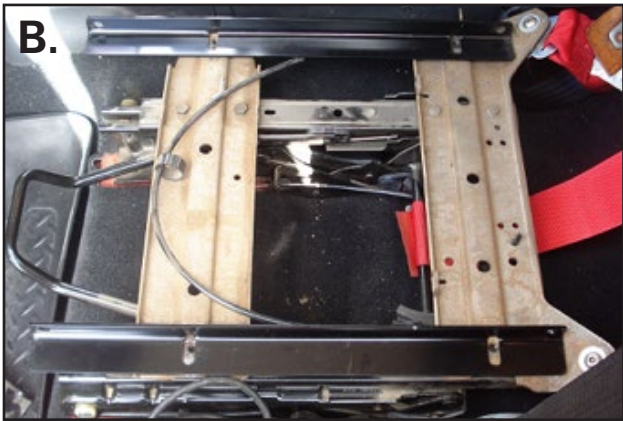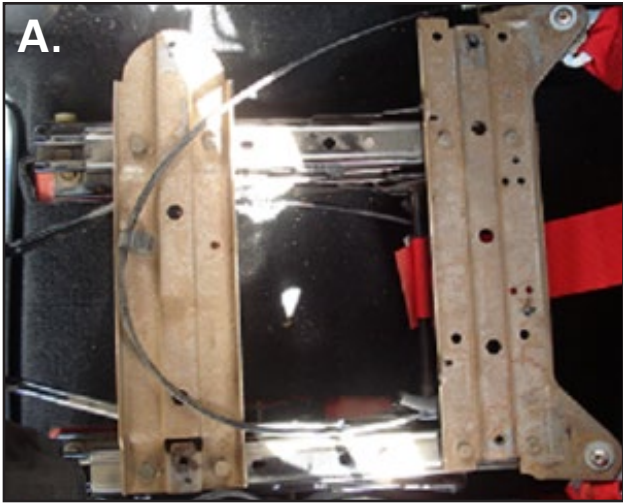

1. Remove your stock seats from the mounting hardware until your mount resembles picture A.
2. Place the adaptors label down as shown in the picture B (Driver side) or picture C (Passenger side).
3. Using the stock bolts that you removed from the holes that the brackets are aligned with, attach the new black brackets to your stock mounts.
4. Using the supplied hardware, install your new PRP Seats by aligning the seat tabs with the 4 vertical holes on your new PRP seat mounts.
5. Enjoy your new PRP Suspension Seats!

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to help at **1-800-317-6253**.

Thank you! Ride safe!