

Install Instructions

PRP Seats

Textron Wildcat XX

Door Bag Installation



Parts

A.



Read through all of the instructions completely before beginning the install.

Parts Included:

- A. 2, PRP Wilcat XX Door Bags (R&L)
- B. 4, M6 x 1.0 x 30mm - 3/16" Allen Head Bolt
- C. 4, #12 x 1.25" Phillips Head Screw (Larger)
- D. 2, #12 x 1" Phillips Head Screw (Smaller)
- E. 10, 1/4" Washers


Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.


Tools Needed: (not included)

- T-30 Torx Socket
- 3/16" Allen Head Wrench or Socket
- Phillips Head Screwdriver

Time:

Approx 10 minutes.

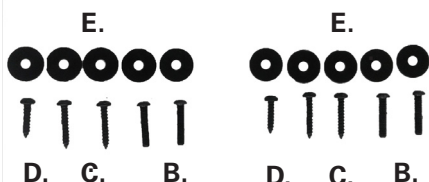

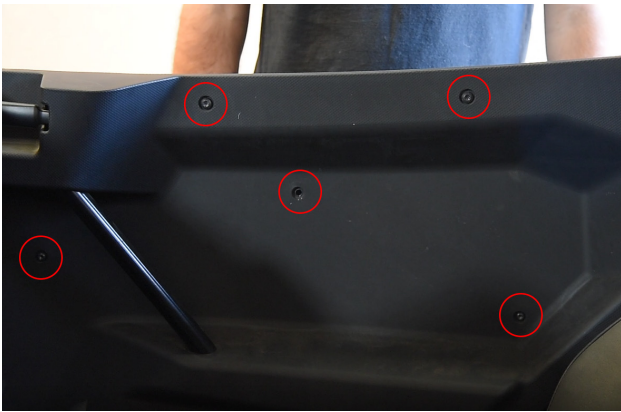

1. Remove the stock bolts from the door (shown in picture).

Use a T-30 Socket to remove the 2 top bolts in the center of the door, and 3 bolts in the recessed area of the door.




2. Once the bolts are removed, selected the appropriate door bag for the door you are installing on (R or L).

Take the Knee pad section, depress it, and push it through the gap between the door and grab handle tube.



3. Use our supplied hardware to attach the bag to the door.

Line up the two Ktex strips on the top of the bag to the two bolt holes in the top of the door. Then install the supplied (2x) 3/16" Allen Head Bolts with (2x) 1/4" Washers in this location.

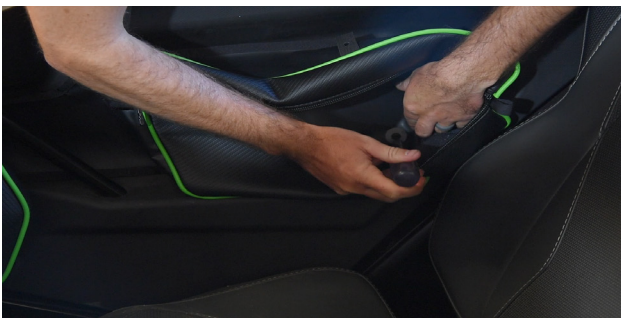

4. Unzip the door bag, and line up the two guide holes inside the back of the bag with the corresponding bolt locations on the door.

In the lower-rear bolt hole - install (1x) of the supplied 1" Phillips Head (Smaller) Screw with (1x) 1/4" Washers.

NOTE: Make sure that you install the smaller 1" size screw in this location. The longer 1.25" screw will puncture through the door!




5. Then in the upper-front bolt hole inside the bag, install the supplied (1x) 1.25" Phillips Head (Larger) with (1x) 1/4" Washers.



6. On the back of the bag is an adhesive hook and loop strip that provides extra support. Remove the backing, and stick the adhesive to the door firmly.



7. For the Knee pad section, separate the pad from the Ktex backing (Pull apart the Velcro). Line up the guide hole in the Ktex with the bolt hole in the door. Then install the supplied (1x) 1.25" Phillips Head (Larger) with (1x) 1/4" Washers.

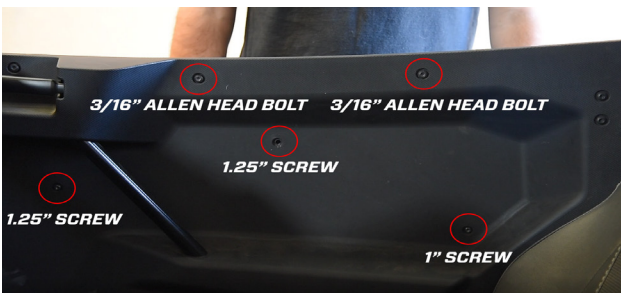

8. Do the same steps for the bag on the other side... and you're all set!

If you have any questions or experience issues, please contact your retail outlet first for assistance. However, the staff at PRP is always happy to help at **1-800-317-6253**.

Thank you! Ride Safe!