



BX88356
5th Wheel Wiring Kit
Installation Instructions

Serial Number



Have an Adventure


blueox.com • 800-228-9289

[facebook.com/blueoxproducts](https://www.facebook.com/blueoxproducts)

BX88356
5th Wheel Wiring Kit
Installation Instructions

Tools Required

Drill
 2-1/8" Hole Saw
 7/64" Drill Bit

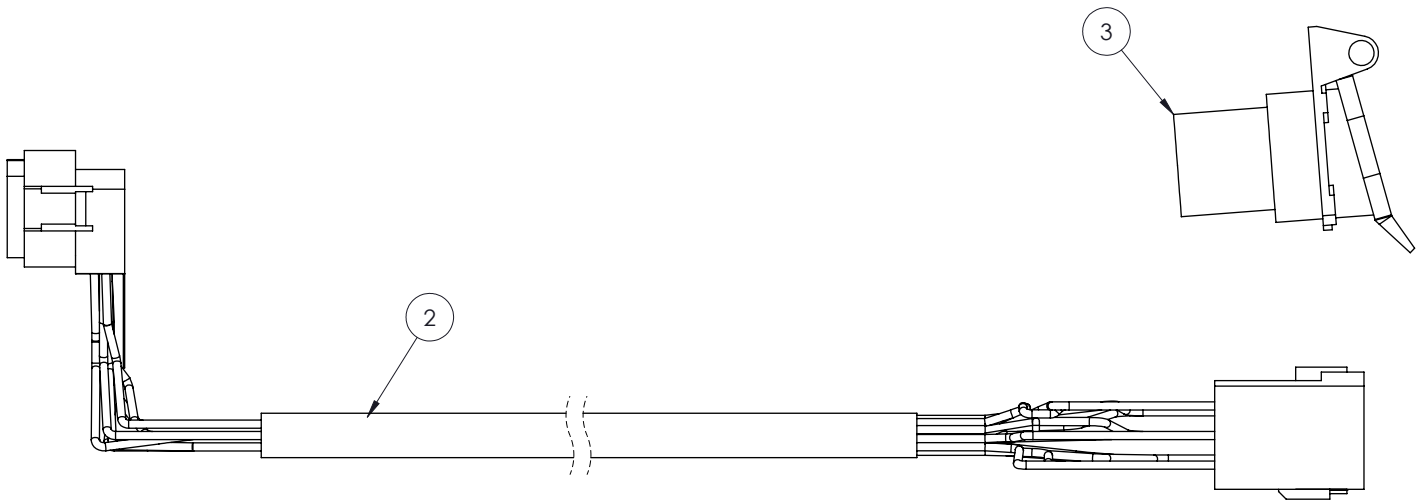



Item No.	Part No.	Description	Qty.
1.....	63-4740(not shown)	Bolt Bag	1
2.....	294-1194	6 ft. Wiring Harness	1
3.....	294-1195	7 Pole Trailer Socket	1

BX88356
5th Wheel Wiring Kit
Installation Instructions



1. Locate the factory OEM trailer light wiring harness on the underside of the vehicle. The wiring harness will be connected to the vehicle's 7-way trailer connector which is mounted to the hitch or bumper at the rear of the vehicle. The vehicle harness will have a similar connector with a mating fit to one of the connectors on the 5th wheel harness.

2. Disconnect the 7-way connector from the vehicle wiring harness by carefully releasing the locking clip and gently pulling the connector apart while holding down on the connector locking latch. **Note: Be careful not to pull connector apart using the wiring, as this could cause damage.**

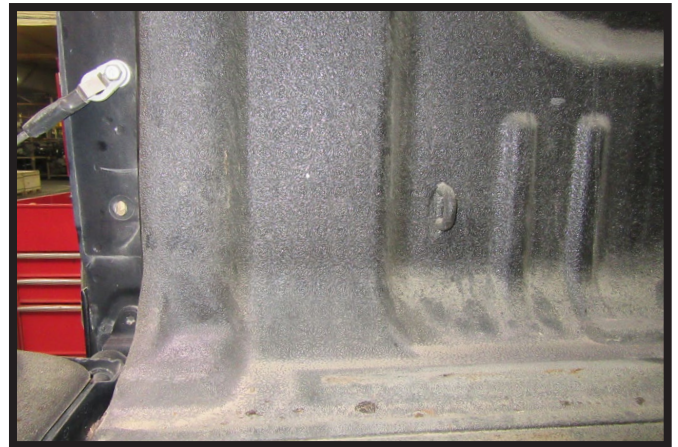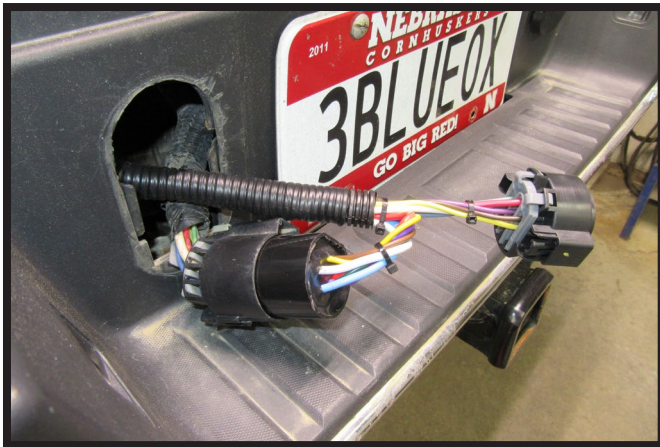

3. Attach provided harness into the vehicle's wiring harness connector, and into the rear of the factory 7-way socket. Insert fully to engage the locking tab. Return the locking clip to original position.

4. Locate a convenient mounting point (usually on the driver's side between the rear post and the wheel well area) and route the harness to this location. **Note: Be sure the harness has enough slack to prevent binding or pinching.**

BX88356
5th Wheel Wiring Kit
Installation Instructions



5. Using a hole saw, drill a 2-1/8" hole in the desired location in the sidewall. With a file, smooth the edges of the hole for a better fit of the harness and connector.




6. Route the extension harness connector up from under the body through the hole drilled in step 5. Insert the harness connector into the rear of the provided 7-way socket, pressing together to fully engage the locking tab.



7. Position the 7-way connector into the 2-1/8" drilled opening from step 5. Using the four (4) connector screw holes as a guide, drill four (4) 7/64" mounting screw holes.
8. Align and attach the 7-way connector to the vehicle using provided accessory bag complete with four (4) screws. Place provided washers in between the screw and front of the 7-way drill hole, this will prevent the screw from slipping into the hexagonal hole.

BX88356
5th Wheel Wiring Kit
Installation Instructions

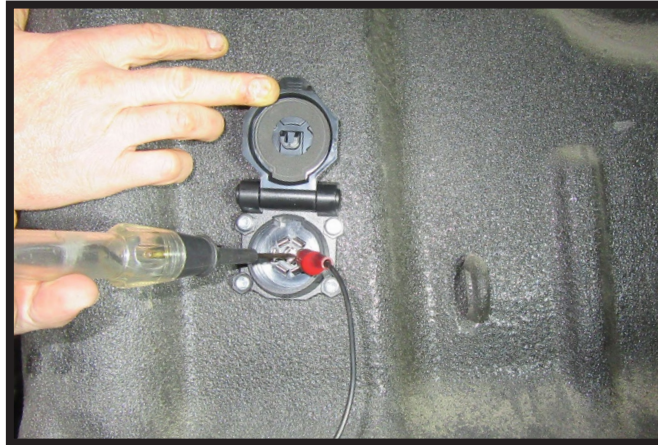

9. Confirm harness operation with a test light or by using a properly equipped trailer. Secure the extension harness cable to the vehicle using the cable ties provided.

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer care team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2012 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com