




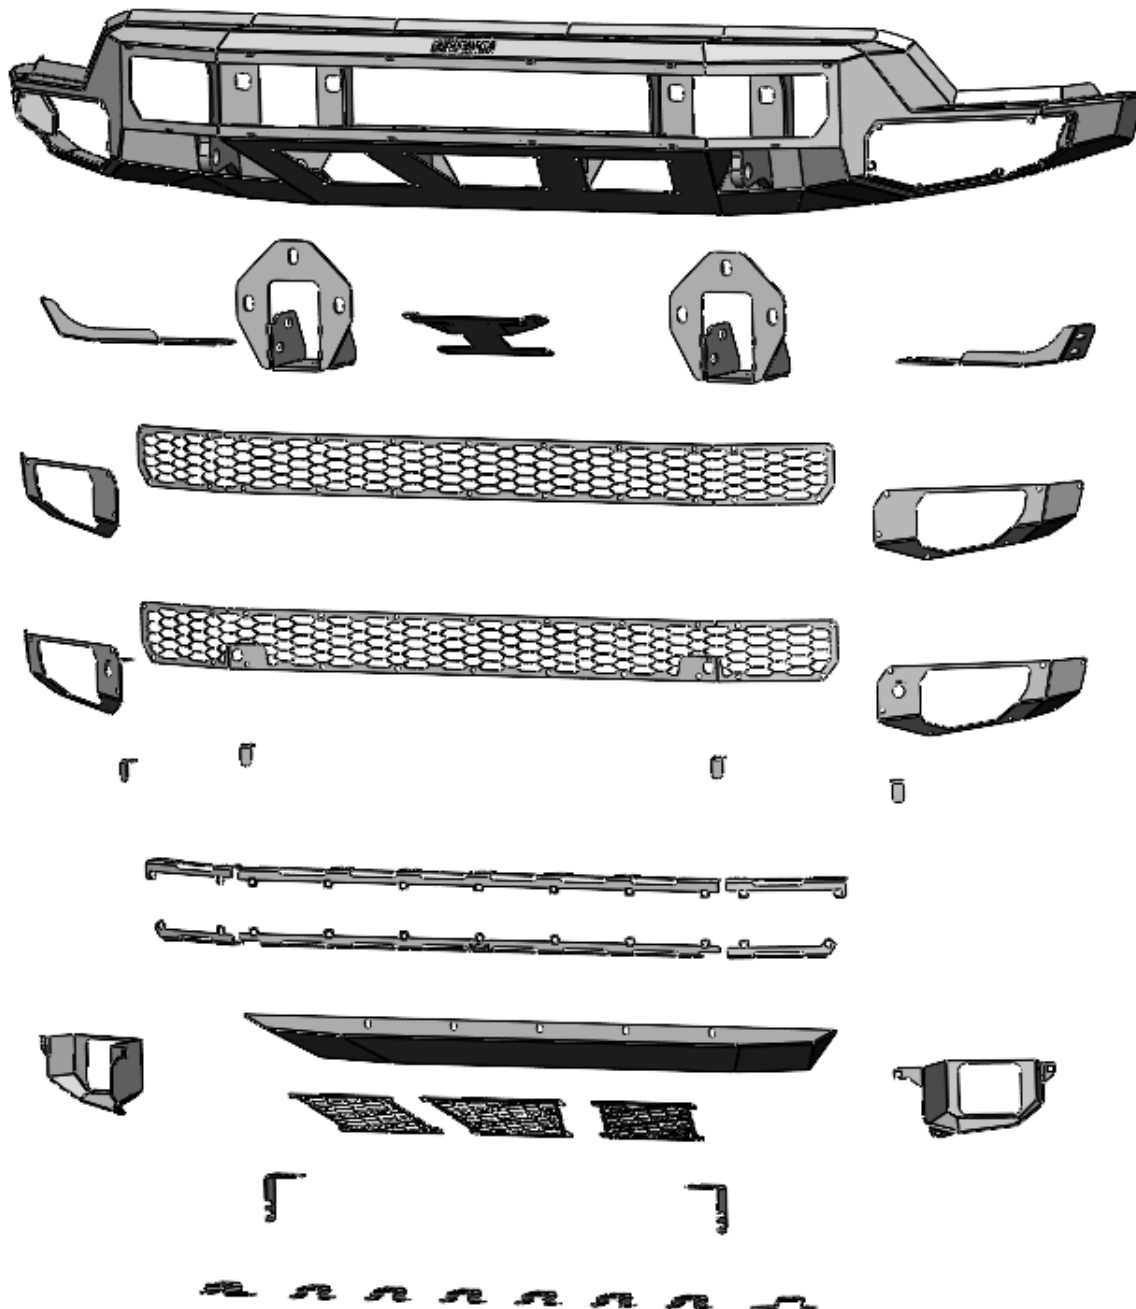


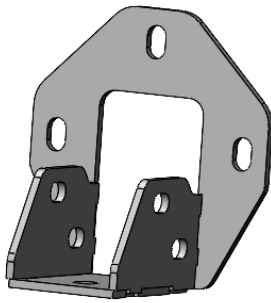


Truck Mounts x2

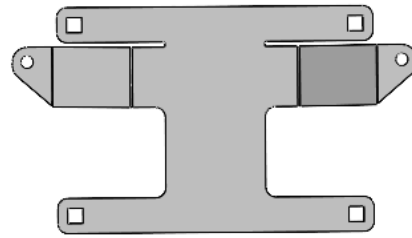


**License Plate
Bracket**

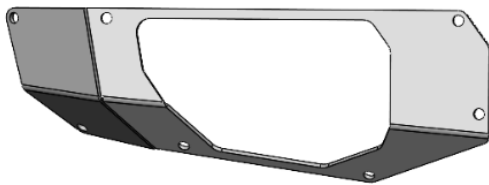


**Passenger Side Fog
Light Plate (No Sensor)**

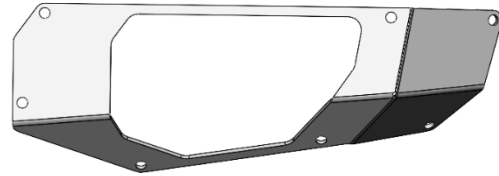


**Driver Side Fog Light
Plate (No Sensor)**

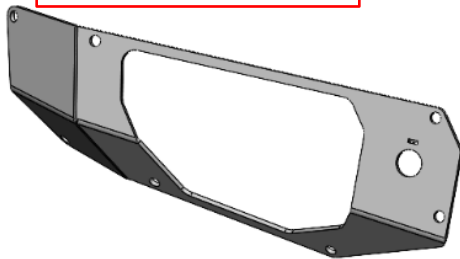


**Passenger Side Fog
Light Plate (Sensor)**

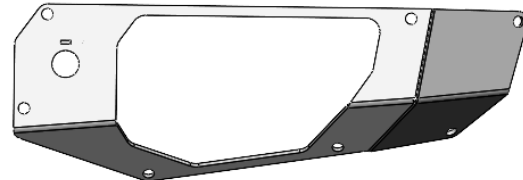


**Driver Side Fog Light
Plate (Sensor)**

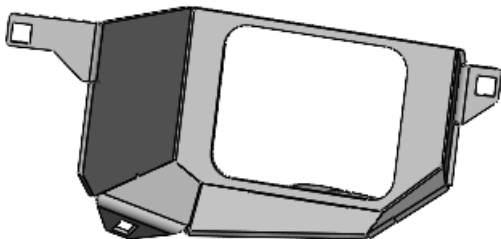


**Passenger Side Fog
Light Bucket**

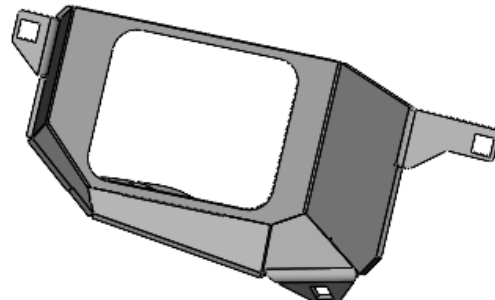


**Driver Side Fog Light
Bucket**

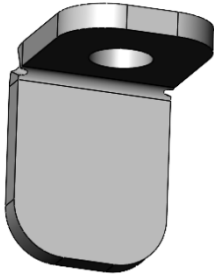


Sensor Tabs x4

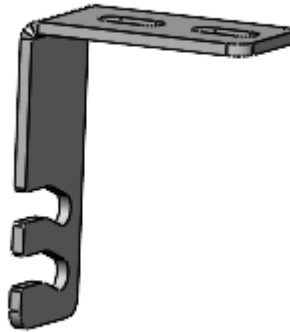


**Passenger Side
Light Bar Bracket**

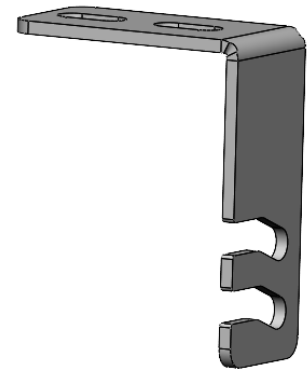


**Driver Side Light
Bar Bracket**

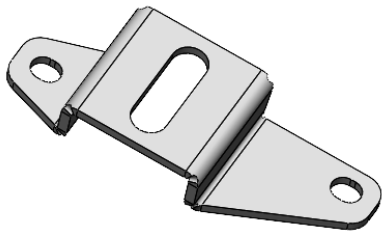


**Passenger Side Cube
Light Bracket**

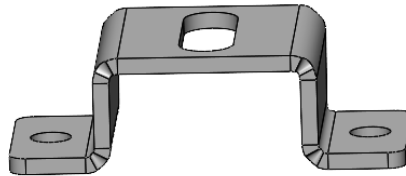


**Center Cube Light
Bracket x6**

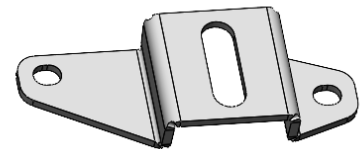


**Driver Side Cube
Light Bracket x4**

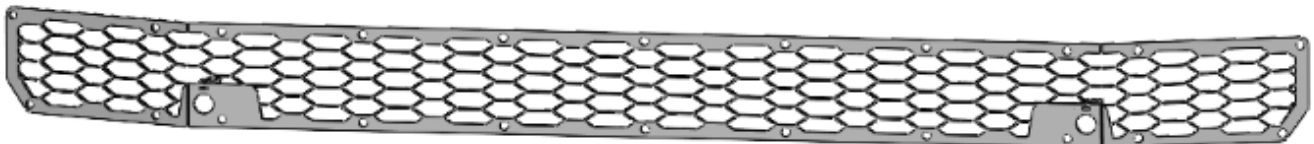


Center Mesh (Sensor)

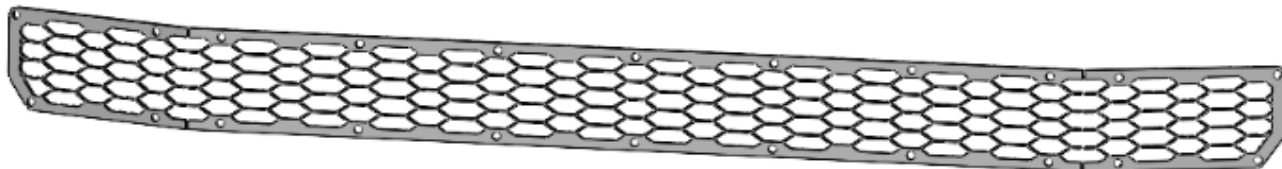

Center Mesh (No Sensor)

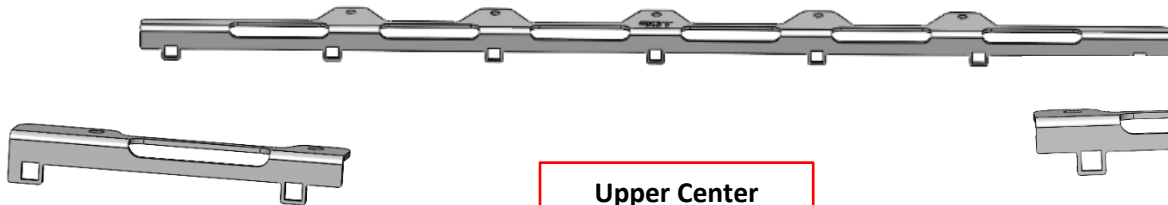

**Upper Center
Mesh Mount**




**Upper Passenger Side
Mesh Mount**




**Upper Driver Side
Mesh Mount**




**Lower Center
Mesh Mount**




**Lower Passenger Side
Mesh Mount**




**Lower Driver Side
Mesh Mount**

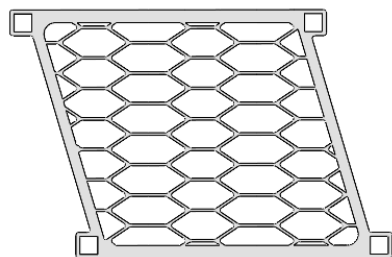


**Passenger Side Air
Dam Mesh**

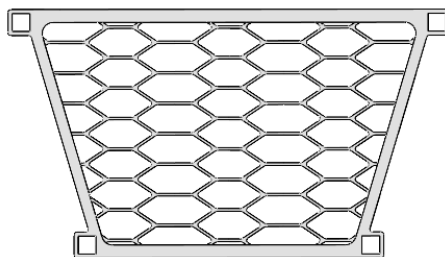

**Center Air Dam
Mesh**

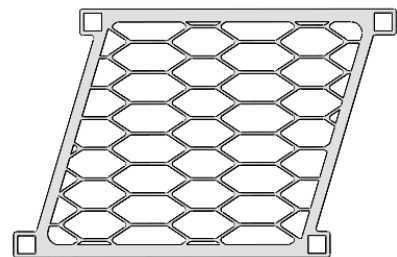

**Driver Side Air
Dam Mesh**

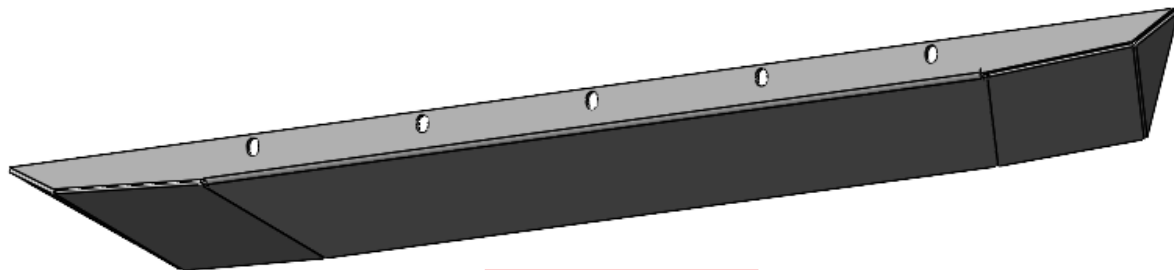


Skid Plate


HARDWARE

<u>Freedom Front License Plate</u>	<u>Qty:</u>
Plastic License Plate Nuts	4
#14 x 5/8" Zinc License Plate Screw	4
<u>Freedom Front Light Bar and Mesh (Including Air Dam)</u>	<u>Qty:</u>
1/4-20 x 5/8 Long, Stainless Steel SBHCS	60
1/4-20 Hex Grade 5 Serrated Flange Nut, Stainless Steel	26
1/4-20 (.093-.126: Panel Range) Zinc Electroplate Spring Steel Cage Nut	34
<u>Freedom Front Fog Light Assembly</u>	<u>Qty:</u>
1/4-20 x 5/8 Long, Stainless Steel SBHCS	14
1/4-20 (.093-.126: Panel Range) Zinc Electroplate Spring Steel Cage Nut	14
<u>Freedom Front Wing Brace</u>	<u>Qty:</u>
3/8" – 16 x 1" Yellow Zinc Grade 8 Hex Bolt	4
3/8" Washer, Grade 8 Zinc-Yellow	8
3/8"- 16, Grade 8 Steel Serrated Flange Nut Zinc	4
<u>Freedom Front Sensor Brackets</u>	<u>Qty:</u>
1/4-20 x 5/8 Long, Stainless Steel SBHCS	4
1/4-20 Hex Grade 5 Serrated Flange Nut, Stainless Steel	4
<u>Freedom Front 3x3 Cube Light Mounts</u>	<u>Qty:</u>
1/4-20 x 5/8 Long, Stainless Steel SBHCS	16
1/4-20 Hex Grade 5 Serrated Flange Nut, Stainless Steel	16
<u>Freedom Front Mount Kit 2020-24 CHEVY HD</u>	<u>Qty:</u>
1/2" Washer, Grade 8 Zinc-Yellow	10
1/2"-13 x 1-1/2" Zinc Tear Drop Bolt (Hex)	10
1/2"-13 Grade 8 Steel Serrated Flange Nut Zinc	10
<u>Freedom Front Skid Plate</u>	<u>Qty:</u>
5/16"-18 X 3/4", SS, BHSCR	5
5/16"-18, FLANGE NUT	5
5/16"-18 Zinc Grade 8 Serrated Hex Flange Nut	5

STYLE OPTIONS

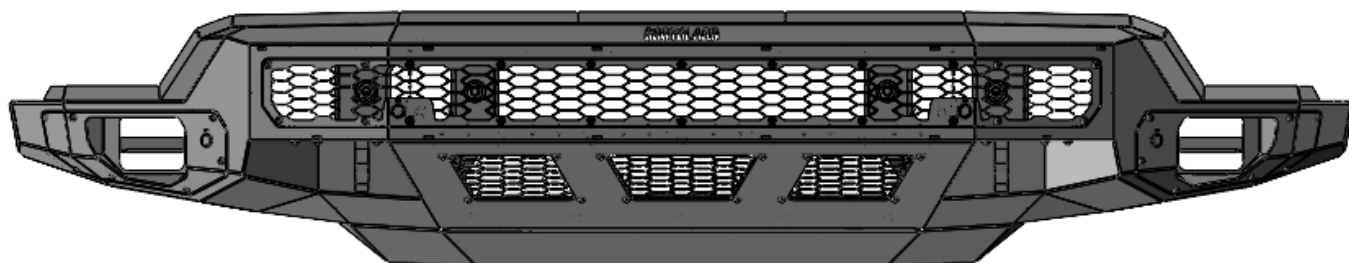

Base

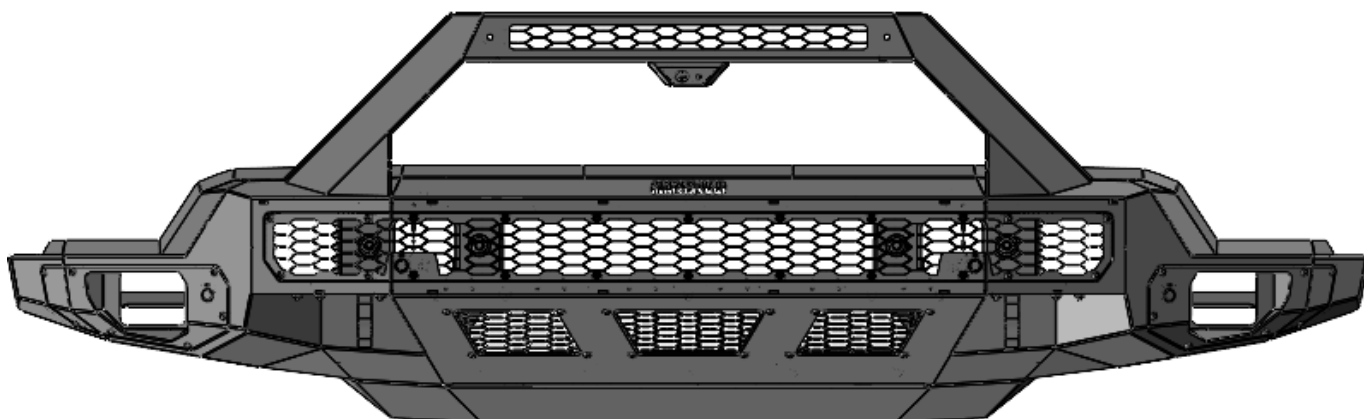

Sport

CENTER LIGHT BAR CONFIGURATION *(Optional)*



Rigid 130313 E-Series - 30" Bar - Spot/Flood Combo Pattern





Rigid 130313 E-Series - 30" Bar - Spot/Flood Combo Pattern





Rigid 202113 D-Series Pro Cube - Flood Pattern - Surface Mount

1. 3x3 cube lights can be installed using the slotted holes in the brackets pictured in green.
2. 4x4 cube lights do not require mounting brackets.
3. Also, light bar mount brackets (pictured in yellow) are included to allow the use of a 30" light bar.

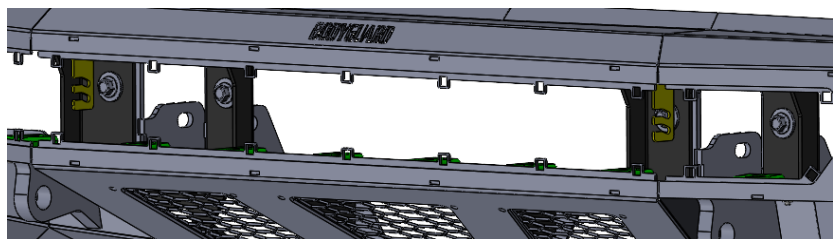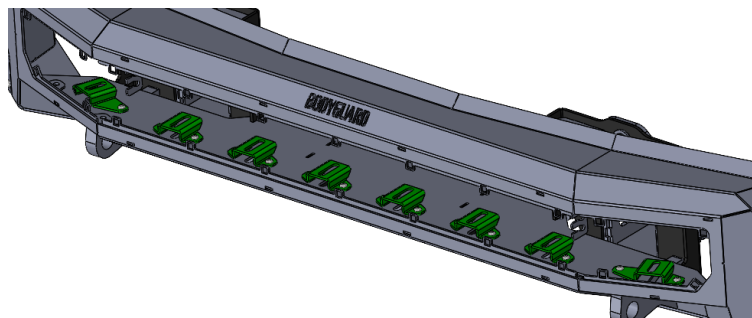

FOG LIGHT INSTALLATION



1/4-20 Zinc Electroplate Spring Steel Cage Nut (6)

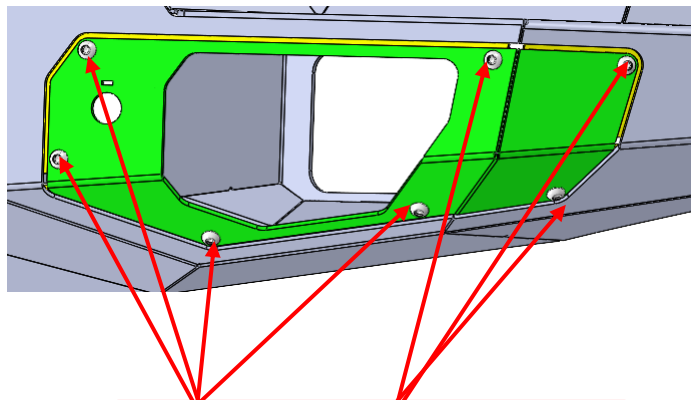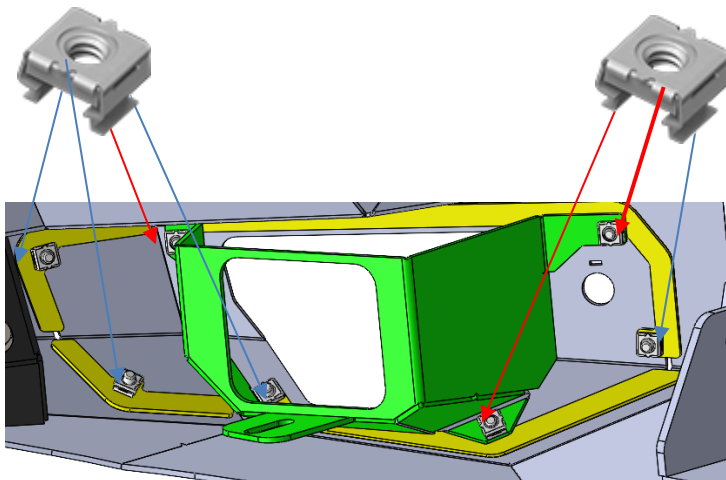

(6) - 1/4-20 x 5/8 Long, Stainless Steel SBHCS

PARKING SENSOR INSTALL

1. Then install the sensor tab over the sensor shown below. Slide the sensor and sensor tab into position and tighten down with a 1/4"-20 x 3/4" BHCS. Plug the parking sensors into the harness and let the center mesh and fog light trim rings loosely hang down.

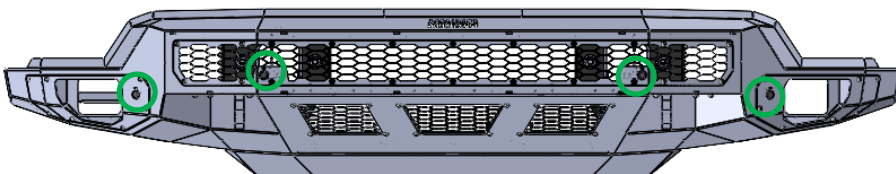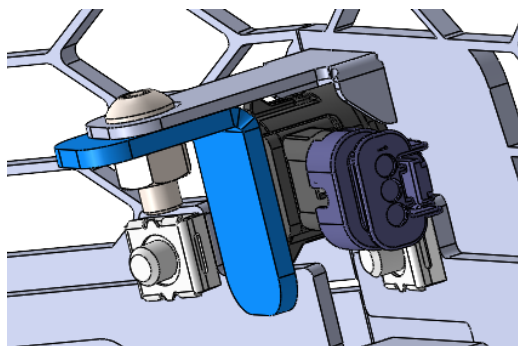


(4) - 1/4-20 x 5/8 Long, Stainless Steel SBHCS



(4) - 1/4-20 Hex Grade 5 Serrated Flange Nut, Stainless Steel

MESH PLATE INSTALL


1. Mount brackets for the center mesh are bolt-on components. They should be installed with a total of 18 1/4-20 x 5/8 Long, Stainless Steel Bolts and hex nuts.
2. Install cage nuts into the appropriate holes in the air dam mesh components (12 nuts) and center mesh mount brackets (18 nuts).
3. Use provided 1/4-20 x 5/8 Long, Stainless Steel Bolts (30) to secure mesh plates.

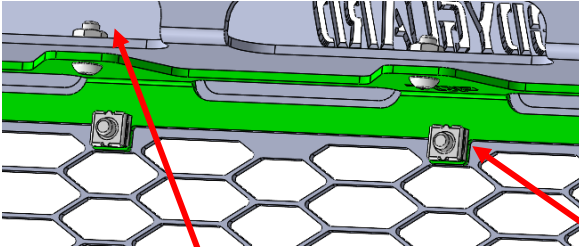

(18) - 1/4-20 x 5/8 Long, Stainless Steel SBHCS



(18) - 1/4-20 Hex Grade 5 Serrated Flange Nut, Stainless Steel

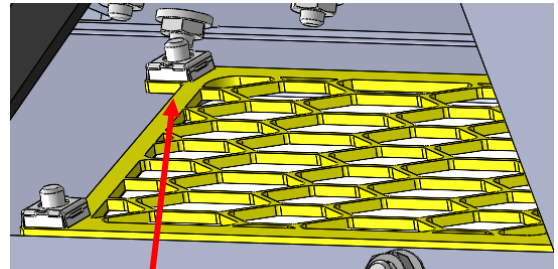


(30) - 1/4-20 (.093-.126: Panel Range) Zinc Electroplate Spring Steel Cage Nut



(30) - 1/4-20 x 5/8 Long, Stainless Steel SBHCS


LICENSE PLATE INSTALL

1. Use the top (2) 1/4"-20 Cage Nuts 1/4"-20 x 5/8" button head screws from the Center Air Dam Mesh to secure the license plate bracket to the bumper.
2. Secure the license plate to the bracket using (4) #14 x 5/8" Zinc License Plate Screw and plastic license plate nuts.

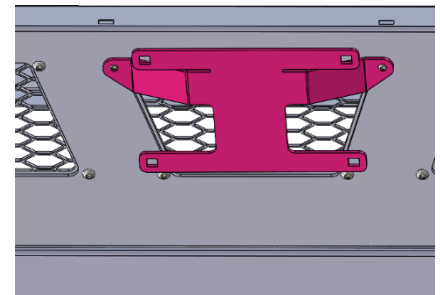

WING BRACE INSTALL


1. Attach wing braces as shown using the same process used for mesh plates. **(2) 3/8" - 16 x 1" Yellow Zinc Grade 8 Hex Bolt** washers and hex nuts per side.
2. Factory hardware will secure the wing brace to the frame of the truck.

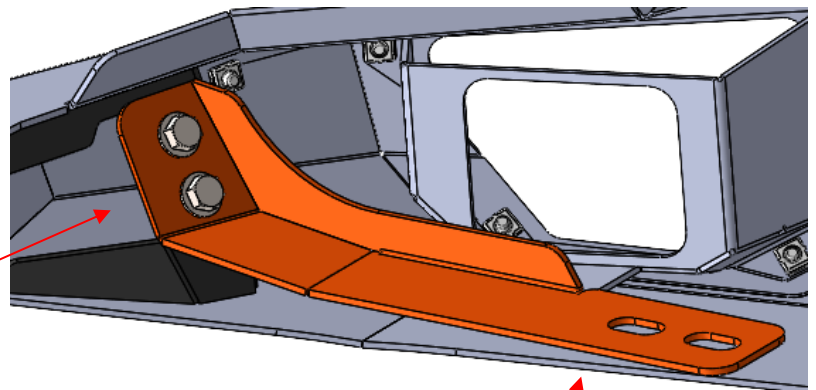

Factory bolts
GM
#11569664


SPORT BAR CAMERA INSTALL *(For optional sport bar only)*

1. Install the camera pod to the sport bar using (2) 1/4"-20 cage nuts and (2) 1/4"-20 x 3/4" BHCS. Then install the camera and camera washer into the pod and secure with the camera bracket using (2) 1/4"-20 BHCS and flange nuts.
2. Then install the sport bar mesh using (2) 1/4"-20 x 3/4" BHCS and flange nuts. Then install your light bar using the light bar brackets if applicable.

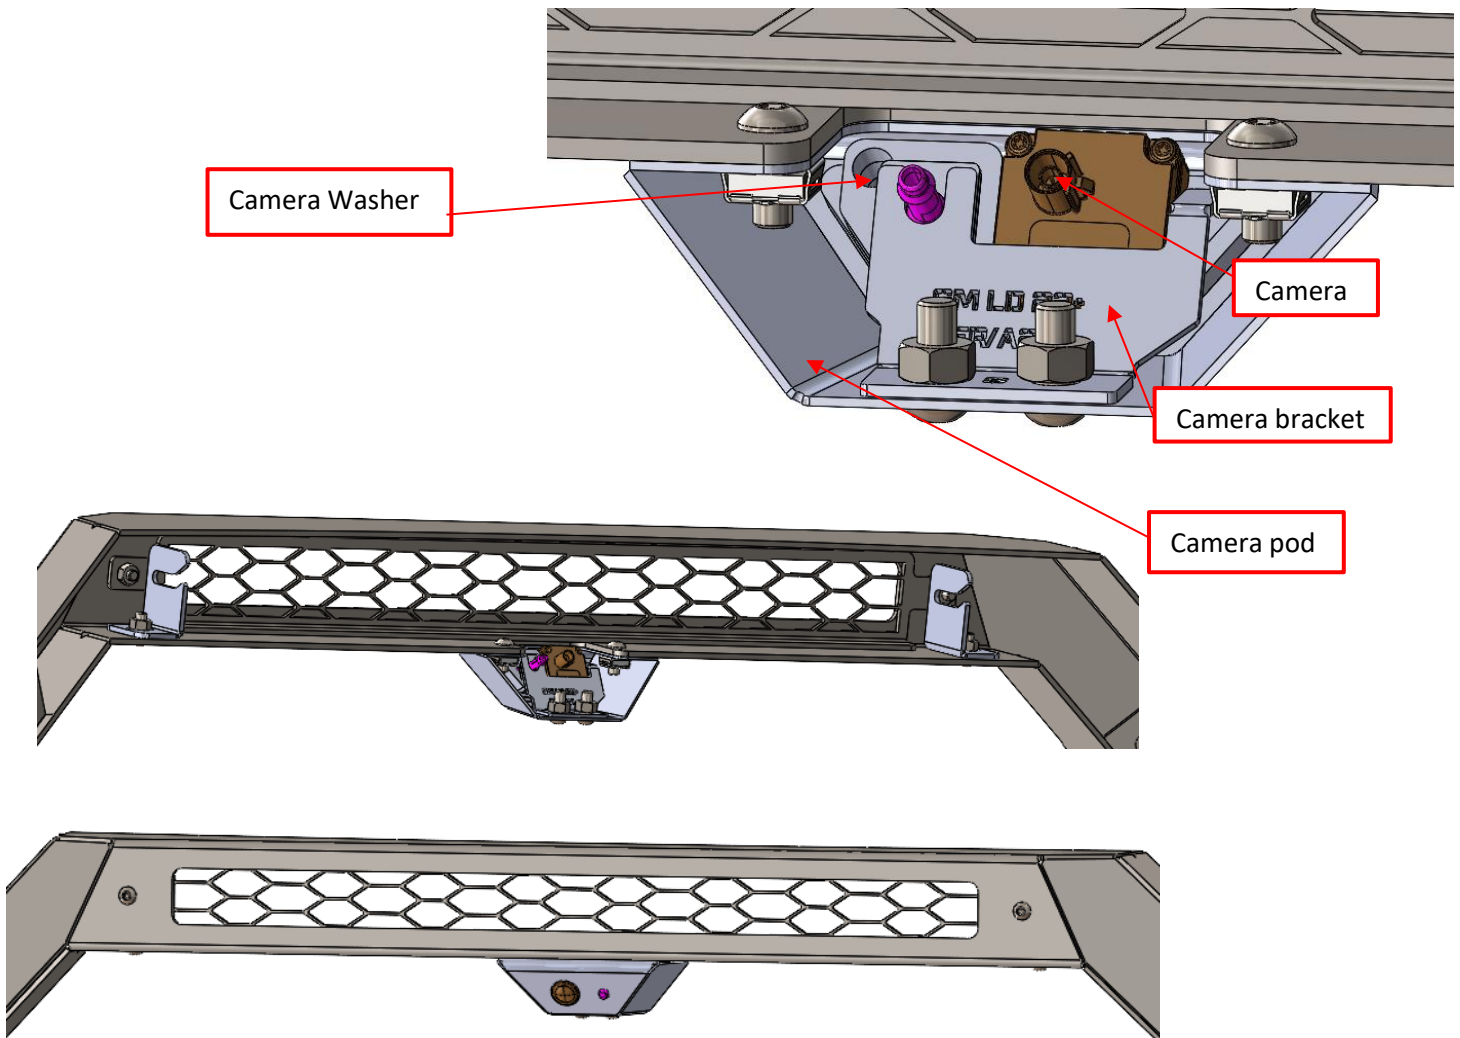

SKID PLATE INSTALL



1. Install the skid plate using (5) 5/16"-18 X 3/4", SS, BHSCR, flange nuts and washers.

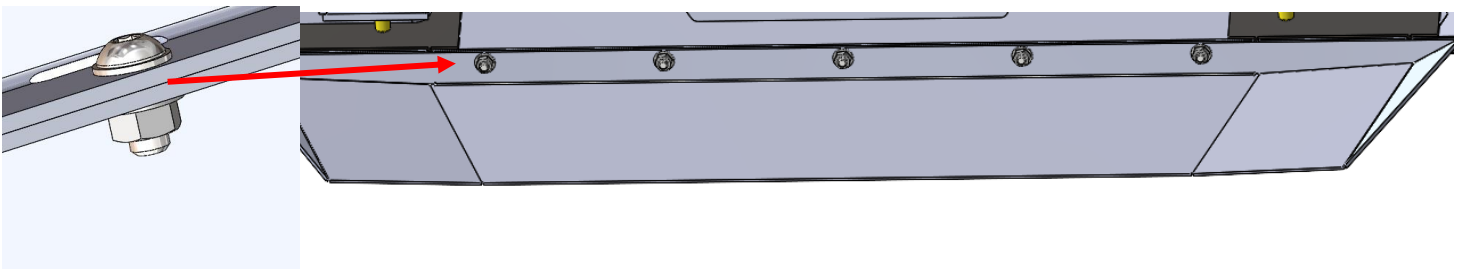


BUMPER INSTALL

1. Attach the truck mounts with the 1/2"-13x 1-1/2" Zinc Tear Drop Bolt (Hex), leaving enough space to adjust as needed.


Tear Drop Bolts

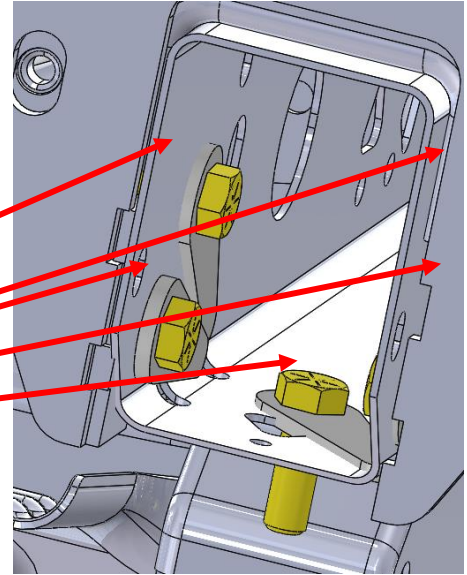

2. Attach the bumper with the OEM hardware, leaving enough space to adjust the bumper as needed into position. Using a tape measure, adjust the bumper vertically and horizontally to the desired body gaps. Once the bumper is lined up, tighten all hardware for the bumper and the mounts. Using jack stands or an additional person to help support the bumper is recommended.

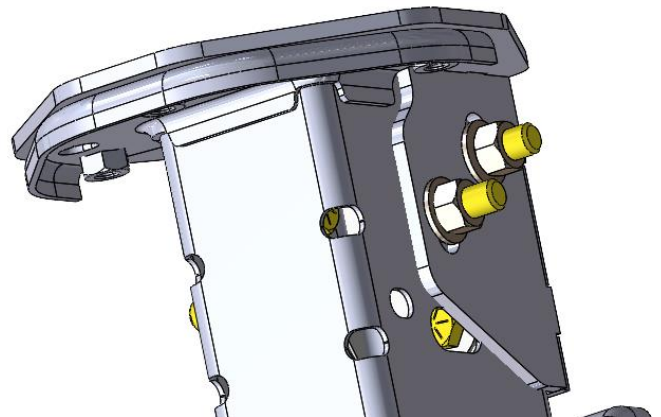

**Factory bolts
GM #11569664**

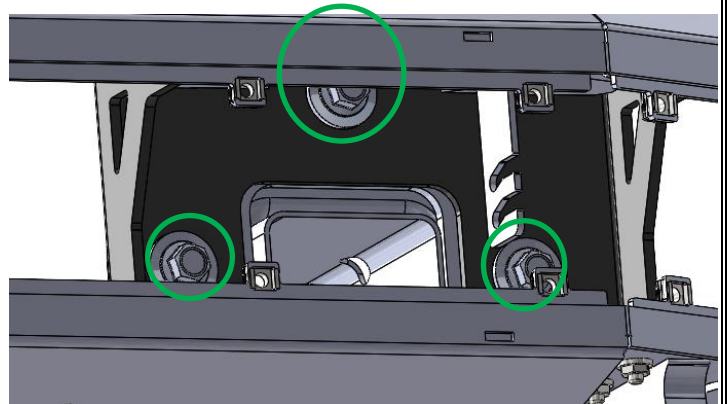

SAFETY

THE SAFETY OF YOU AND OTHERS IS VERY IMPORTANT TO US!

To minimize this risk and make an informed decision about safety, it is important that you carefully read and follow the installation instructions we have provided.

We urge you to use your own good judgment and allow plenty of time for installation.

HAZARD CHECKLIST

1. Always wear personal protective equipment (PPE) such as: protective eye wear, gloves, close toed shoes, etc.
2. We recommend that you use a certified mechanic or shop for professional installation.
3. Always set emergency brakes on the vehicle and use tire blocks to ensure vehicle stabilization.
4. Use caution when lifting, we recommend the use of equipment to help lift bumpers into place.
5. Use caution when using power tools such as air ratchet, etc.
6. Take caution when installing wiring.
7. Perform regular inspections of hardware, bolts, brackets, etc.
8. Rigid light brackets are specifically designed to fit Rigid lights, we do not guarantee off brand fitment.
9. Our winch mount is designed for Warn and Superwinch products. We do not guarantee off-brand fitment.

USE & RISK

Bodyguard Products LLC is not responsible for damage to our products, or other subsequent damage that might occur because of misuse or improper installation. While we do manufacture products that appear stronger than factory parts, our products should not be viewed or relied upon as life-saving devices in the event of a collision or rollover. We make no claims relating to airbag compatibility, crashworthiness, or sturdiness. It is the customer's responsibility to check with the vehicle manufacturer or auto dealer regarding airbag compatibility and automobile manufacturer's warranty before installing our products.

FINISHING UP

- Install shackles.
- Confirm that all hardware is tightened, and everything is secure.
- Secure wiring harnesses for lights and sensors.
- Test all lighting and wiring before using vehicle (fog lights, sensors, etc.).

MAINTENANCE

- 1) Periodically check that all hardware is tightened and that all wiring and connections are secure.
- 2) Periodically check that all sensor plugs are secure.
- 3) Routinely wash bumper to maintain the powder coat finish.

FEEDBACK

We'd love to hear from you!

Please send your pictures, testimonials, comments, or suggestions to us by email at info@bodyguardbumpers.com. We frequently use customer pictures for brochures and marketing materials, and we always welcome customer feedback to ensure quality improvements within our company. Thanks for your purchase; we appreciate your business very much!

Where **STRENGTH** Meets *Style!*™



@BodyguardBumpers