

# **BORGESON**

***Steering You Forward***

## #802411 Ford 292/312 Y-Block P/S Pump Bracket


### **Installation:**

Attach the P/S pump to the bracket with either the 3/8 or M10 bolts depending on the P/S pump you are using. The bracket mounts to the back of the P/S pump. You may need to remove existing mounting studs.

Attach the bracket to the water pump with one existing bolt and the stud provided.

We ship this kit with two nuts so you can install the tapered stud into the water pump without damaging the threads. It only needs to be installed with one nut after the stud is installed into the water pump. The other smaller hole in the bracket corresponds with the existing bolt in the face of the water pump.

**NOTE:** The pump will not be sealed and leak free until it is adjusted and tightened into final position. The force of the bracket against the reservoir is required to properly seal.

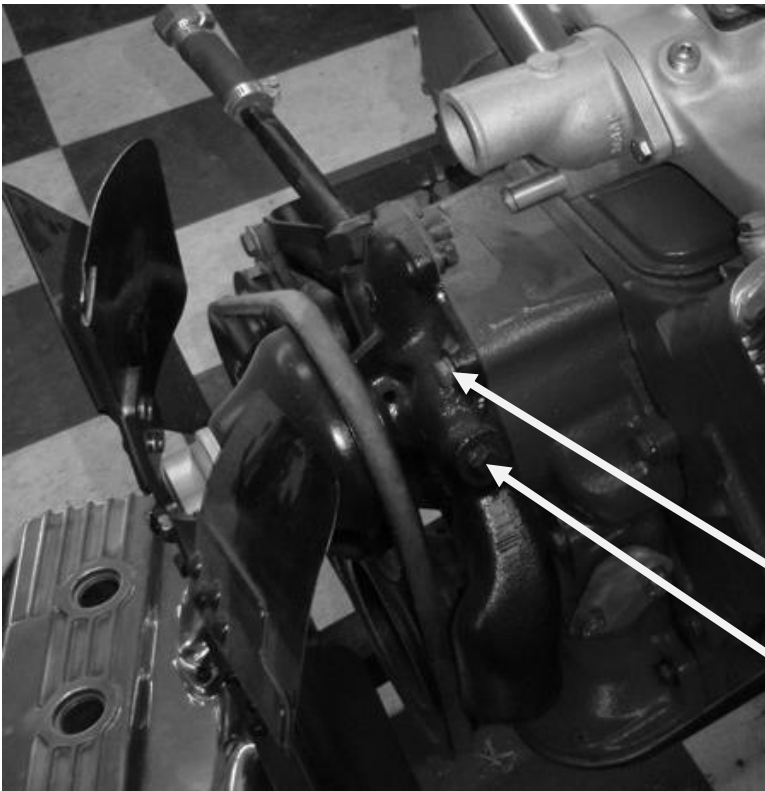

Borgeson Universal Co., Inc.  
9 Krieger Dr. Travelers Rest, SC 29690  
[www.borgeson.com](http://www.borgeson.com)

09/04/2015